


TANIA

LUXO|Outdoors

Outdoor Dining Chair

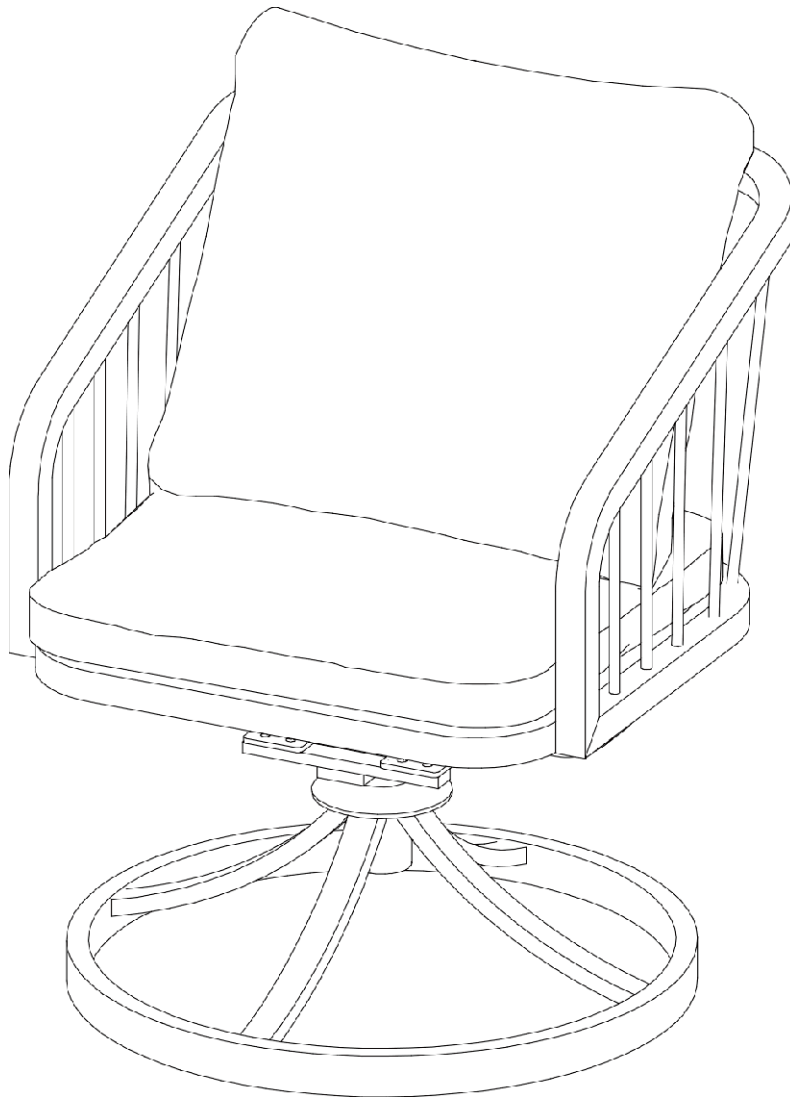


PLEASE USE ALLEN KEY PROVIDED TO ASSEMBLE THE PRODUCT. DO NOT USE POWER TOOLS.



THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend **15 minutes** in reading these tips before assembling the unit. Strictly follow the instructions step by step.

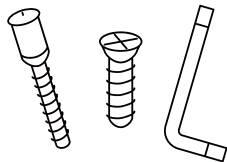


Tool Check

Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

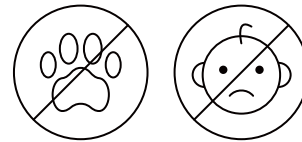


Safety Check

Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

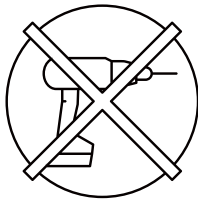

Do Not Use Power Tool

Do not use any power tool for assembly as it may damage the unit and make it unsafe to use. Use of any power tool will invalidate any claim you may have.

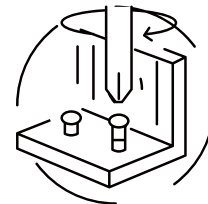


Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

HARDWARE LIST

Please check if you have all the fittings and tools listed below.

 A



M6x28mm BOLT
12 PCS

B



M6x35mm BOLT
12 PCS

C



M8x35mm BOLT
12 PCS

D



M6 WASHER
24 PCS

E



M8 WASHER
12 PCS

F



LOCK WASHER
12 PCS

G



NUT
12 PCS

H



M6 ALLEN KEY
1 PC

L




M8 ALLEN KEY
1 PC

J



SPANNER
1 PC

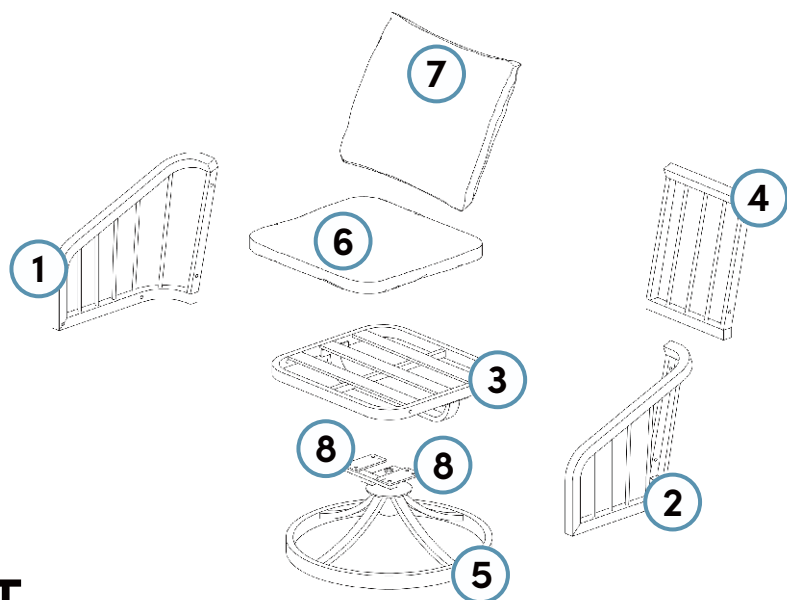


PARTS LIST



1 x3



2 x2

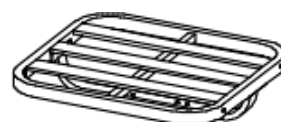

3 x3




4 x3



5 x3



6 x3

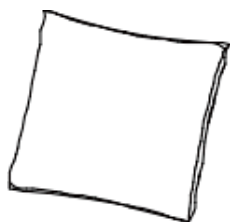


7 x3




8 x6

STEP 1

YOU WILL NEED		
A		x4
D		x4
H		x1

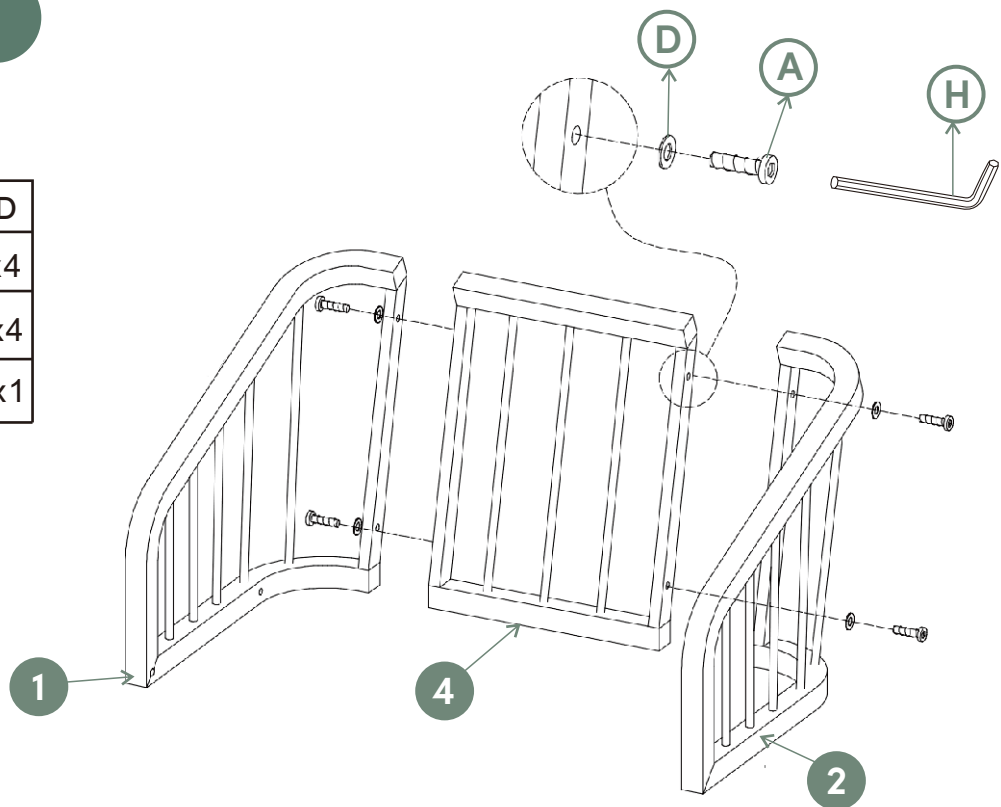

STEP 2

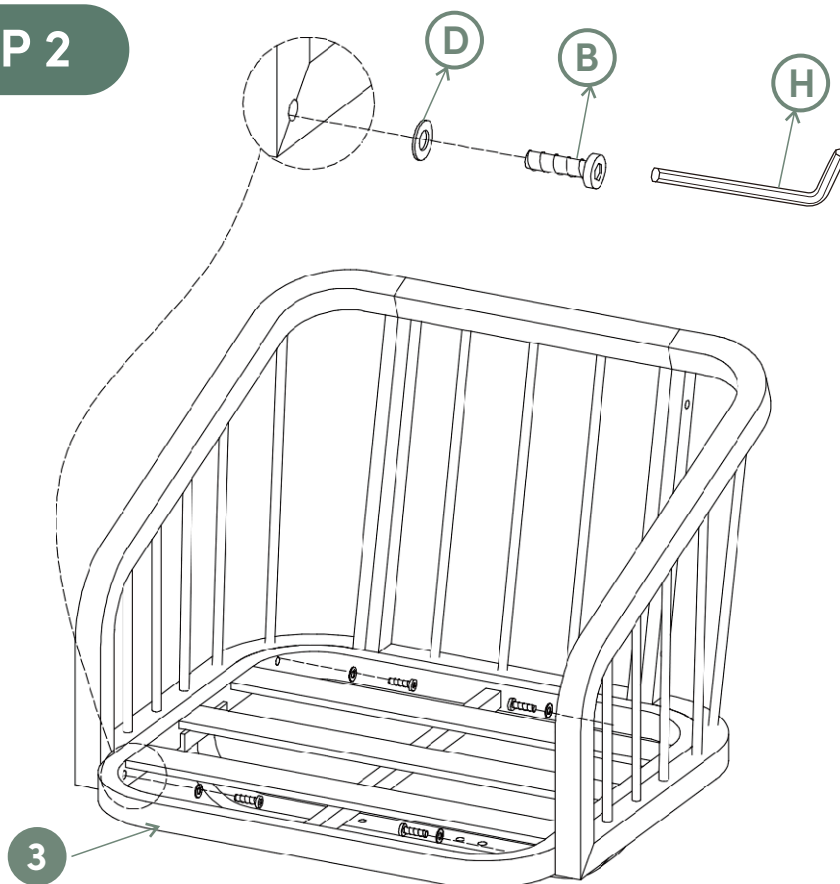


YOU WILL NEED		
B		x4
D		x4
H		x1


ASSEMBLY STEPS

STEP 3

YOU WILL NEED		
C		x4
E		x4
F		x4
G		x4
L		x1
J		x1

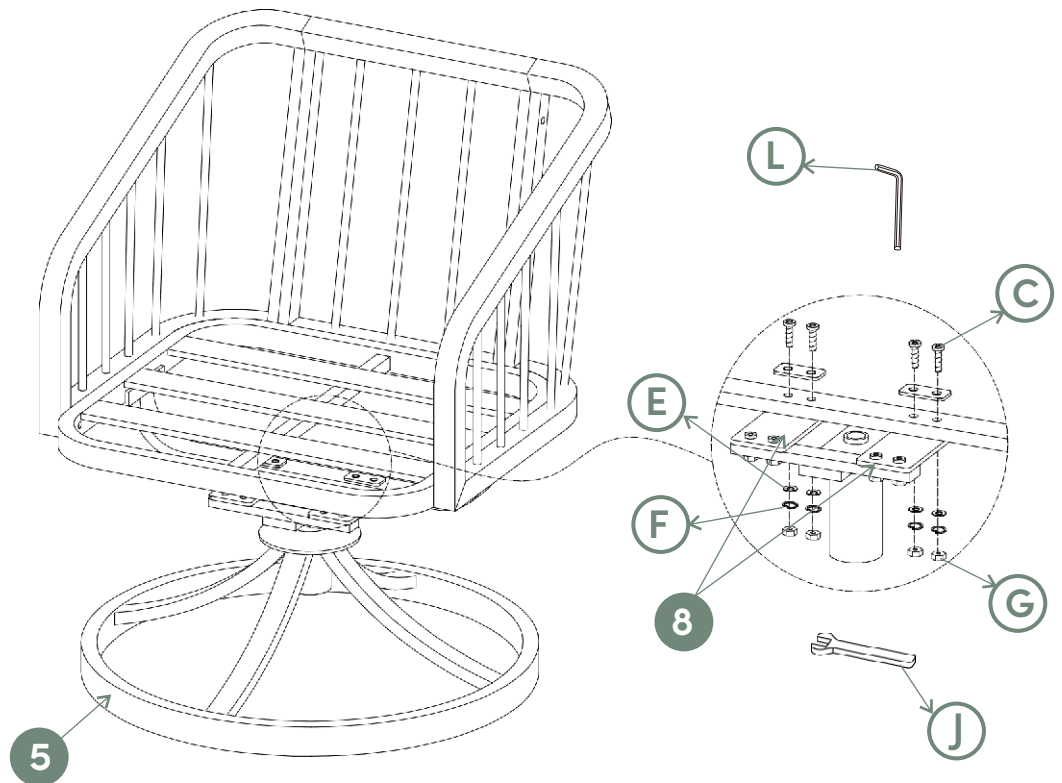

STEP 4


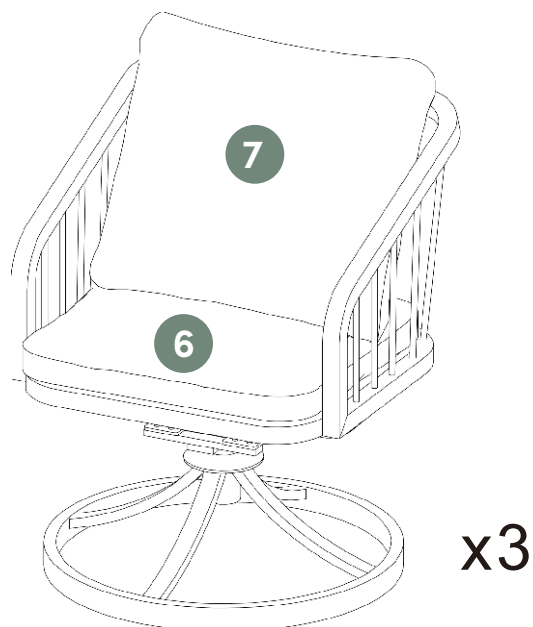


Recommendation: For optimal performance, apply lubricant to the turntable every six months to reduce wear and extend service life.

ASSEMBLY STEPS

GREAT JOB. YOU'RE DONE!

 To move the assembled unit, please lift it up and do not drag to avoid damaging the floor or breaking the parts.

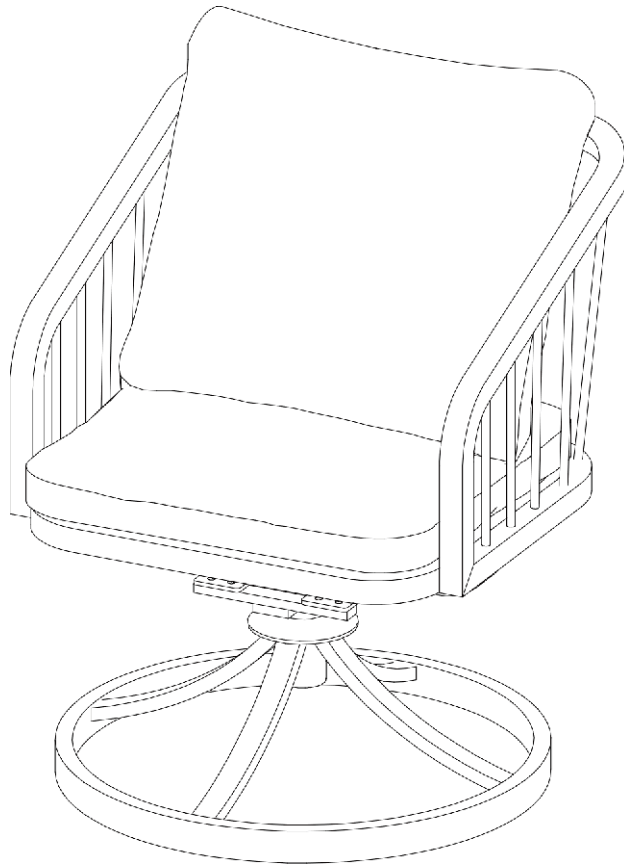

When you assemble this chair, please make sure all screws are fastened tightly. After one or two months, please make sure all screws are still tight.



Before using this chair, please check if the metal support legs under the chair are in an upright position. Ensure that they are always in an upright position.



Our dining chair can hold weight of up to 120kg. We don't suggest overloading it beyond its weight capacity.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Aluminium Furniture

Clean aluminum frames with a soft cloth and mild soapy water. Avoid abrasive cleaners or brushes to prevent surface scratches. During extreme weather, cover or store furniture indoors.

Temperature and Humidity

For product longevity, avoid prolonged exposure to direct sunlight.

Cushions

Regularly brush off dirt and debris with a soft-bristle brush. Spot clean stains promptly with a mild detergent and water solution. Cushion covers have zippers and are machine washable. Ensure cushions are fully air-dried to prevent mould & mildew growth before using or storing.

Avoid Excessive Weight

Don't overload the chair beyond its weight capacity.

***Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too!
Enjoy your outdoor furniture!***

For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Outdoors