 


HAMISH

LUXO|Furniture

200cm Entertainment Unit

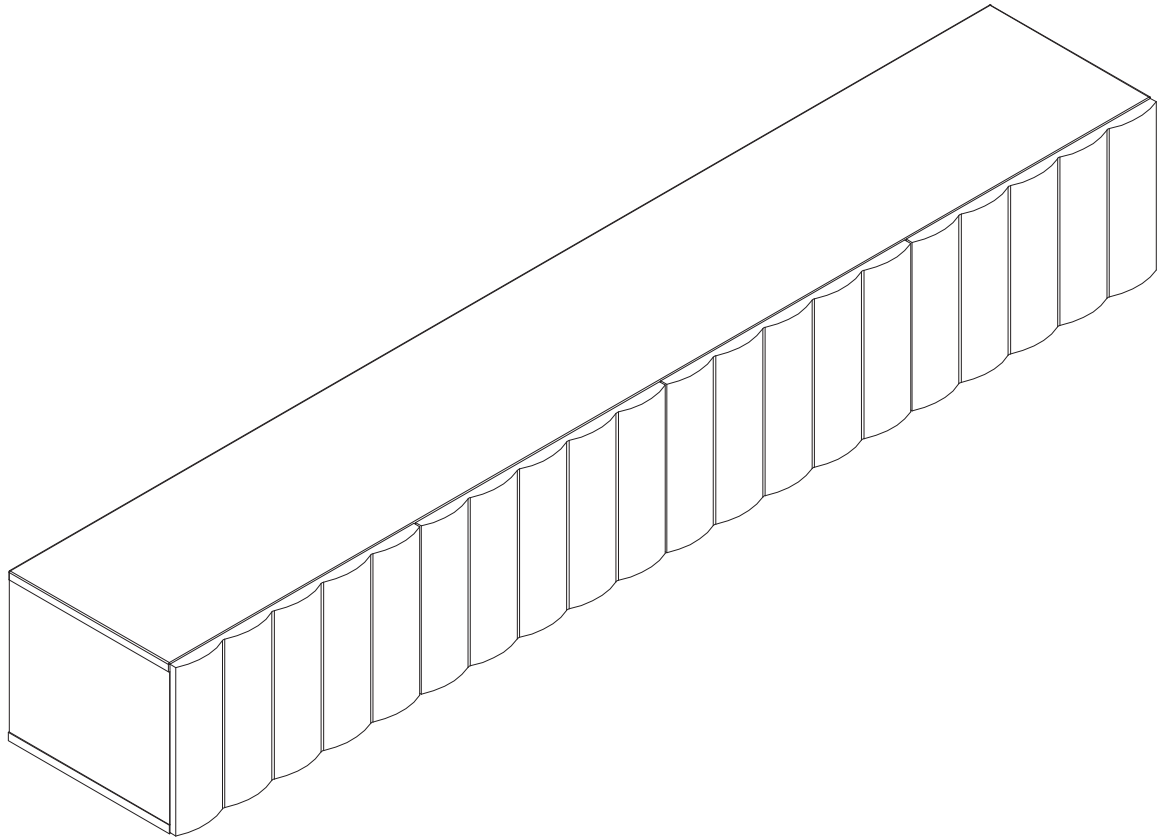

Assembly requires at least 2 persons



Extra tools you may need

 
We recommend the use of a power drill on a low-speed setting for quick assembly.



THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend **5 minutes** in reading these tips before assembling the unit. Strictly follow the instructions step by step.

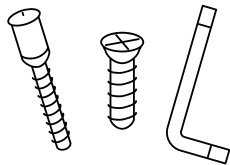

Tool Check

 Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

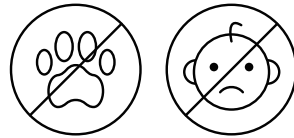


Safety Check

Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.



Use of Power Tool

 We recommend the use of a power drill on a low-speed setting for quick assembly.

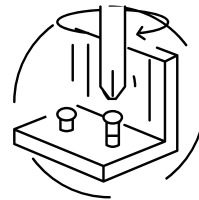


Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

HARDWARE LIST

Please check if you have all the fittings and tools listed below.

 (A)




M6x41mm CONNECTOR
26 PCS

(B)



M15x11mm CONNECTOR
26 PCS

 (C)




M8x40mm DOWEL
10 PCS

(D)



M20mm STICKER
26 PCS

 (E)



REBOUNDER
4 PCS

(F)



M3.5x14mm SCREW
40 PCS

(G)



M4x35mm SCREW
16 PCS

(H)



 
M5x50mm SCREW
10 PCS

(I)



BACK PANEL BUCKLE
16 PCS

(J)



300mm SLIDE RAIL
4 PCS

(K)



 
PLASTIC EXPANSION BOLT
8 PCS

(L)




M4x30mm SCREW
8 PCS

(M)




HANGING BRACKET
4 PCS

 
PARTS LIST

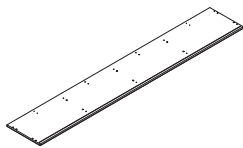


1 x1

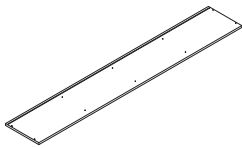 


2 x1

 


3 x1

 


4 x1

 


5 x2

 


6 x1

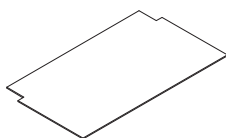 


7 x2

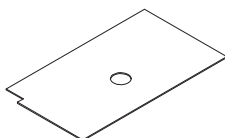 


7 x2

 


8 x4

 


9 x4

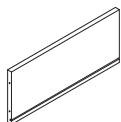 


10 x4

 


11 x4

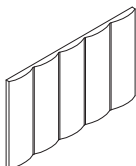 


12 x1

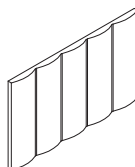 


13 x1

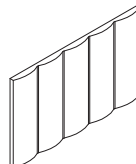 


14 x1

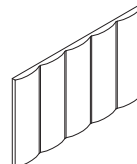 

15 x1

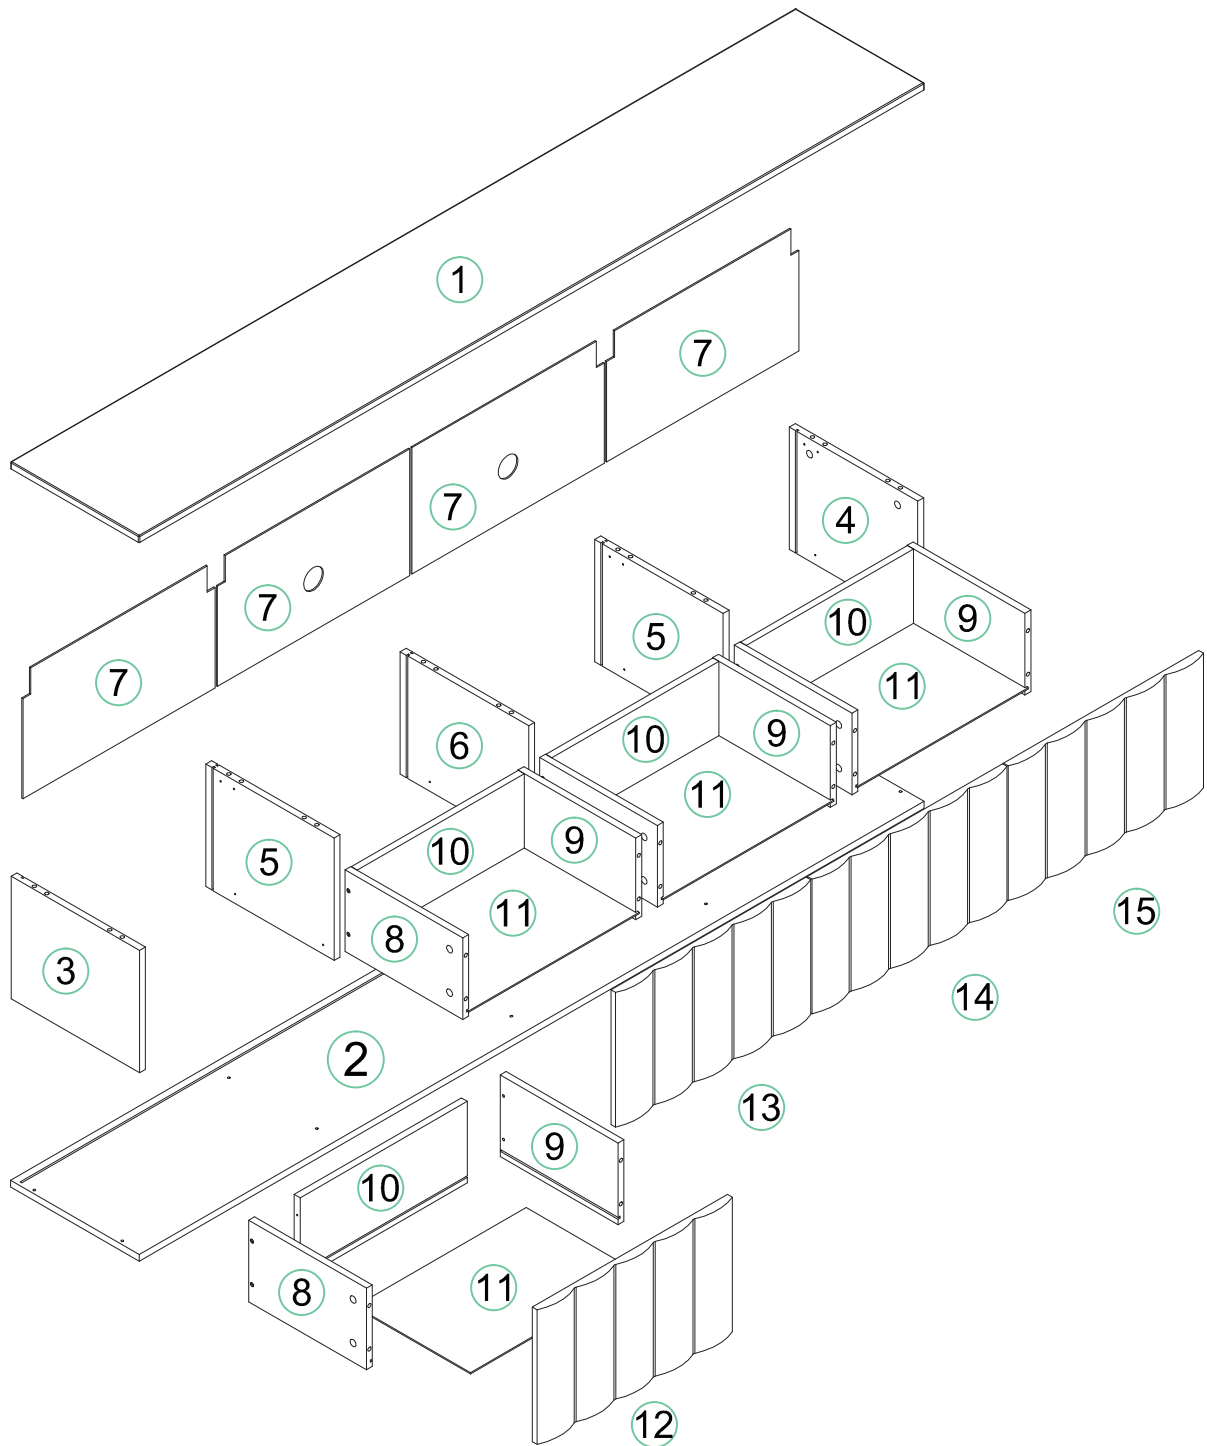 


 STEP 1

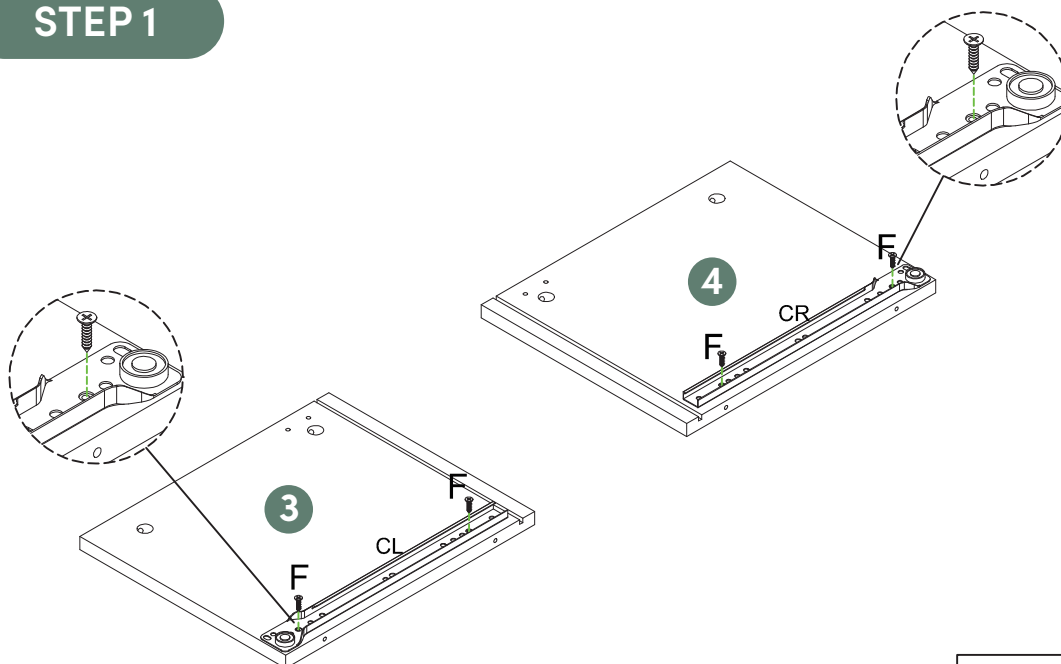

YOU WILL NEED		
F		x4
J		x1

 STEP 2

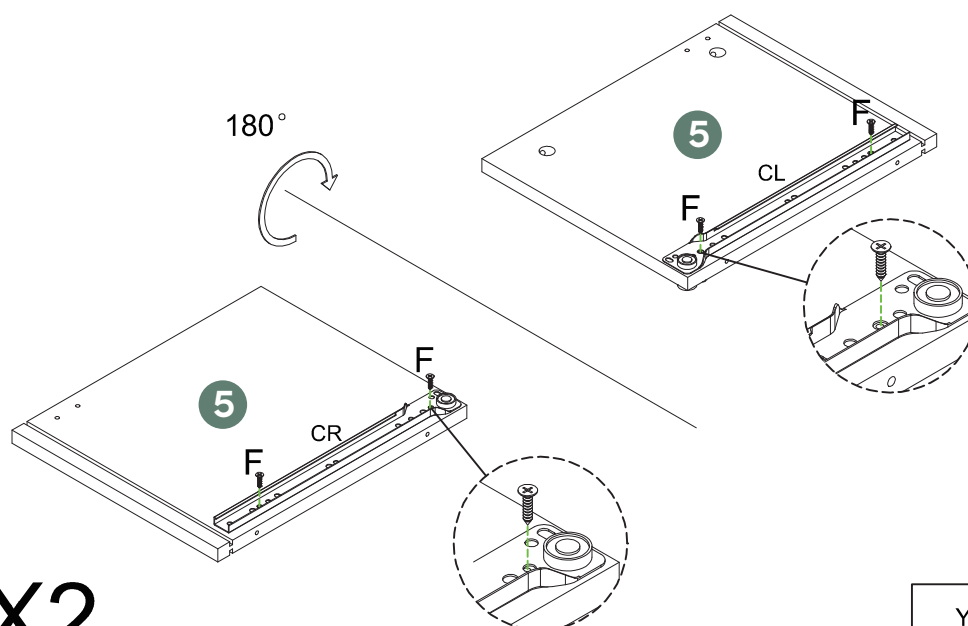


X2

YOU WILL NEED		
F		x8
J		x2


ASSEMBLY STEPS

 STEP 3

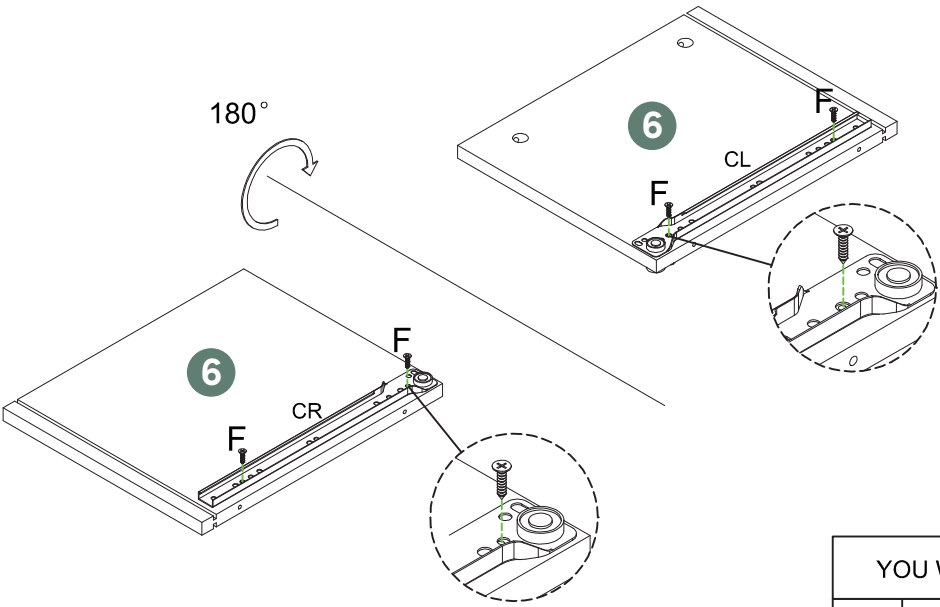

YOU WILL NEED		
F		x4
J		x1

 
STEP 4

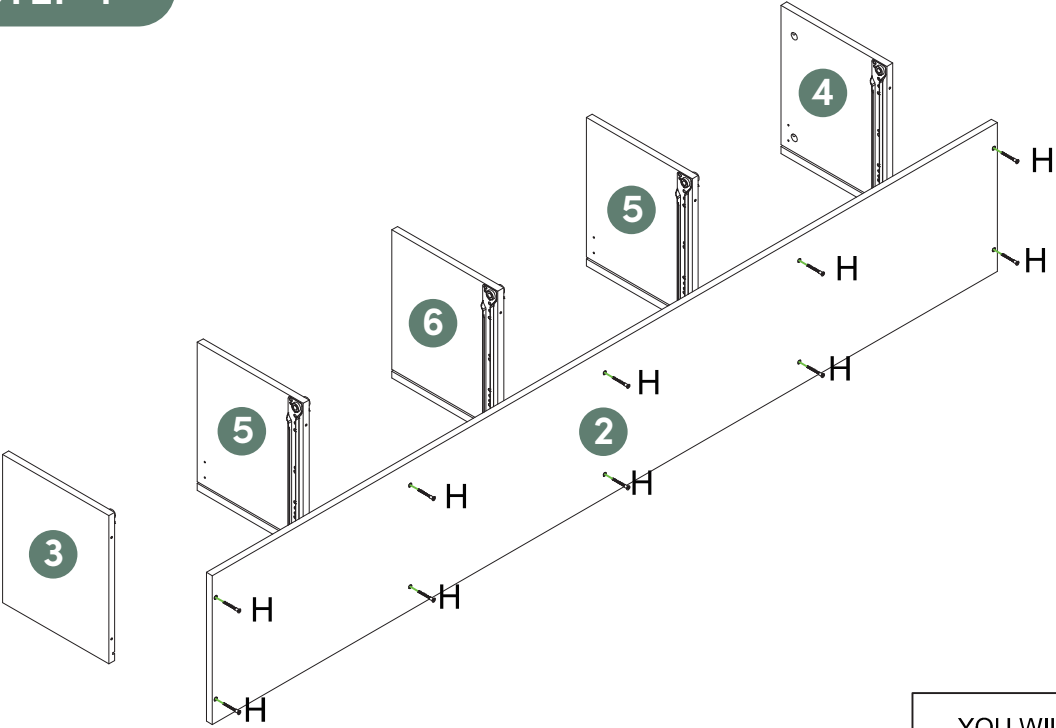


YOU WILL NEED		
H		x10

ASSEMBLY STEPS


 
STEP 5

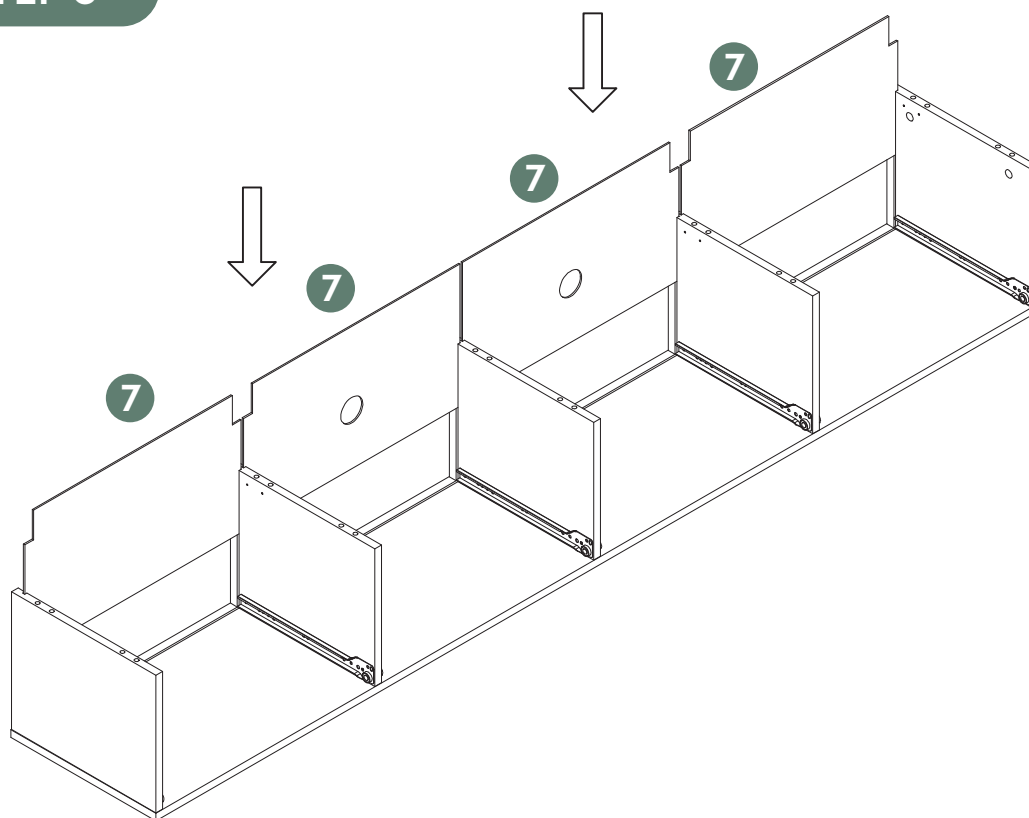

 STEP 6

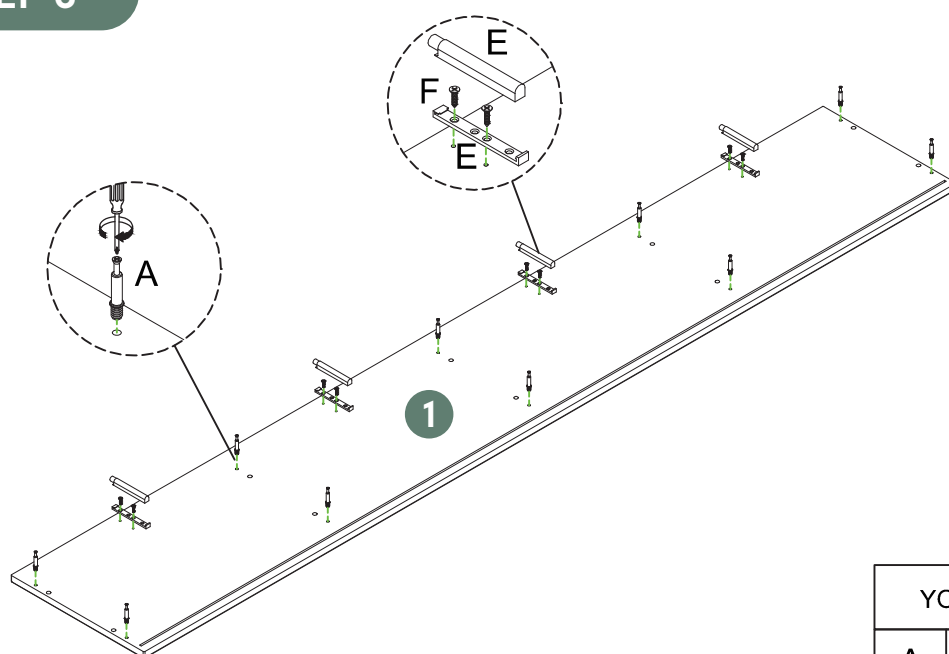


YOU WILL NEED

  A		x10
E		x4
F		x8


ASSEMBLY STEPS

 STEP 7

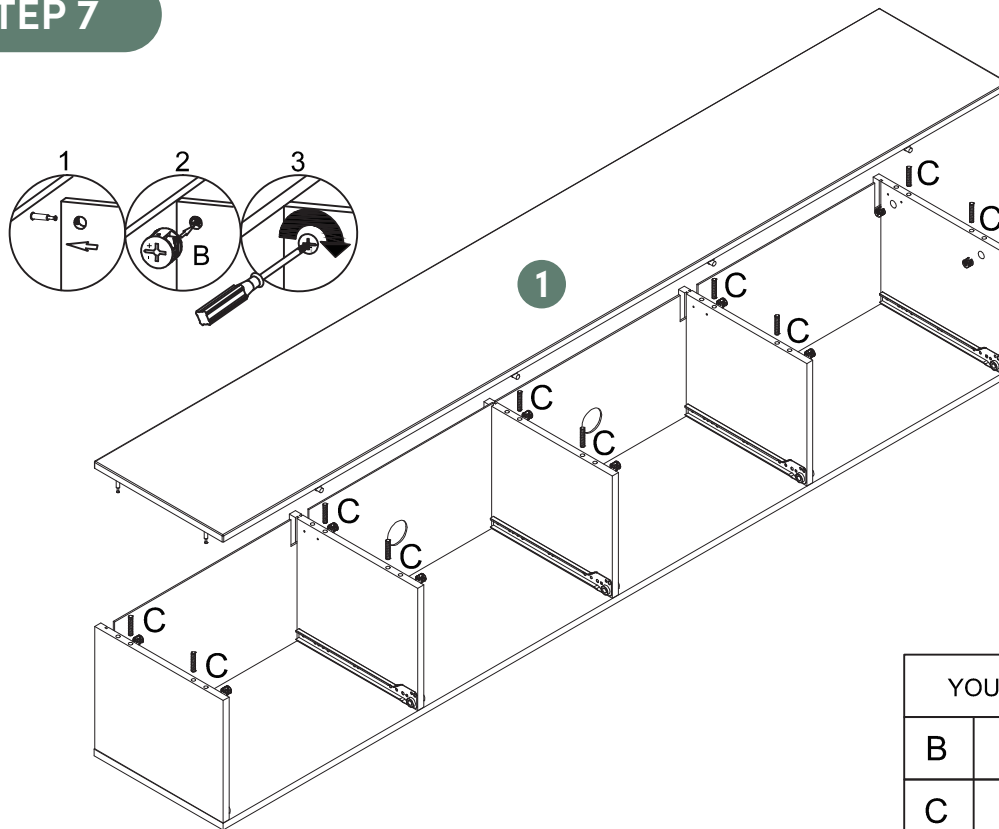

YOU WILL NEED		
B		x10
C		x10







 
STEP 8

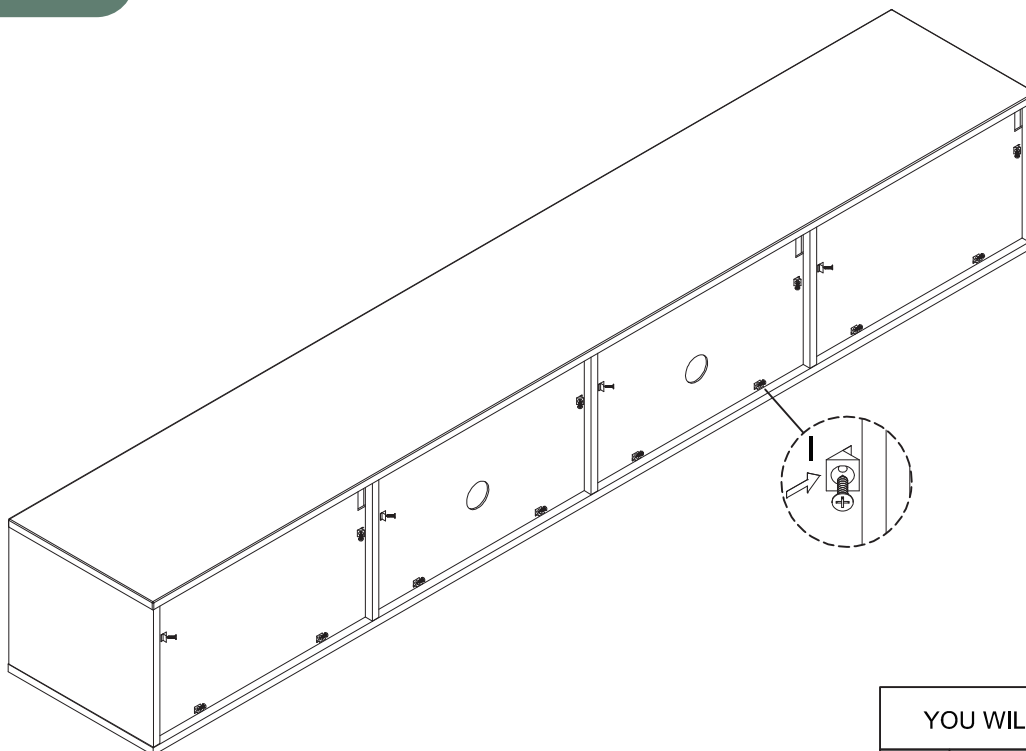

YOU WILL NEED		
I		x16

ASSEMBLY STEPS

       
STEP 9

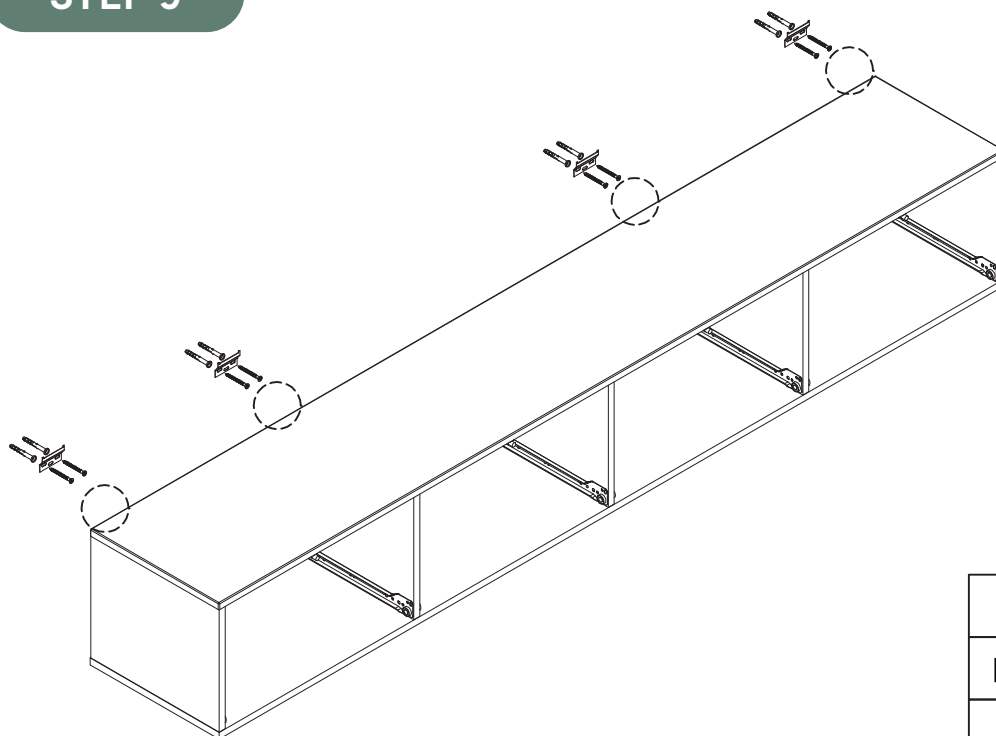

YOU WILL NEED

K		x8
L		x8
M		x4

 STEP 10

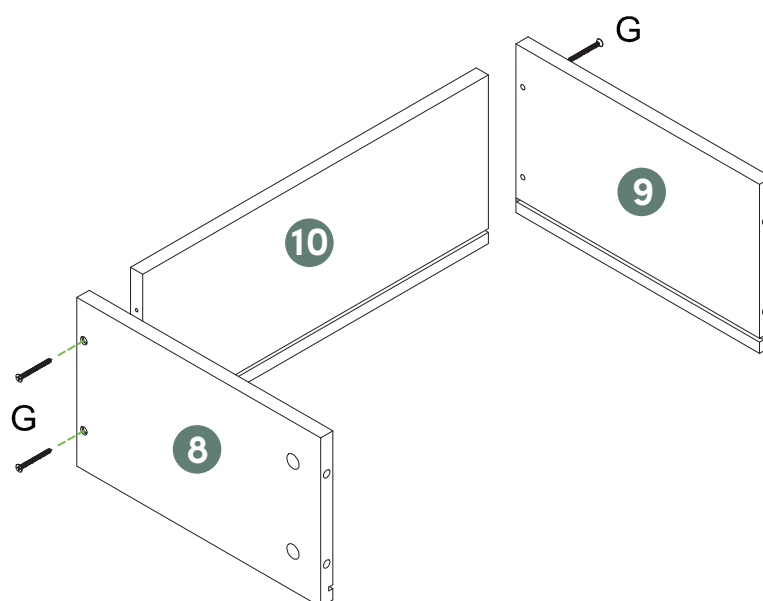


X4

YOU WILL NEED

G		x16
---	---	-----

ASSEMBLY STEPS

 
STEP 11

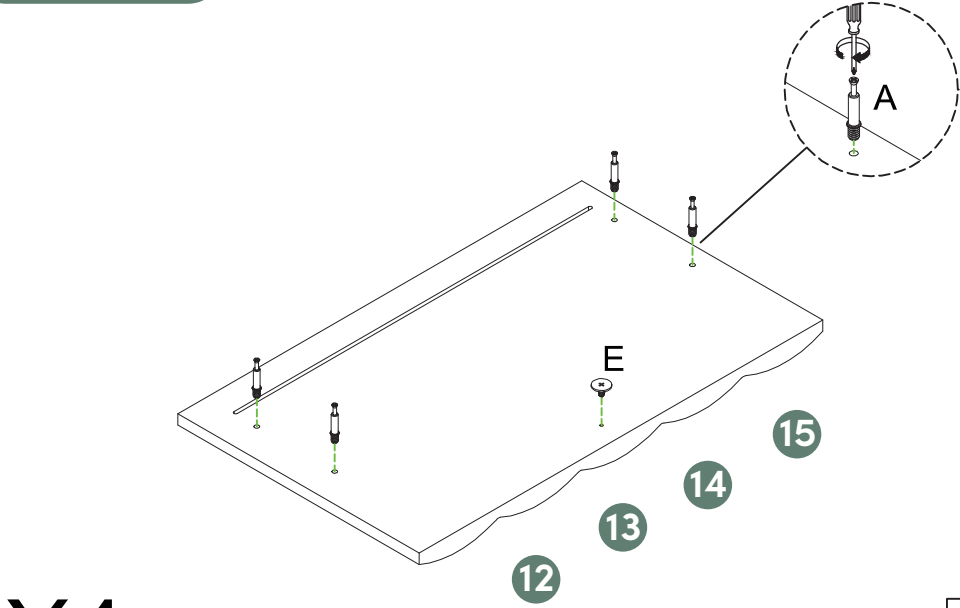

X4

YOU WILL NEED		
A		x16
E		x4

 STEP 12

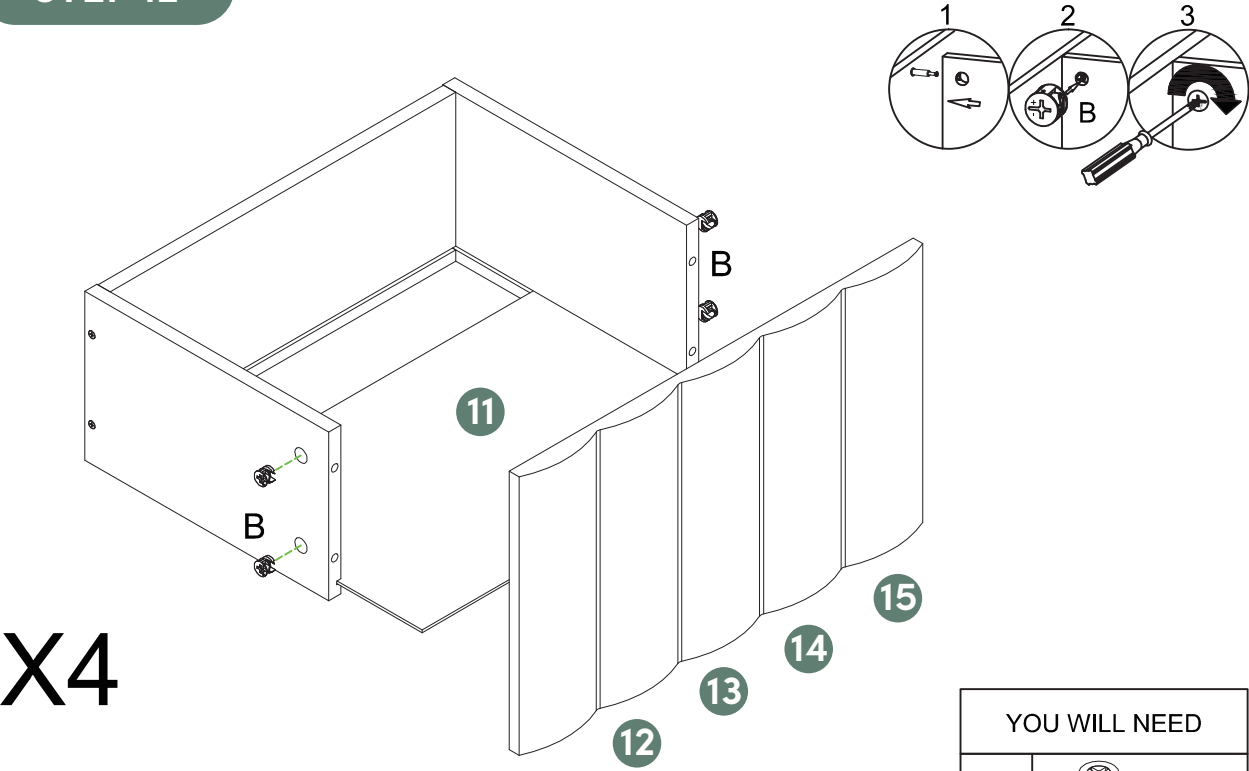


X4


YOU WILL NEED		
B		x16

ASSEMBLY STEPS



STEP 13

  X4

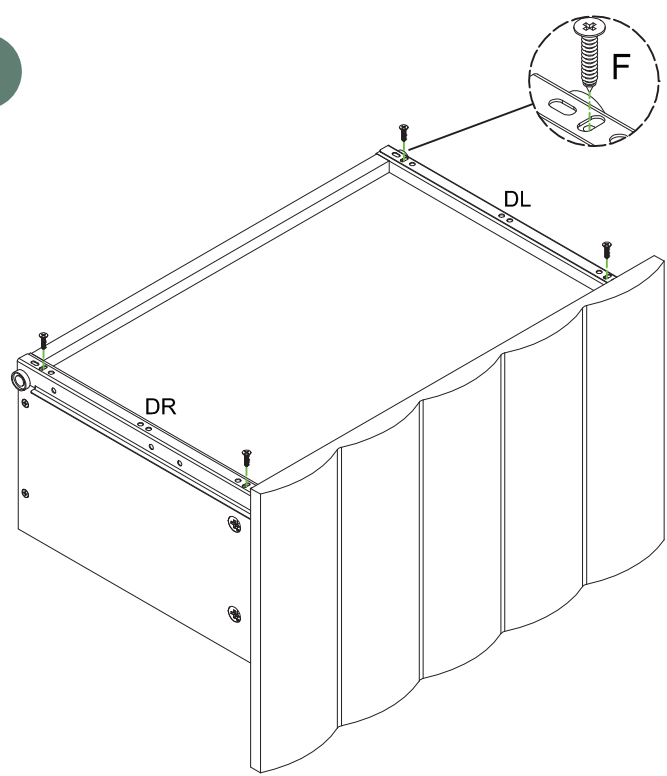

YOU WILL NEED		
F		x16
J		x4

  STEP 14

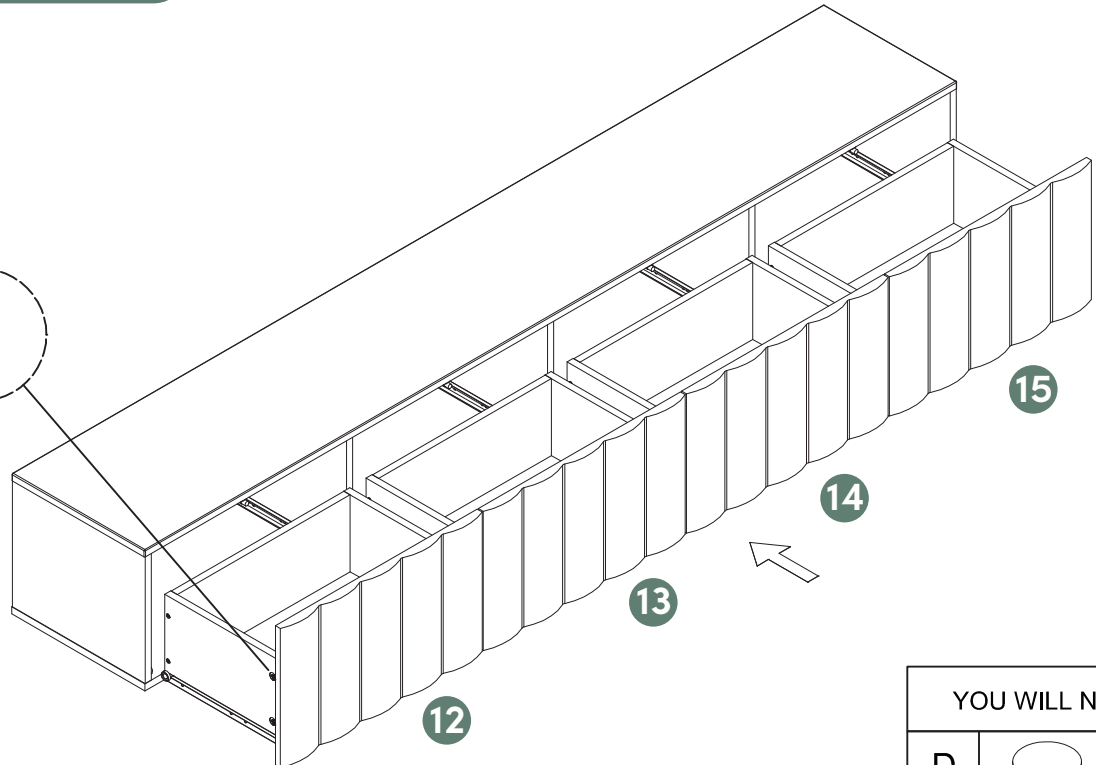
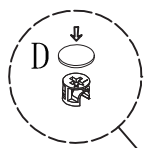


YOU WILL NEED		
D		x26


ASSEMBLY STEPS

GREAT JOB. YOU'RE DONE!

  To move the assembled unit, please lift it up and do not drag to avoid damaging the floor.

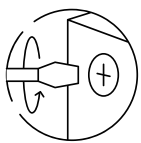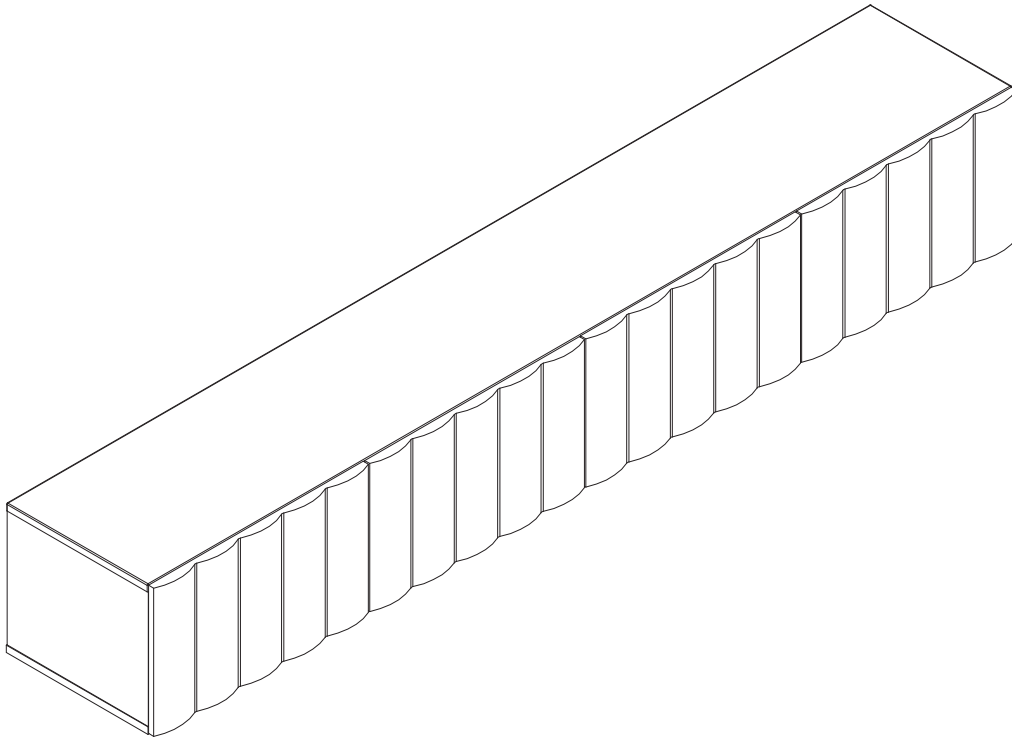


 When assembling this unit, please make sure all screws are fastened tightly. After one or two months, please recheck and make sure all screws are still tight.



This product can hold weight of up to 20 kilograms.

 WARNING

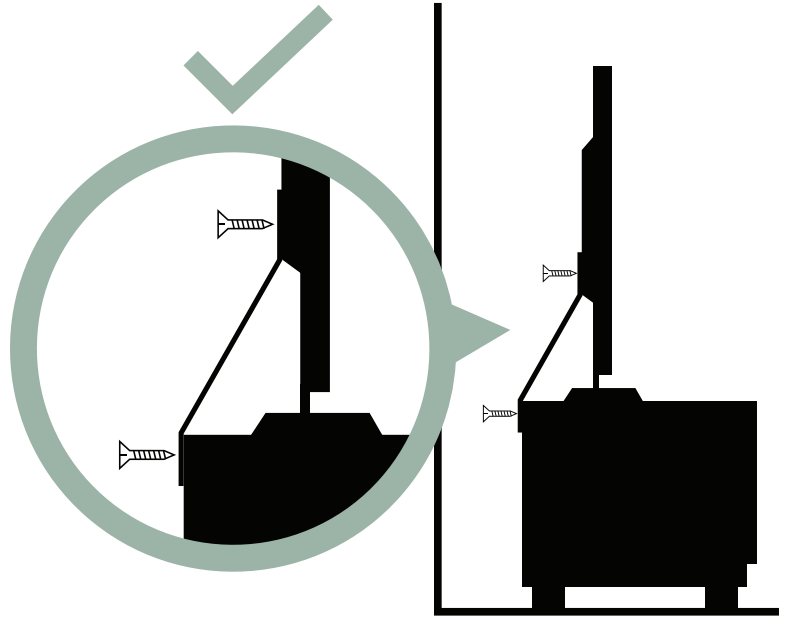

Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

This is a permanent label. Do not remove!

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Clean Gently

Use a mild wood cleaner or a mixture of water and mild dish soap to clean spills. Wipe the surface gently with a damp cloth, then dry it thoroughly.

Temperature and Humidity

Avoid direct sunlight. Maintain a consistent room temperature and humidity level to prevent wood from warping or cracking.

Use Furniture Pads

We recommend placing felt pad protectors under furniture legs to prevent scratches on the floors.

Avoid Excessive Weight

Don't overload shelves or surfaces beyond their weight capacity.

***Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too! Enjoy your furniture!***

For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Furniture