 


MARIS

LUXO|Furniture

TV Entertainment Unit

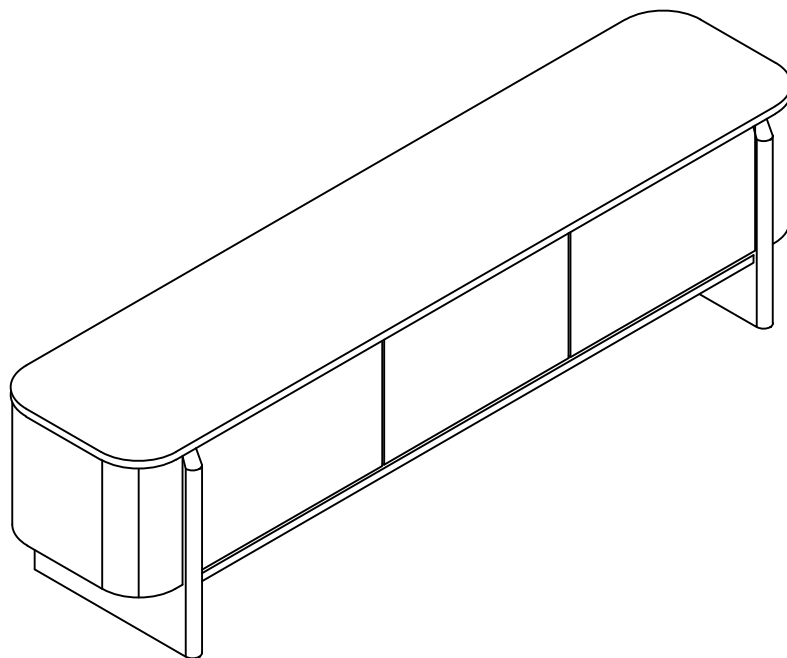

 
Assembly requires 2 persons

We recommend the use of a power drill on a low-speed setting for quick assembly.




THANK YOU FOR YOUR PURCHASE!

We hope you enjoy this product as much as we enjoyed making it! We suggest you spend **5 minutes** in reading these tips before assembling the unit. Strictly follow the instructions step by step.

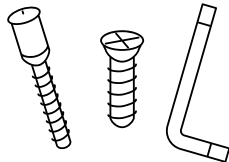


Tool Check

 Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

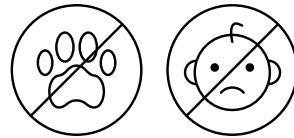


Safety Check

 Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

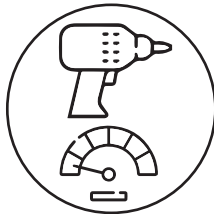

Use of Power Tool

 We recommend the use of a power drill on a low-speed setting for quick assembly.

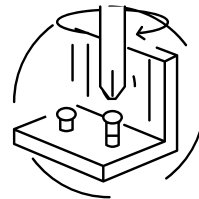


Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

HARDWARE LIST

Please check if you have all the fittings and tools listed below.

 (A)




CAM SCREW 40mm
40 PCS

(B)




CAM LOCK 15mm
40 PCS

 (C)



DRAWER RUNNER
6 PCS

 (D)




SCREW 3.5*14mm
36 PCS

(E)




SCREW 3.5*35mm
12 PCS

 (F)




SCREW 8*45mm
3 PCS

 (G)




SCREW 8*70mm
8 PCS

 (H)



WOODEN DOWELS 8*40mm
16 PCS

 (I)



WOODEN DOWELS 8*60mm
8 PCS

(J)



WASHER M8
11 PCS

(K)



 
ALLEN KEY M5
1 PC

(L)



FELT PAD
4 PCS

(M)



PUSH LATCH
3 PCS

(N)



NUTS
4 PCS

(O)

 


CABLE HOLE
3 PCS


(P)



TWIN SCREW ROD
4 PCS

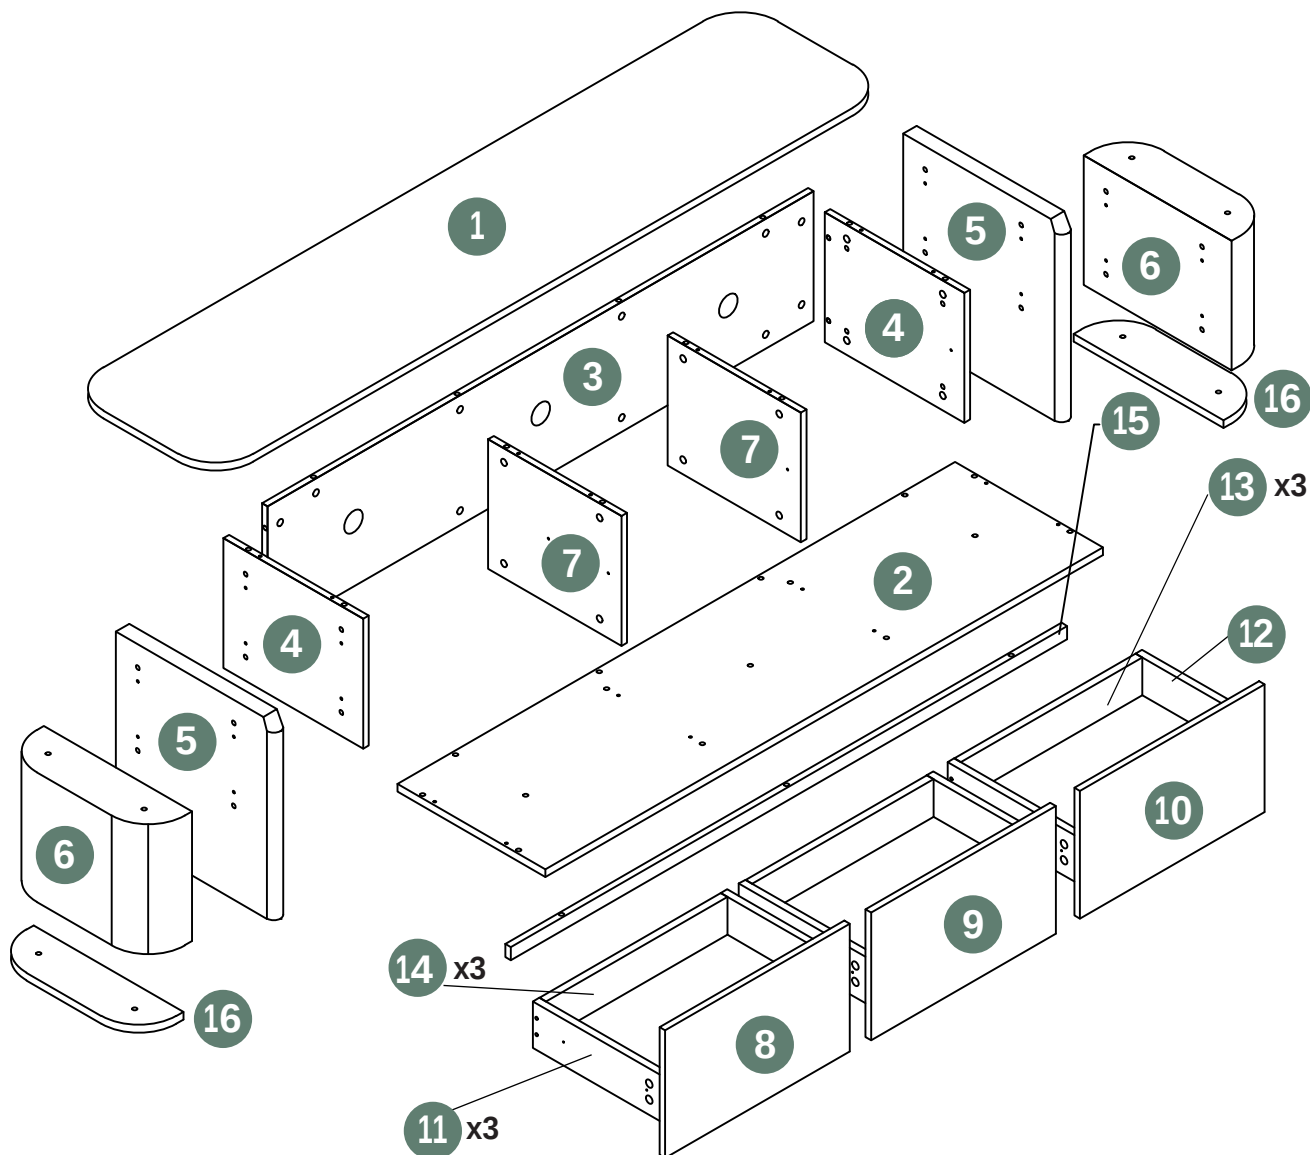


PARTS LIST

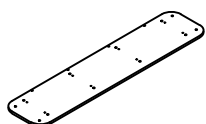 


1 x1

 1800x400x18mm




2 x1

 1489x395x18mm

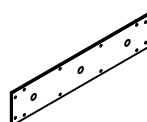


3 x1

 1458x300x15mm




4 x2

 373x300x15mm




5 x2

 462x422x36mm




6 x2

 395x300x117mm



7 x2

 
356x300x15mm




8 x1

493x295x15mm

 PARTS LIST



9 x1
493x295x15mm

 

10 x1
493x295x15mm



 
11 x3
300x200x15mm




12 x3
300x200x15mm



13 x3
419x200x15mm



14 x3
429x295x5mm

 


15 x1
1480x30x15mm




16 x2
400x119x18mm

STEP 1

 Pull out the inner rail (drawer rail) from the outer rail (the slider casing) that is attached to the cabinet.

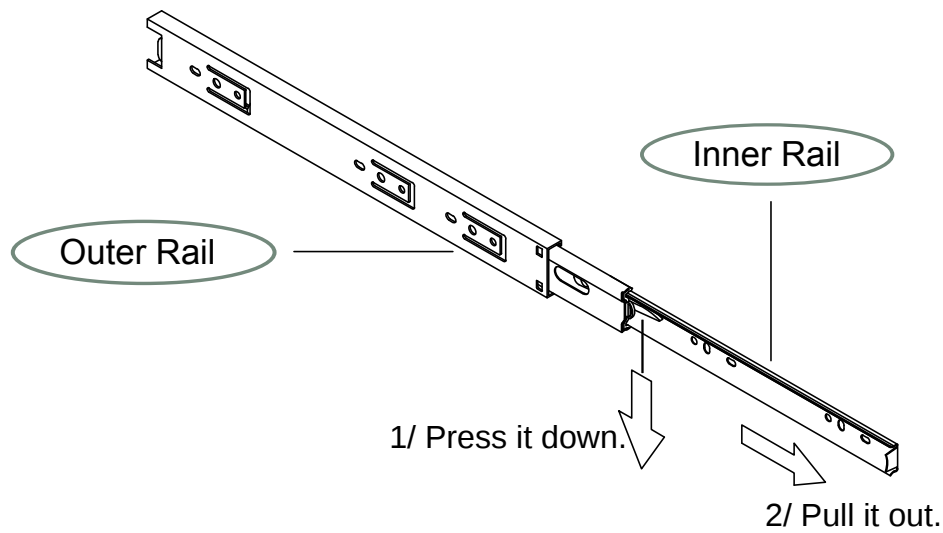

 STEP 2

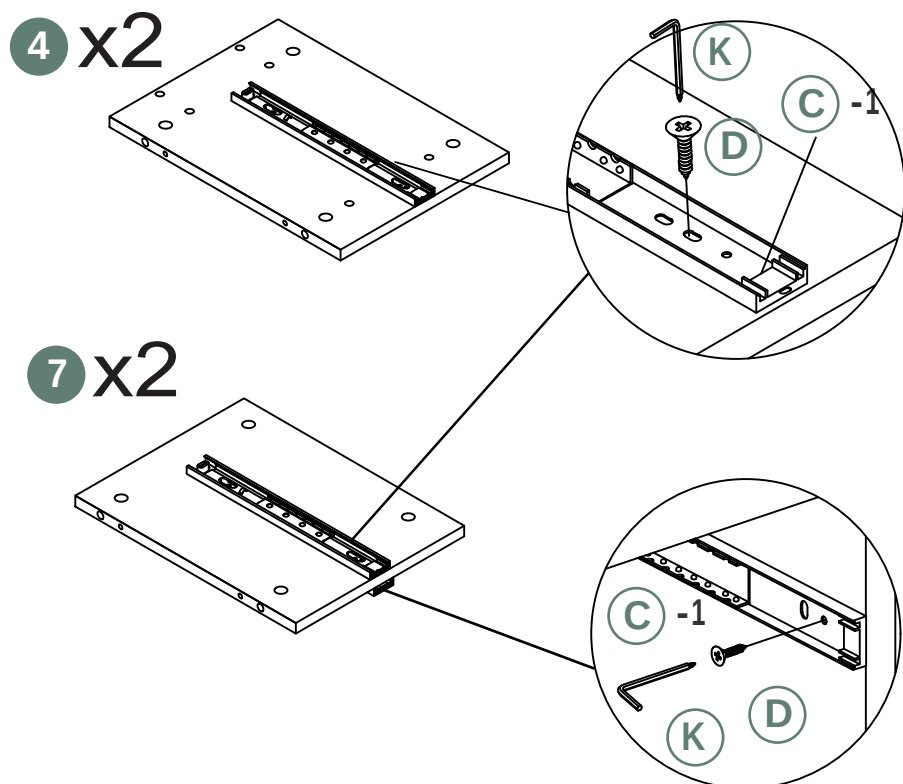


YOU WILL NEED


C	C-1	x6
D		x12
K		x1

ASSEMBLY STEPS

 
STEP 3

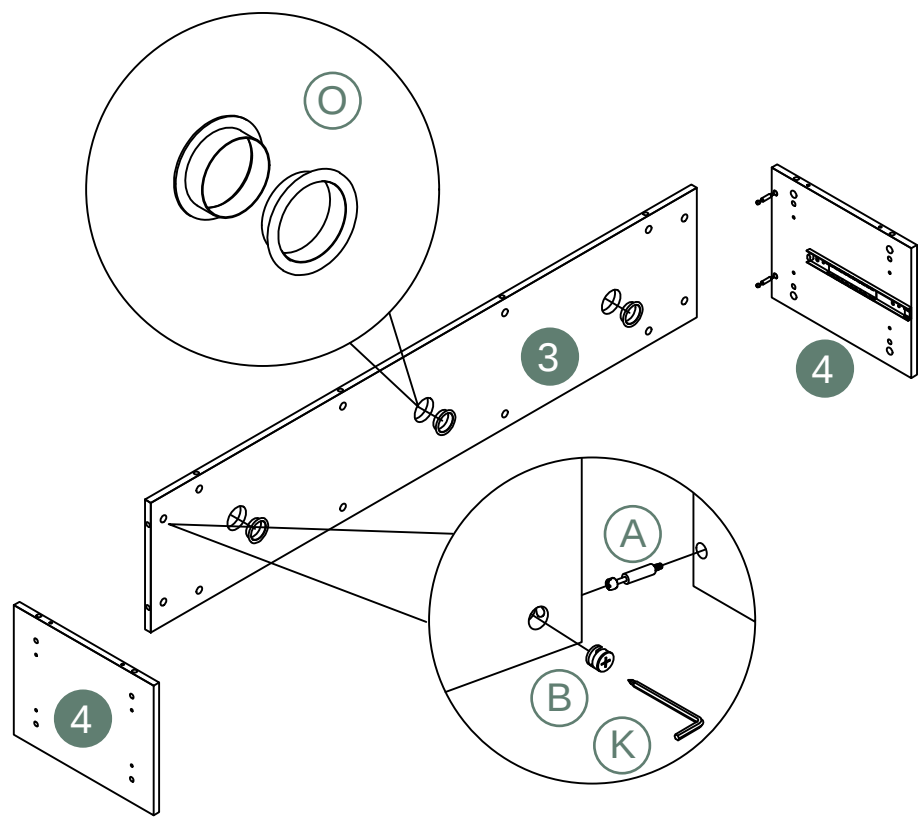

YOU WILL NEED

 A		x4
B		x4
K		x1
O		x3

 STEP 4

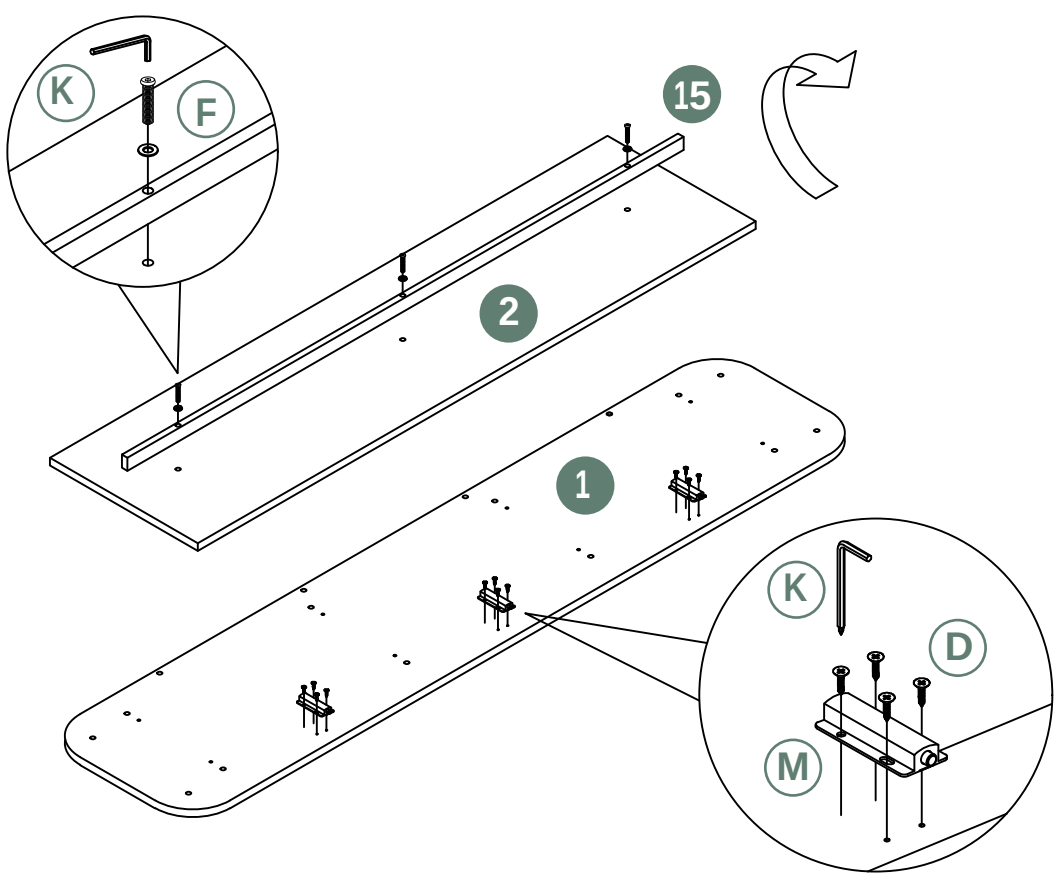


YOU WILL NEED


D		x12
F		x3
J		x3
M		x3
K		x1

ASSEMBLY STEPS

 
STEP 5

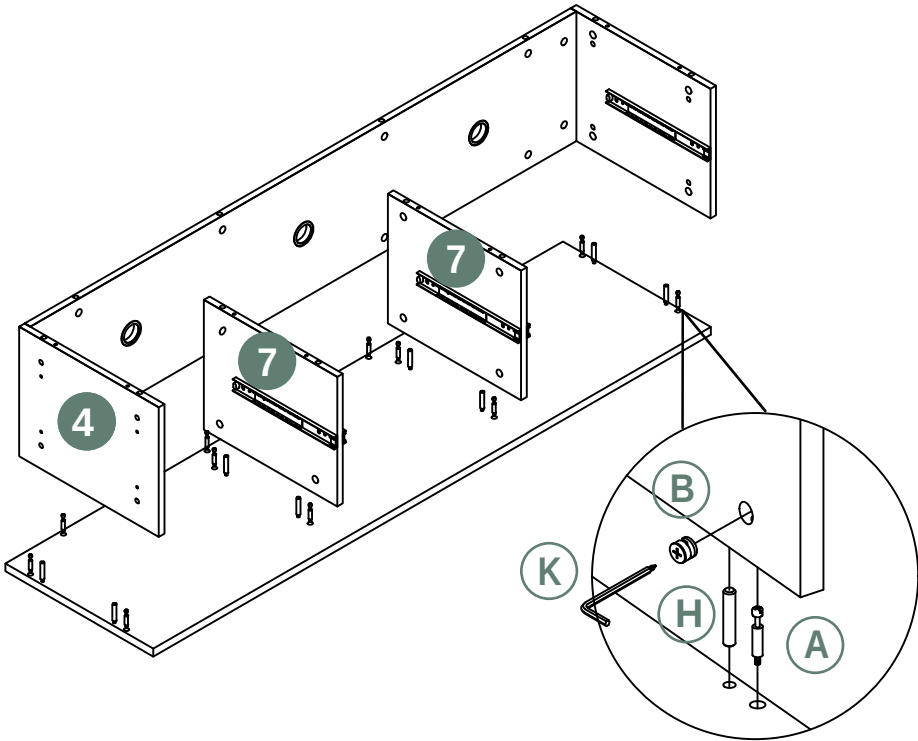

YOU WILL NEED

 A		x12
B		x12
H		x8
K		x1

 STEP 6

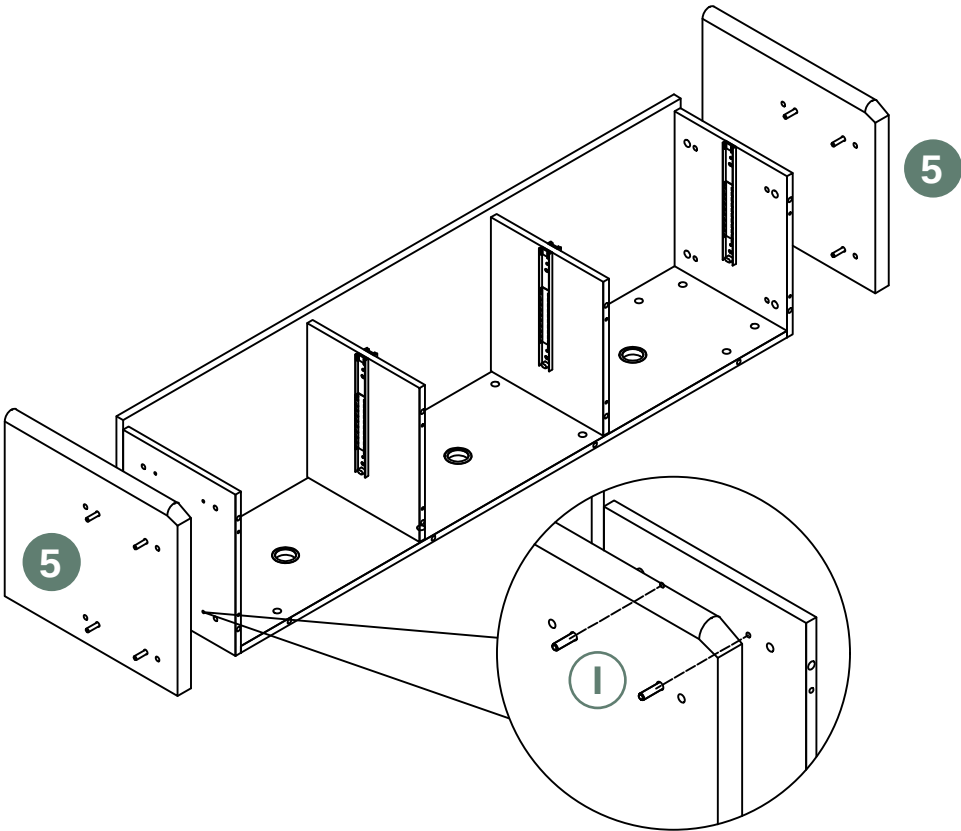



YOU WILL NEED

I		x8
---	---	----

ASSEMBLY STEPS


 
STEP 7


YOU WILL NEED		
J		x8
G		x8
K		x1

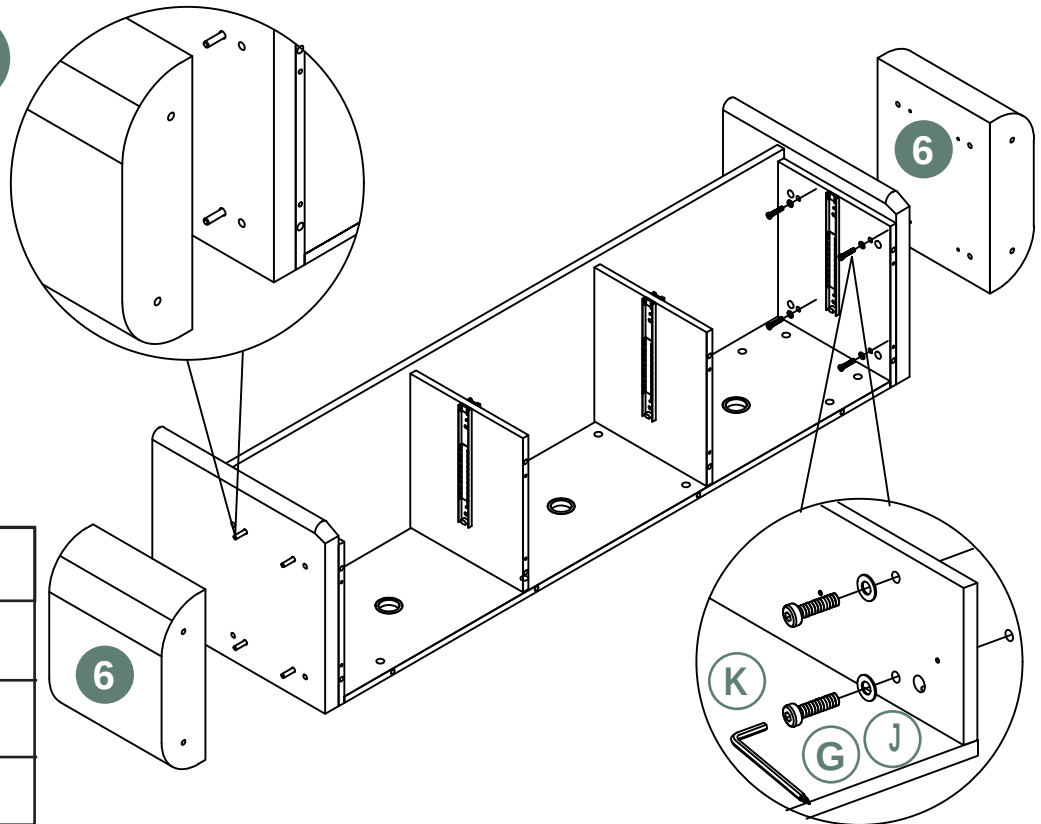 

STEP 8

  
When inserting the long screw into the desktop, do not screw it in too deeply as it may penetrate through the top surface.


YOU WILL NEED		
A		x12
B		x12
H		x8
L		x4
K		x1
N		x4
P		x4

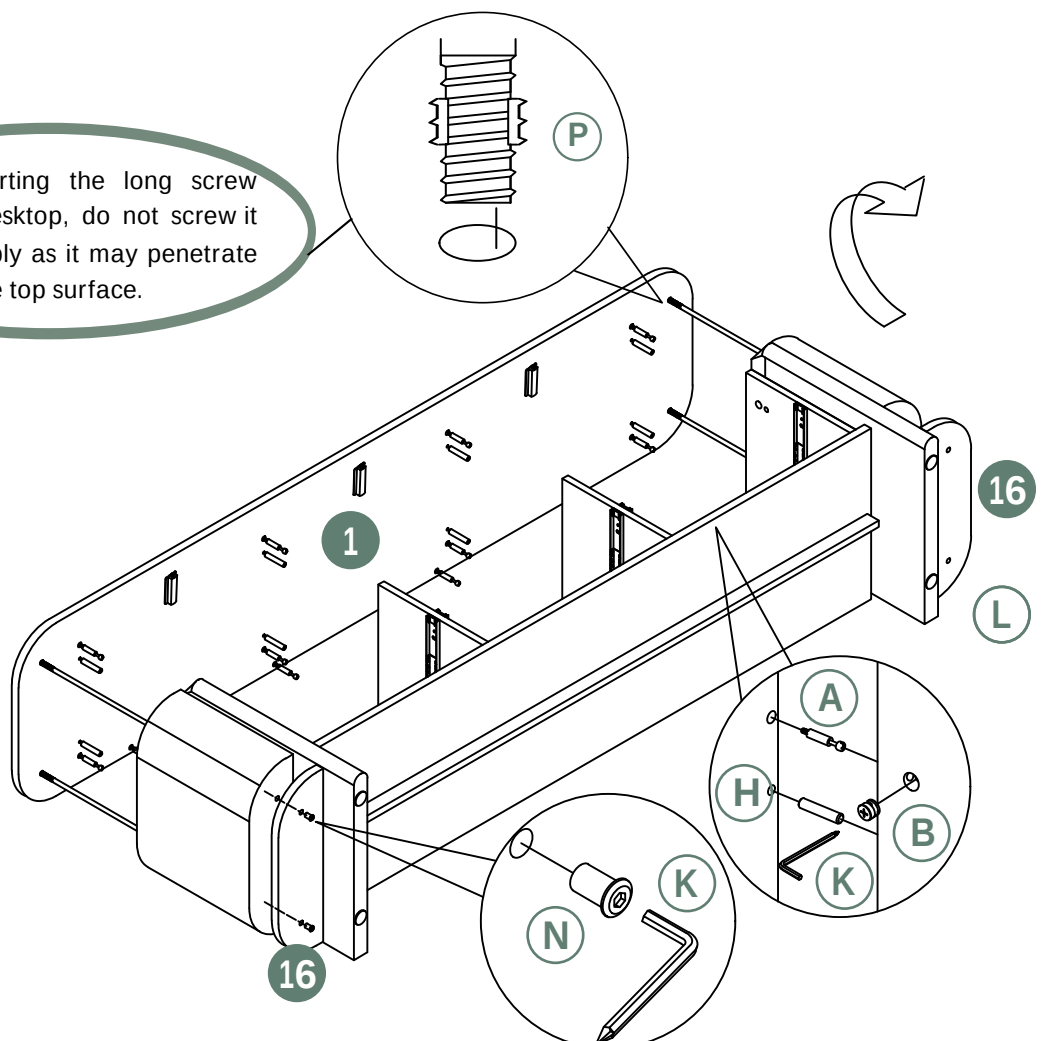 


ASSEMBLY STEPS

 STEP 9

YOU WILL NEED		
A		x12
B		x12
C	 C-1 C-2	x6
D		x12
E		x12
K		x1

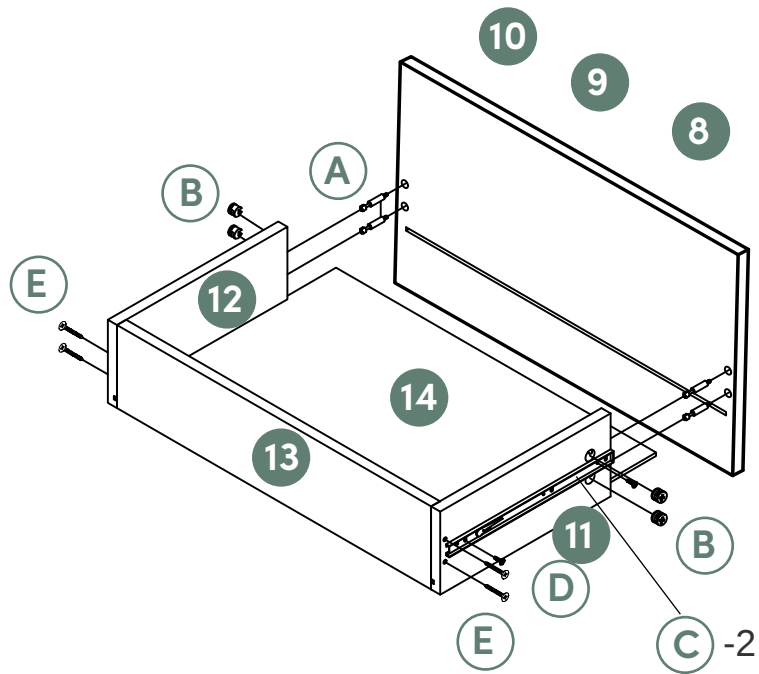 


 
STEP 10

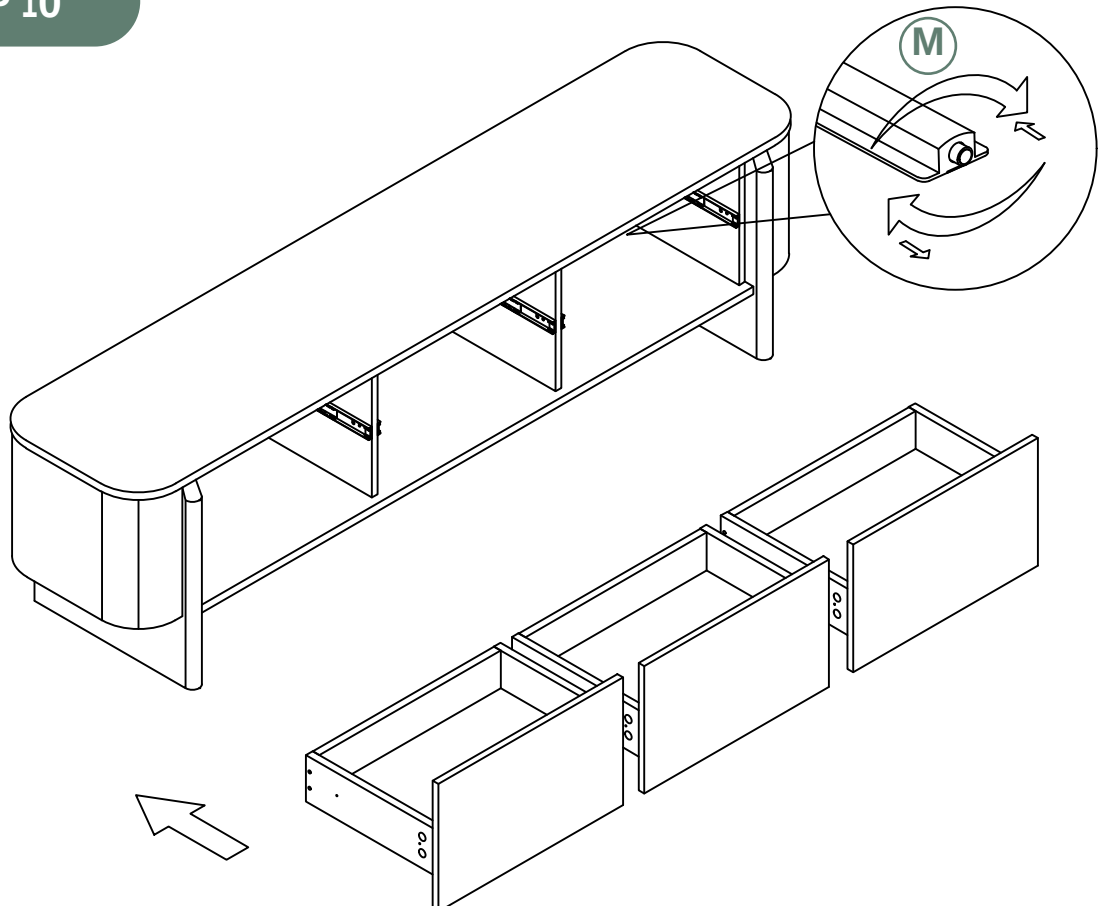


ASSEMBLY STEPS

GREAT JOB. YOU'RE DONE!

  To move the assembled unit, please lift it up and do not drag to avoid breaking some parts and damaging the floor.

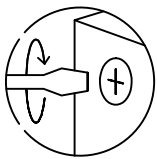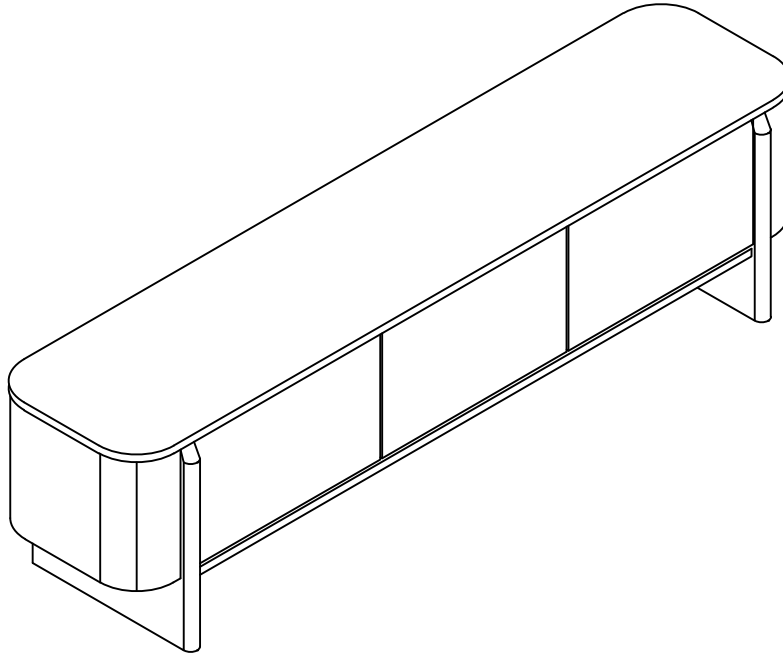

 When assembling this Entertainment Unit, please ensure that all screws are tight. After one or two months, please recheck and ensure that all screws are still tight.

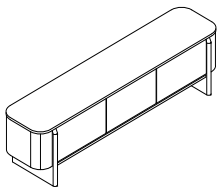


Our Entertainment Unit can hold weight of up to 45 kg. We don't suggest overloading it beyond its weight capacity.



WARNING

 Children have died from toppling furniture – toppling furniture can cause serious injuries and death.

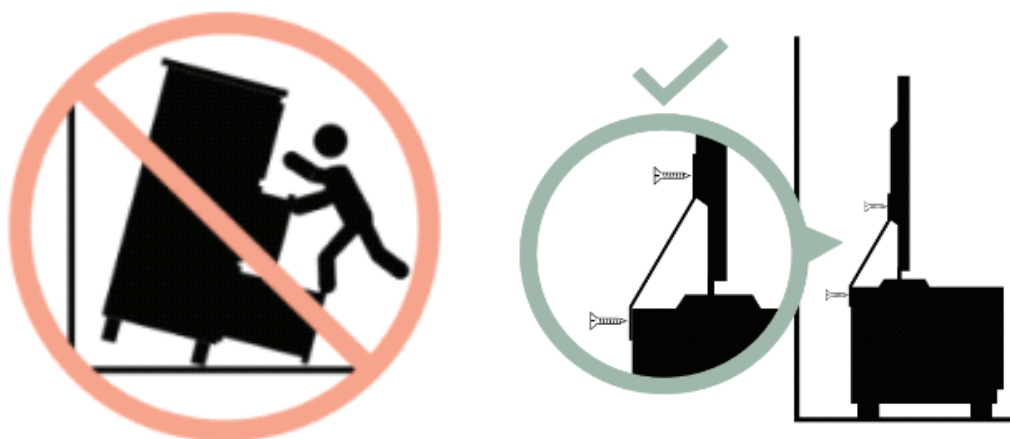

- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- **ALWAYS** secure your television with an anchor device.

To prevent your furniture from tipping forward, it is strongly recommended that you securely attach this product to a wall or another solid surface, using an anchoring device and appropriate fixings.

IMPORTANT:

- Regularly check that anchors are securely maintained.
- Walls are constructed from different materials, for example, masonry (solid brick) or plasterboard lined cavity walls (hollow). It is important that you use the appropriate wall fixings for your wall type. Ensure to seek professional advice if you are unsure.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Clean Gently

Use a soft, damp cloth and mild soap solution to wipe down surfaces regularly.

Temperature and Humidity

Keep away from heat sources like stoves and heaters. Avoid direct sunlight and prolonged exposure to high humidity/water. Maintain a consistent room temperature and humidity level.

Use Furniture Pads

Place furniture pads or felt protectors under the furniture to prevent scratches on floors.

Avoid Excessive Weight

Don't overload the Entertainment Unit beyond its weight capacity.

***Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too!
Enjoy your furniture!***

For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Furniture