 


ARCHER

Timber Outdoor Lounge Table

LUXO|Outdoors

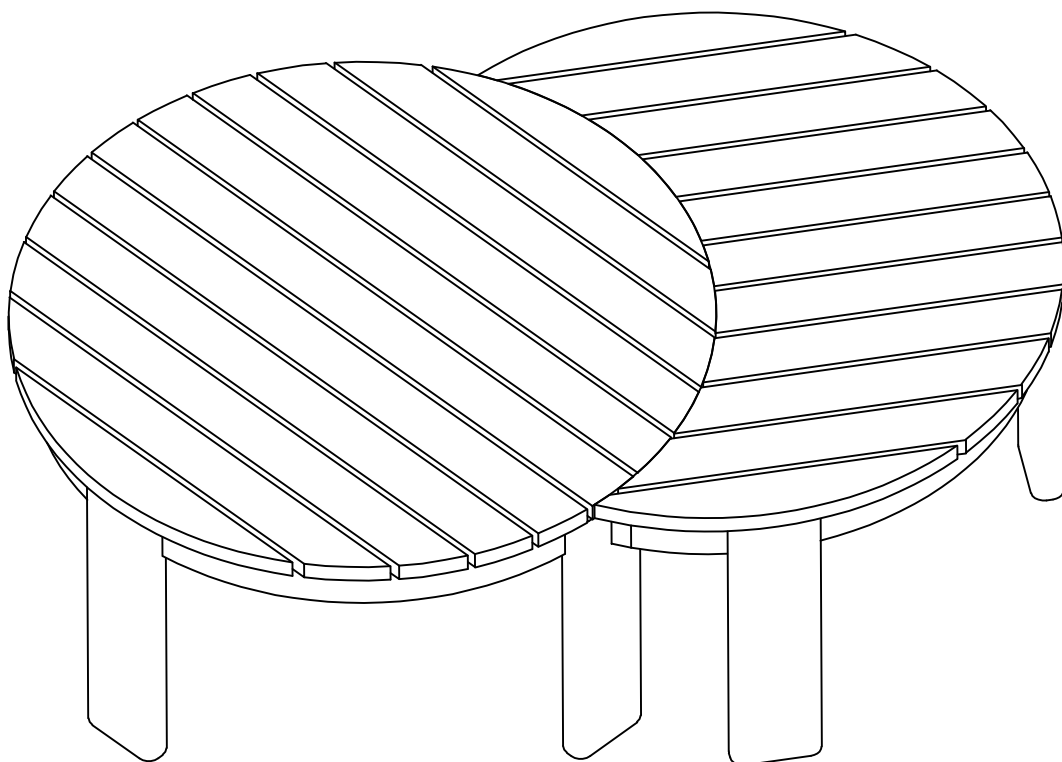

Assembly requires 2 persons

 
WE RECOMMEND THE USE OF A POWER DRILL ON A LOW-SPEED SETTING FOR QUICK ASSEMBLY.



THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend 5 minutes in reading these tips before assembling the unit. Strictly follow the instructions step by step.

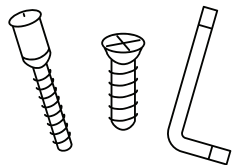


Tool Check

 Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

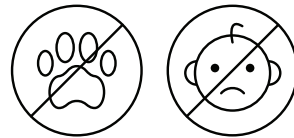


Safety Check

 Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

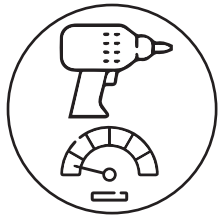

Use of Power Tool

 We recommend the use of a power drill on a low-speed setting for quick assembly.

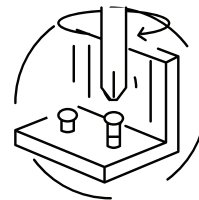

Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

 


Scan the code to access
the assembling video

HARDWARE LIST

Please check if you have all the fittings and tools listed below.

A




BOLT M8x40mm
16 PCS


B



 
ALLEN KEY
1 PC

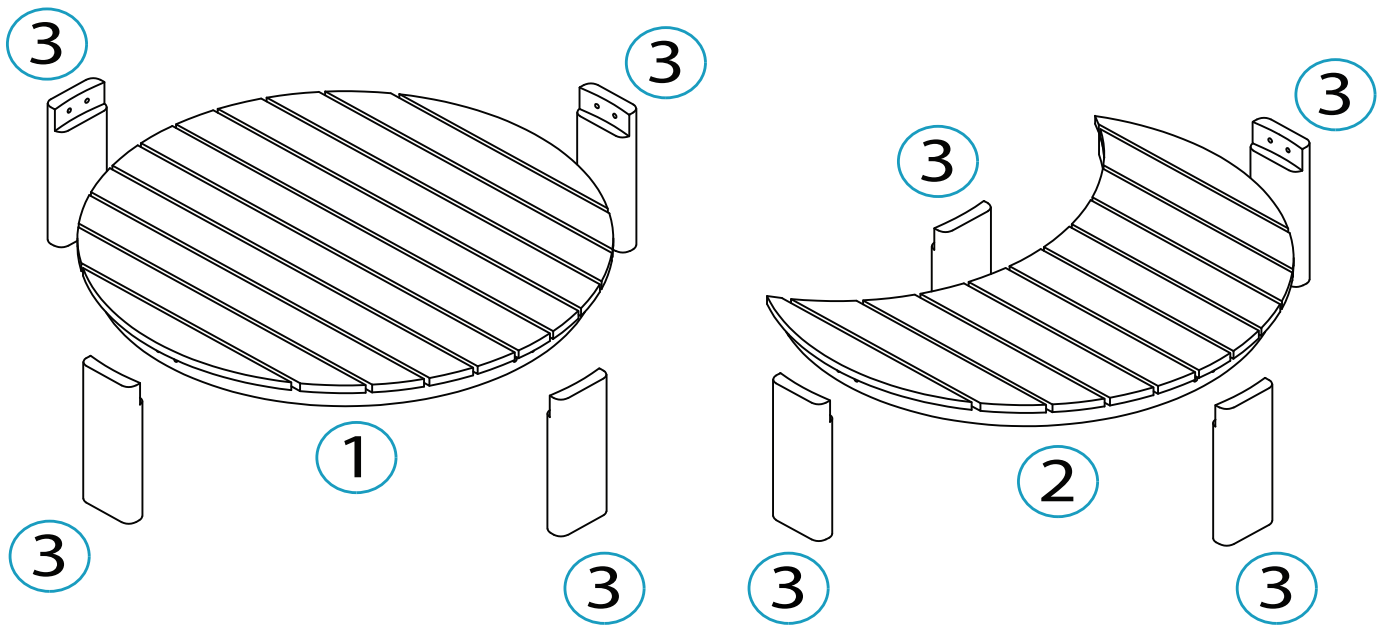

PARTS LIST

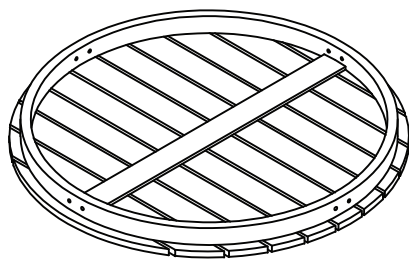 

1 X1

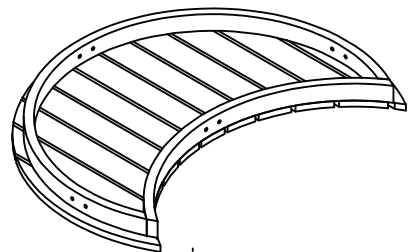 



2 X1



3 X8

  
STEP 1

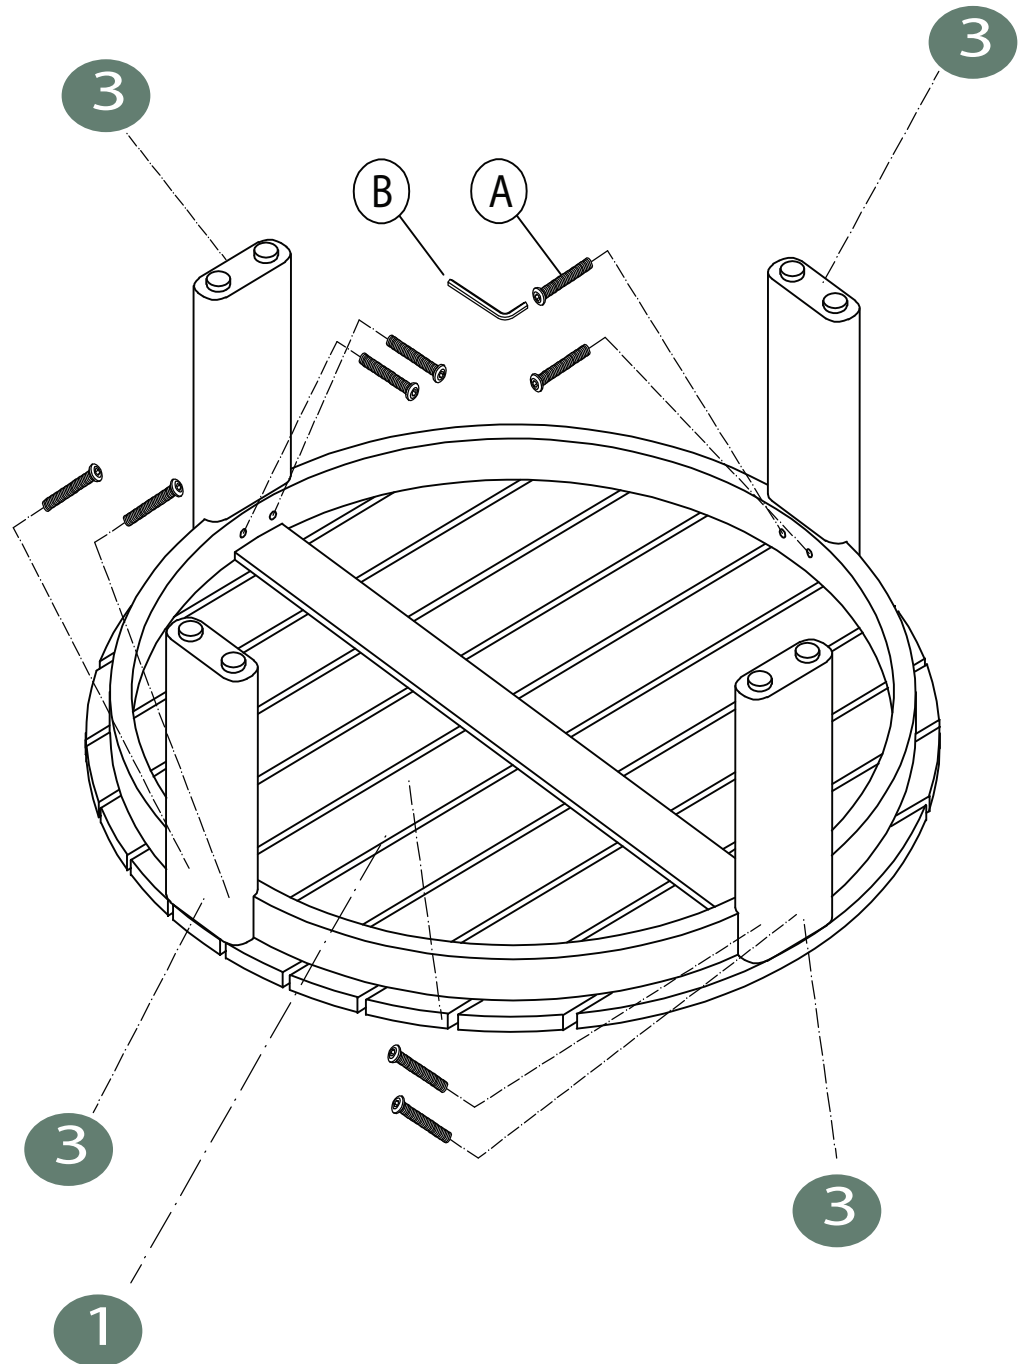


YOU WILL NEED	
A	 x8
B	 x1

ASSEMBLY STEPS

  STEP 2


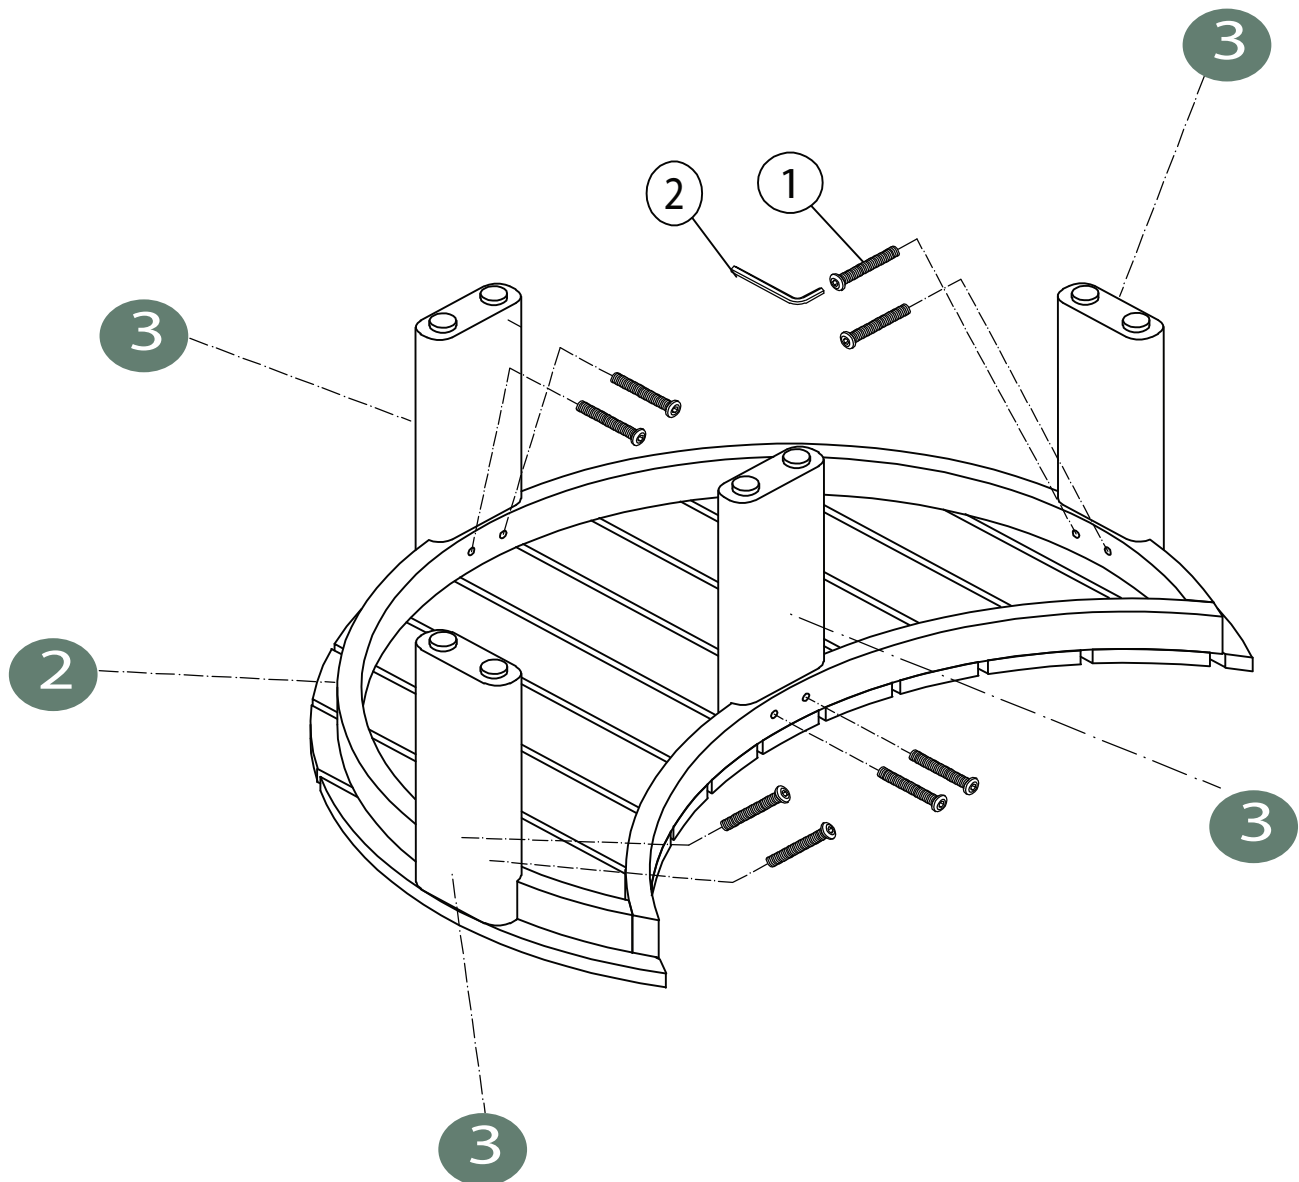


YOU WILL NEED	
A	 x8
B	 x1

ASSEMBLY STEPS

GREAT JOB. YOU'RE DONE!

  
To move the assembled unit, please lift it up and do not drag to avoid breaking some parts and damaging the floor.

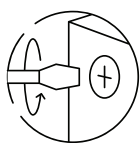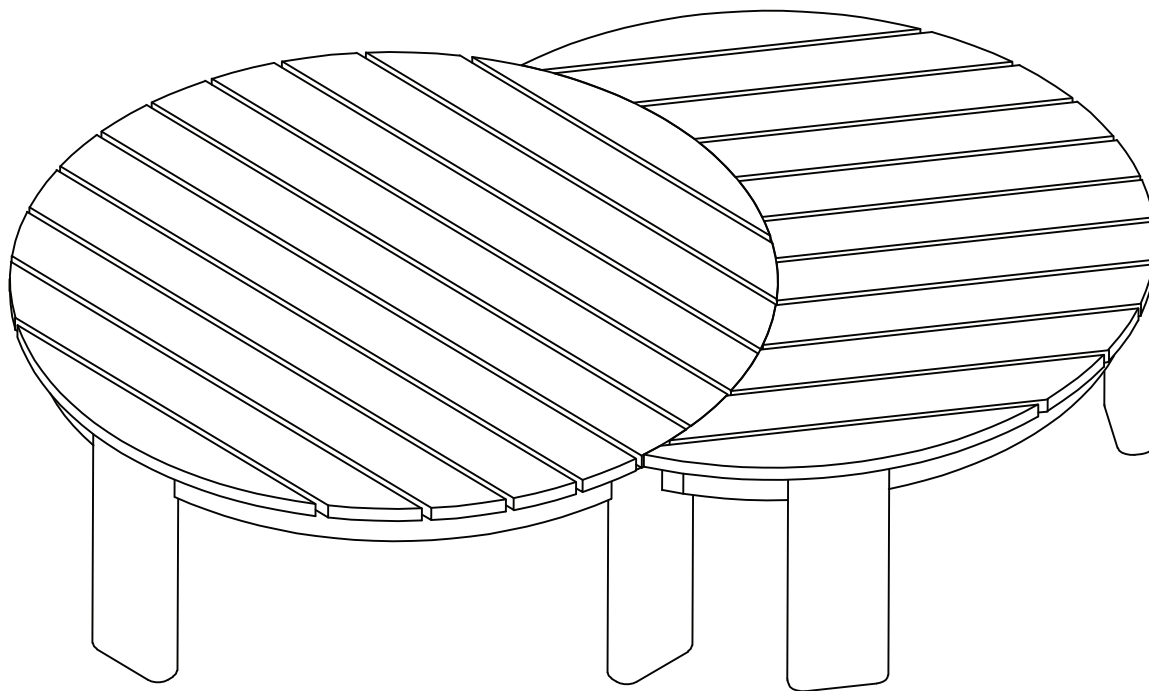

When you assemble this table, please make sure all screws are fastened tightly. After one or two months, please recheck and make sure all screws are still tight.



Before using this table, please check if the legs of the table are in an upright position.

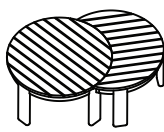

Our table can hold weight of up to 120kg. We don't suggest overloading it beyond its weight capacity.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Clean Gently

Use a mild wood cleaner or a mixture of water and mild dish soap to clean spills. Wipe the surface gently with a damp cloth, then dry it thoroughly.

Temperature and Humidity

For longevity, avoid prolonged direct sunlight or rain. Avoid direct contact with wet surfaces to prevent warping and cracking. Store indoor in extreme weather.

Extra Care for Timber

It is recommended to varnish it every 6 to 12 months, or as needed, depending on exposure to weather conditions.

Avoid Excessive Weight

Don't overload the unit beyond its weight capacity.

Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too!
Enjoy your furniture!


For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Outdoors

ARCHER

2 Seater Timber Outdoor Lounge

LUXO|Outdoors

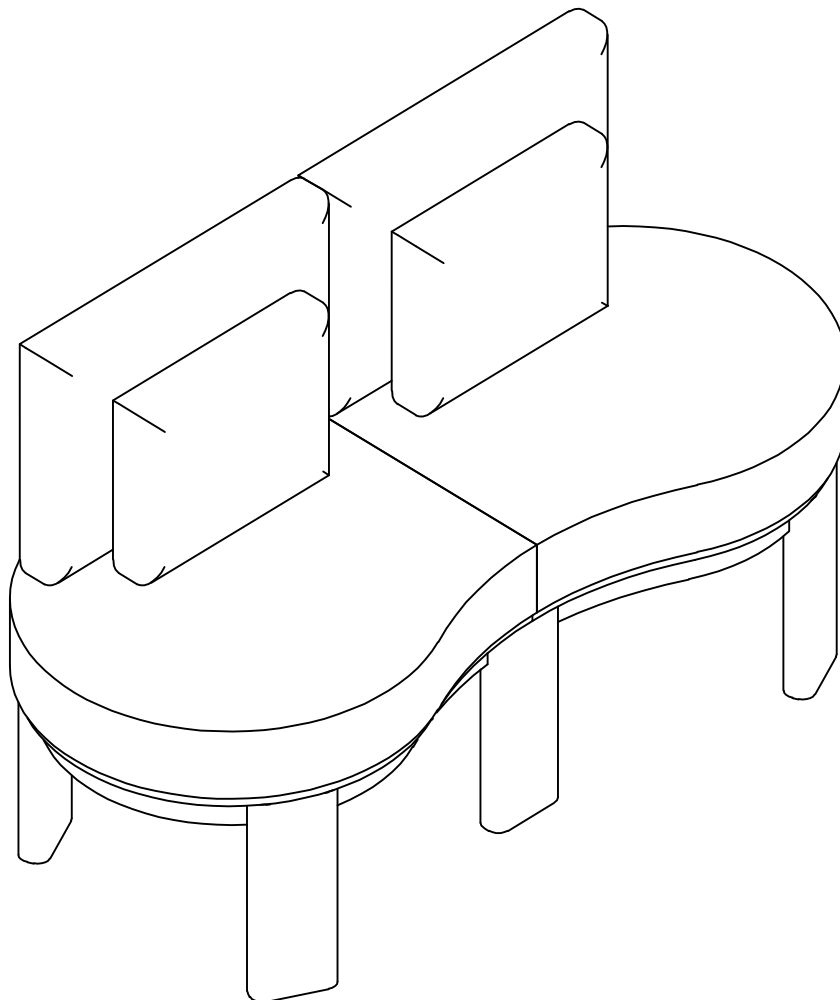 

Assembly requires 2 persons

 
WE RECOMMEND THE USE OF A POWER DRILL ON A LOW-SPEED SETTING FOR QUICK ASSEMBLY.



THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend 5 minutes in reading these tips before assembling the unit. Strictly follow the instructions step by step.

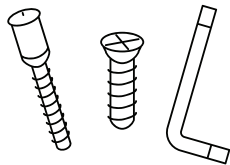


Tool Check

 Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

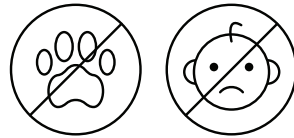


Safety Check

 Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

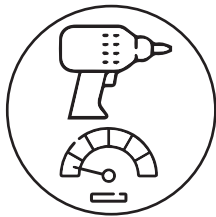


Use of Power Tool

 We recommend the use of a power drill on a low-speed setting for quick assembly.

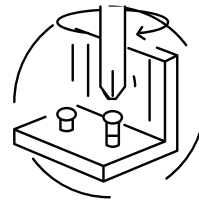

Easier Assembly Tip

 We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

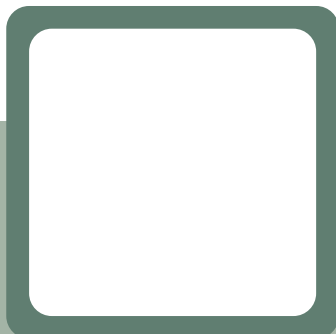


Scan the code to access
the assembling video

HARDWARE LIST


Please check if you have all the fittings and tools listed below.

 A



Bolt M8x40mm
14PCS

 B




M8x15mm
2PCS

C




Bolt M6x40mm
8PCS

 D

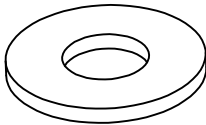


8PCS

 
E

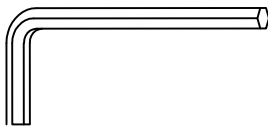


1PC

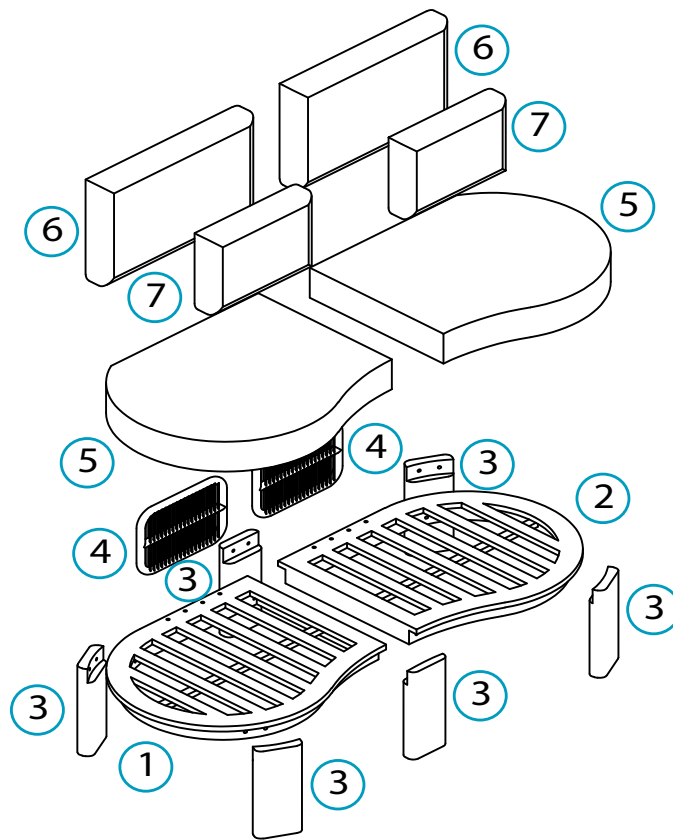 


PARTS LIST

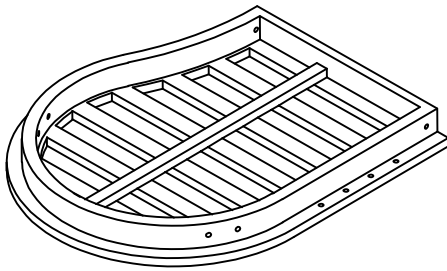 


1 x1

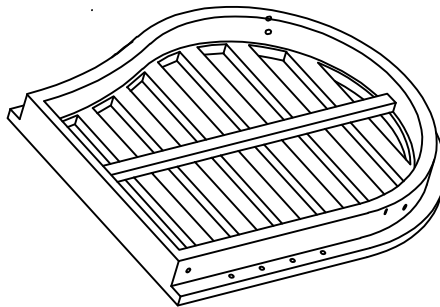 


2 x1

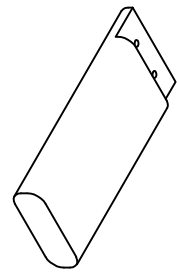 


3 x6

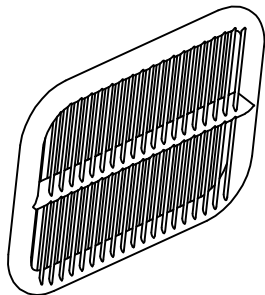 


4 x2

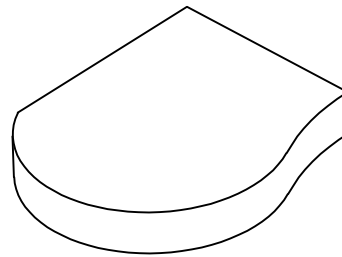 

5 x2

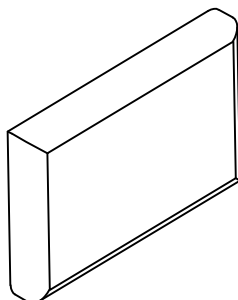 


6 x2

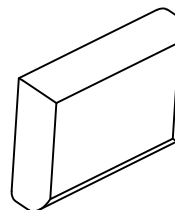 

7 x2

 
STEP 1

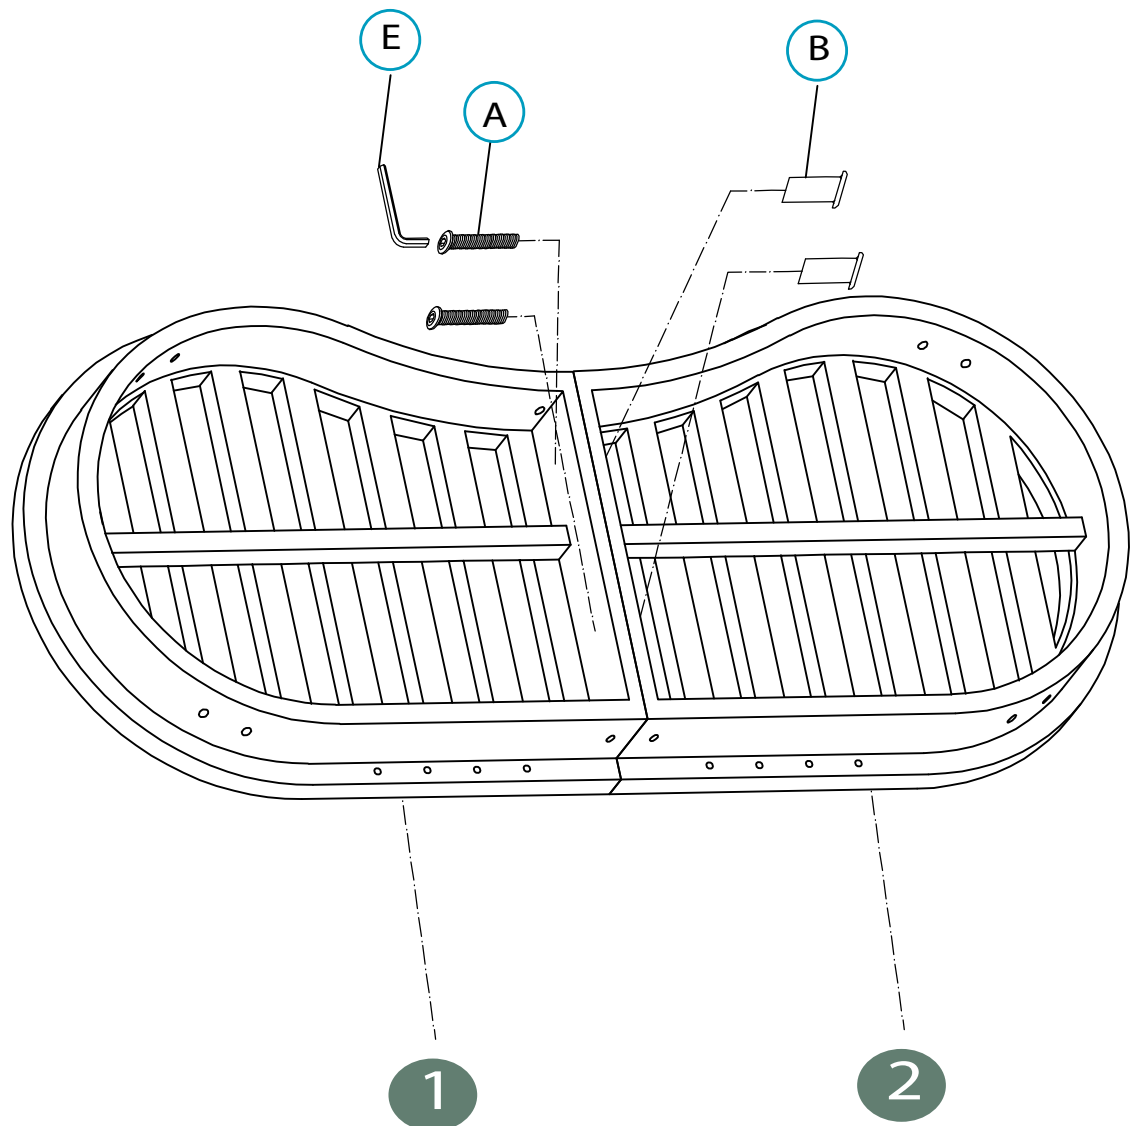

YOU WILL NEED		
A		x2
B		x2
E		x1

ASSEMBLY STEPS

 STEP 2

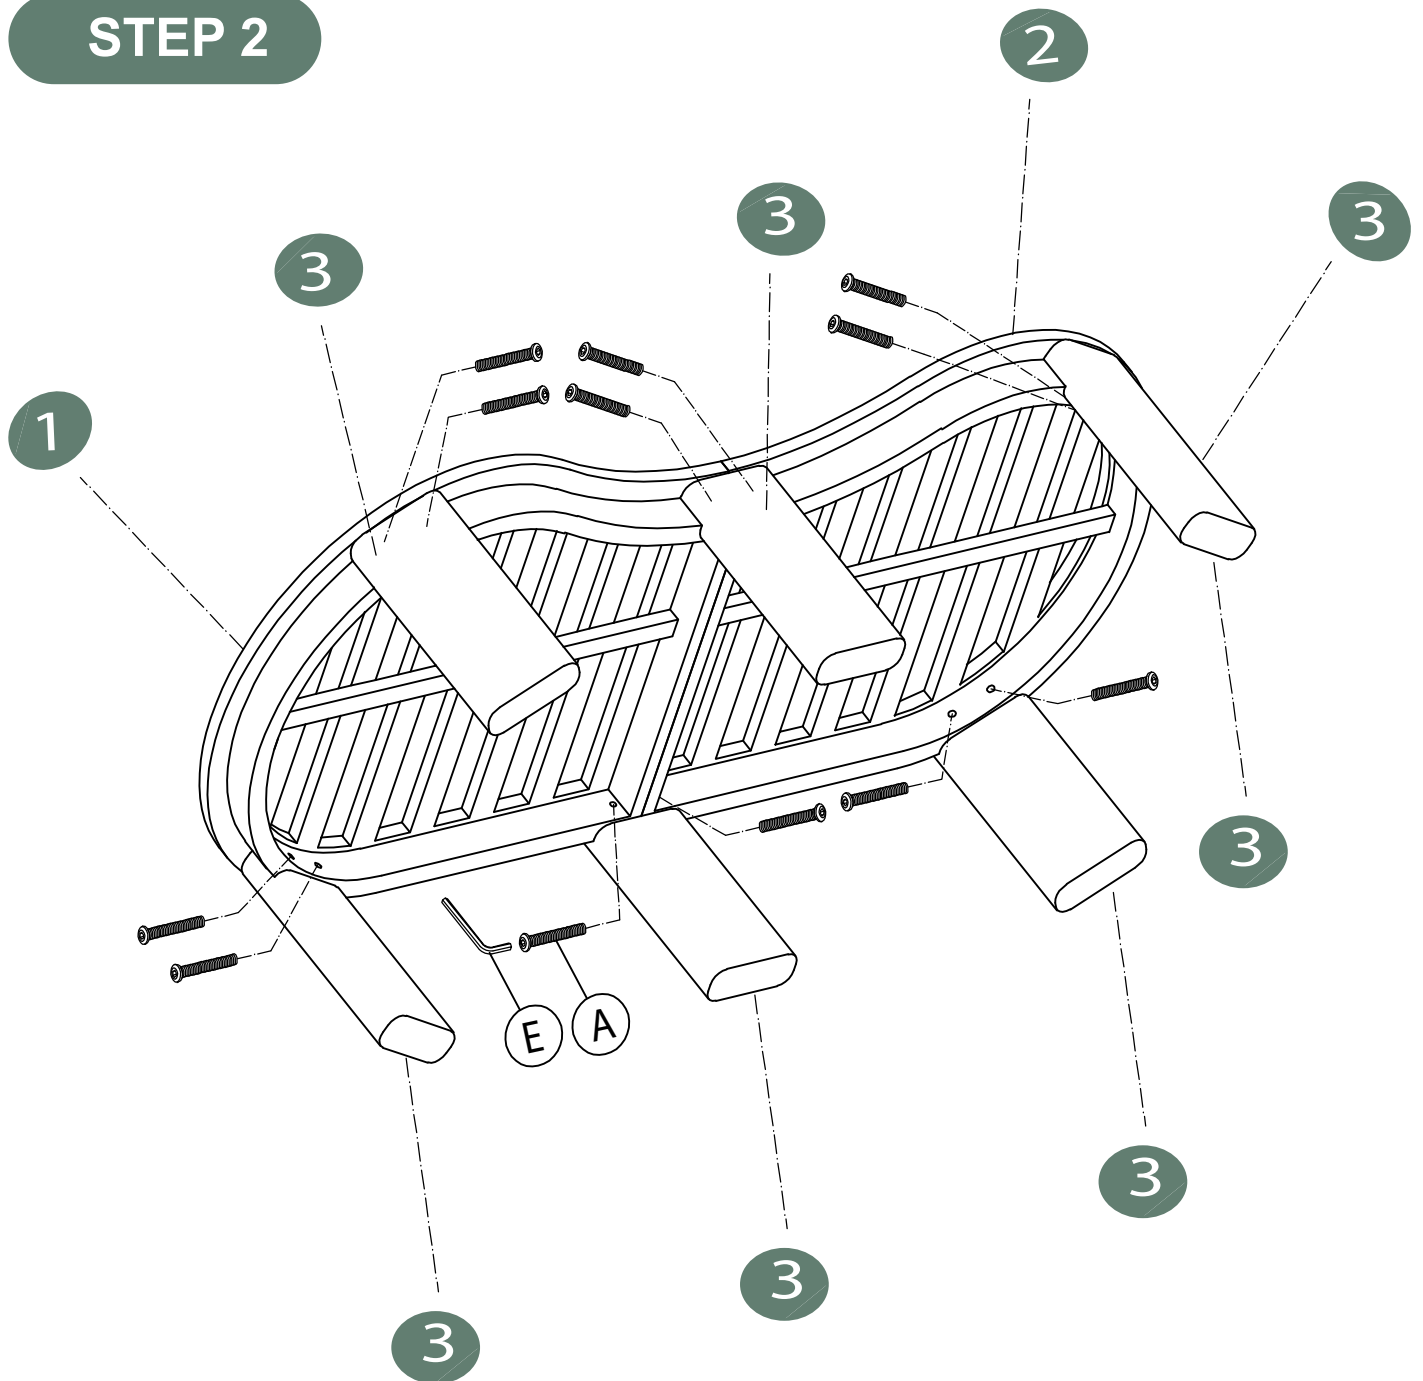


YOU WILL NEED

A  x12

E  x1

ASSEMBLY STEPS

 STEP 3

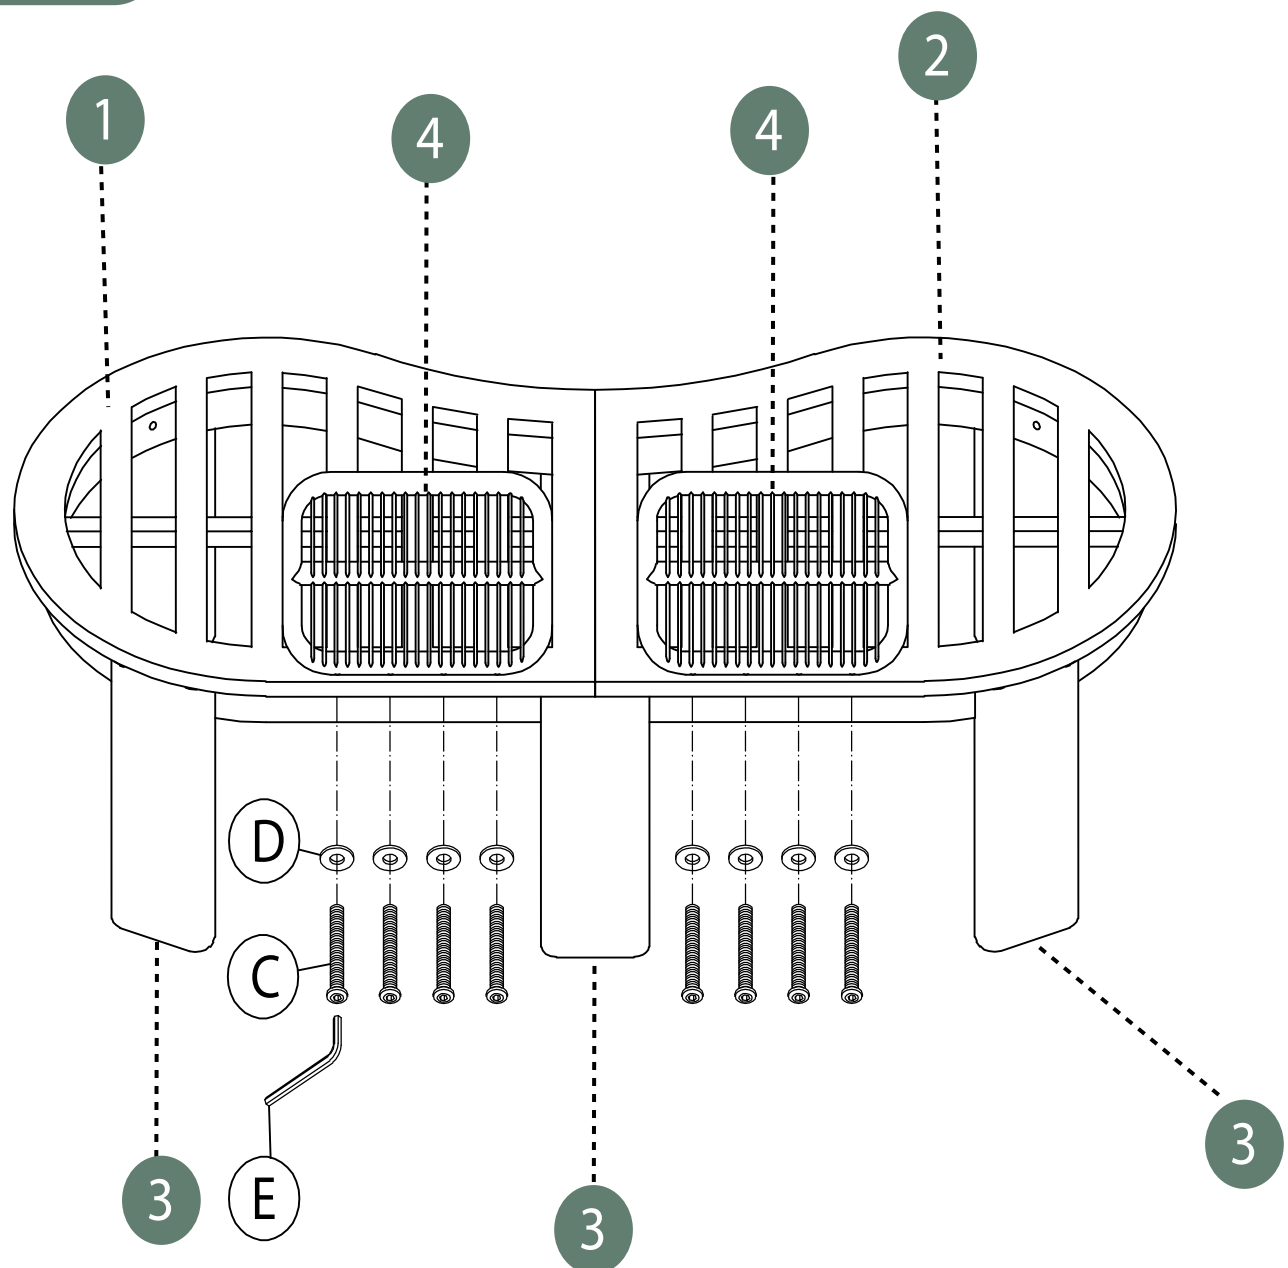

YOU WILL NEED

C  x8

 
 
D  x8

E  x1

ASSEMBLY STEPS

GREAT JOB. YOU'RE DONE!


To move the assembled unit, please lift up and do not drag to avoid breaking some parts and damaging the floor.

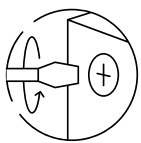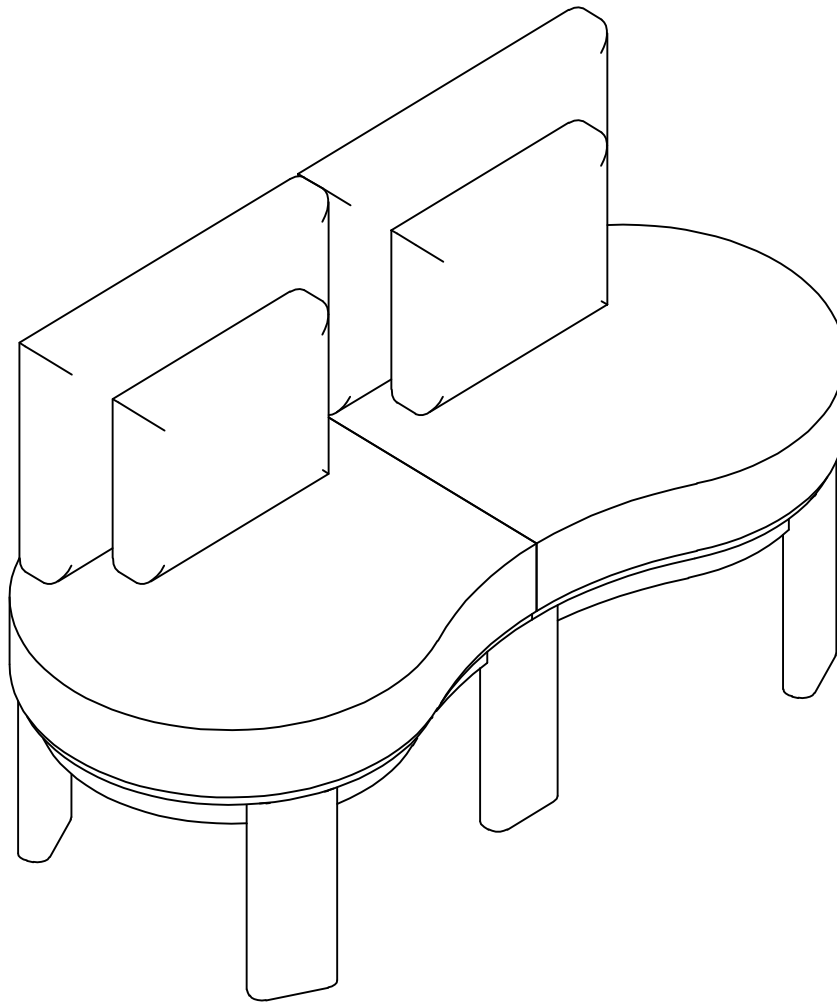

When you assemble this sofa, please make sure all screws are fastened tightly. After one or two months, please recheck and make sure all screws are still tight.



 Before using this sofa, please check if the support legs are in an upright position.

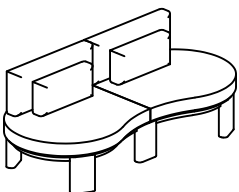

Archer 2 seater can hold weight up to 300kg. We don't suggest overloading it beyond its weight capacity.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Clean Gently

Use a mild wood cleaner or a mixture of water and mild dish soap to clean spills. Wipe the surface gently with a damp cloth, then dry it thoroughly.

Temperature and Humidity

For longevity, avoid prolonged direct sunlight or rain. Avoid direct contact with wet surfaces to prevent warping and cracking. Store indoor in extreme weather.

Extra Care For Timber

It is recommended to varnish it every 6 to 12 months, or as needed, depending on exposure to weather conditions.

Avoid Excessive Weight

Don't overload the sofa beyond its weight capacity.

***Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too!
Enjoy your furniture!***


For any question, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Outdoors

ARCHER

3 Seater Timber Outdoor Lounge

LUXO|Outdoors

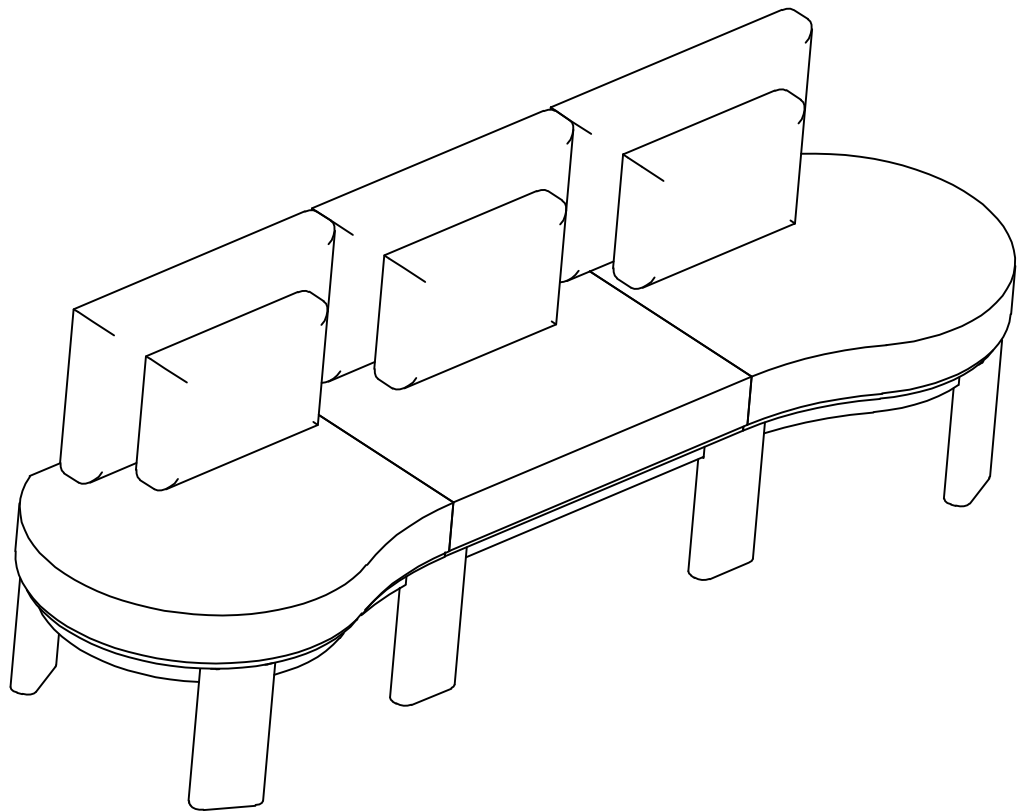 

Assembly requires 2 persons

 
WE RECOMMEND THE USE OF A POWER DRILL ON A LOW-SPEED SETTING FOR QUICK ASSEMBLY.



THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend 5 minutes in reading these tips before assembling the unit. Strictly follow the instructions step by step.

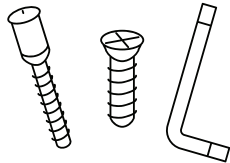


Tool Check

 Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

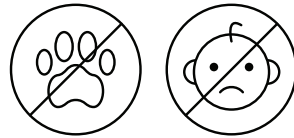


Safety Check

 Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

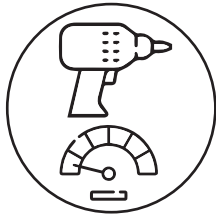


Use of Power Tool

 We recommend the use of a power drill on a low-speed setting for quick assembly.

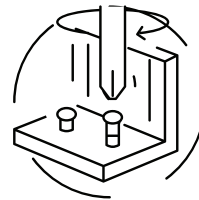

Easier Assembly Tip

 We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

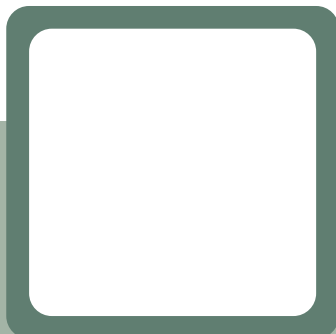


Scan the code to access
the assembling video

HARDWARE LIST


Please check if you have all the fittings and tools listed below.

 A



Bolt M8x40mm
20PCS

 B




M8x15mm
4PCS

C



Bolt M6x40mm
13PCS

 D




13PCS


E



 
1PC

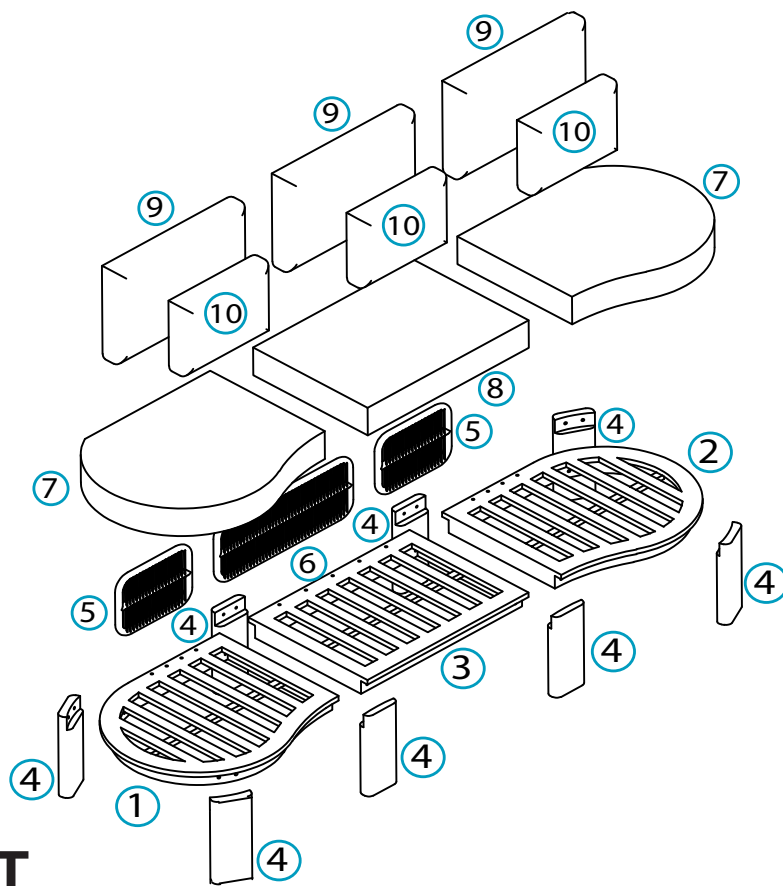


PARTS LIST

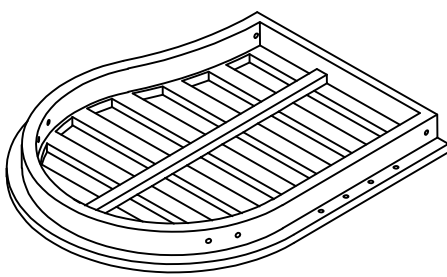 


1 X1

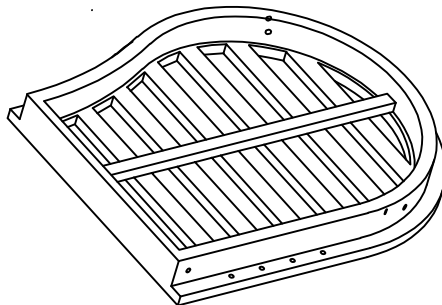 


2 X1

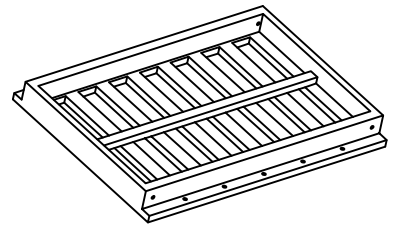 


3 X1

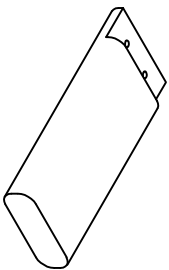 


4 X8

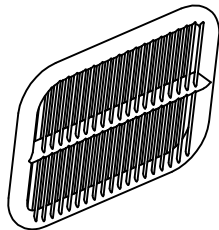 


5 X2

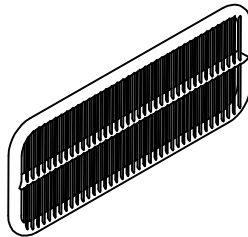 


6 X1

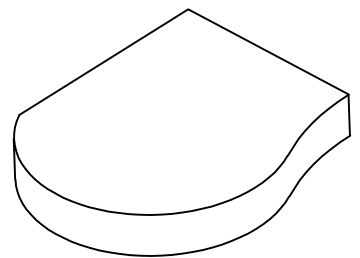 


7 X2

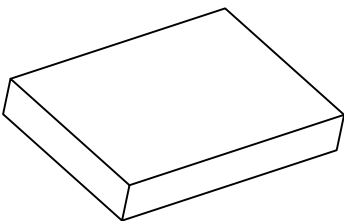 

8 X1

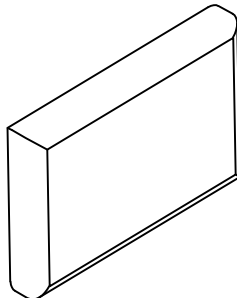 


9 X3

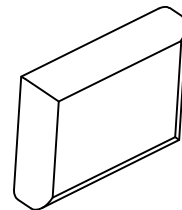 

10 X3

 STEP 1

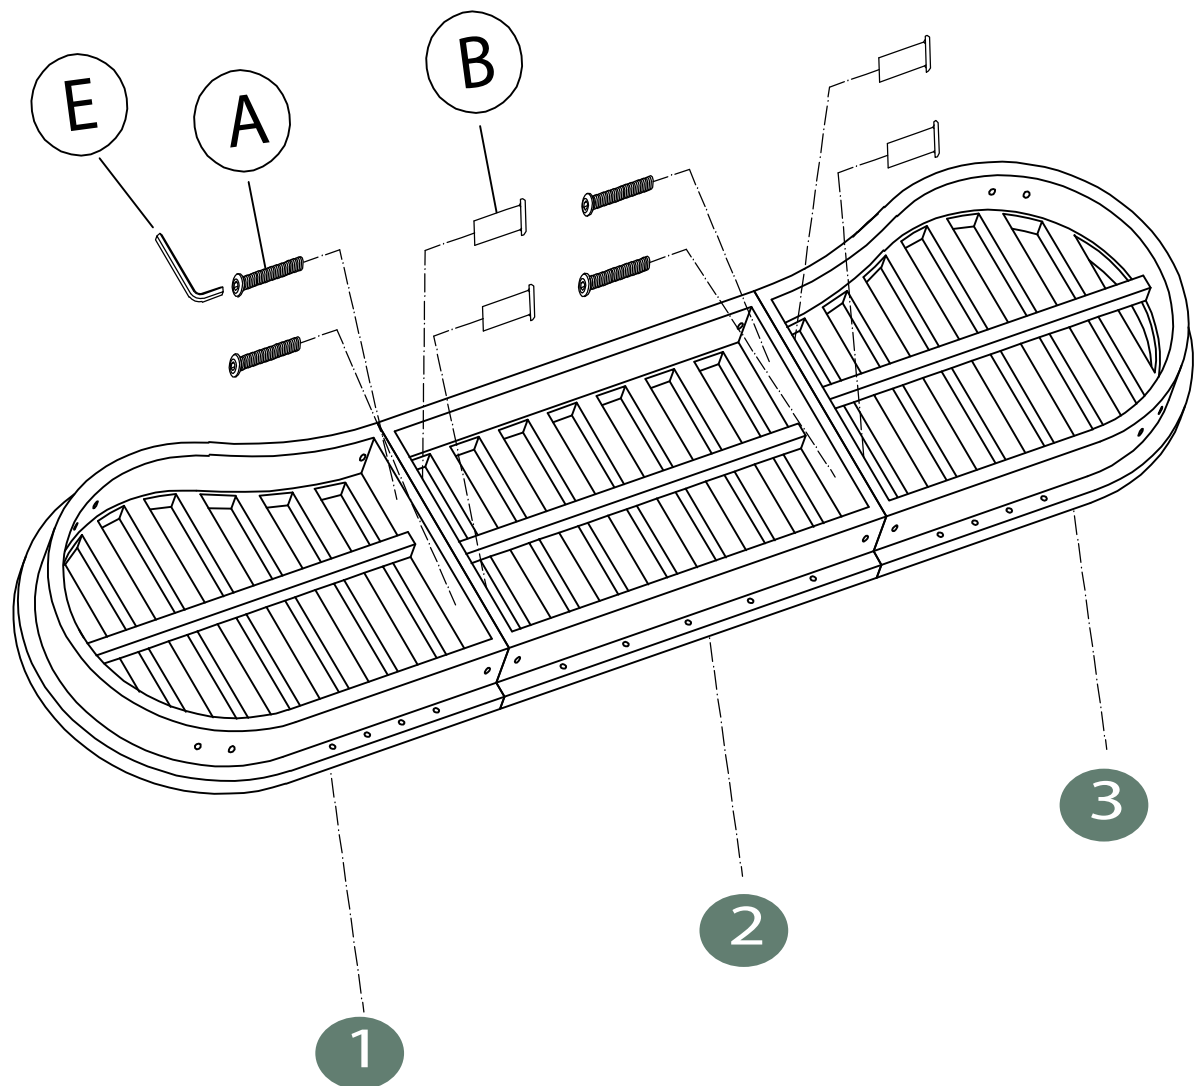

YOU WILL NEED

 
A  x4

B  x4

E  x1

ASSEMBLY STEPS

STEP 2

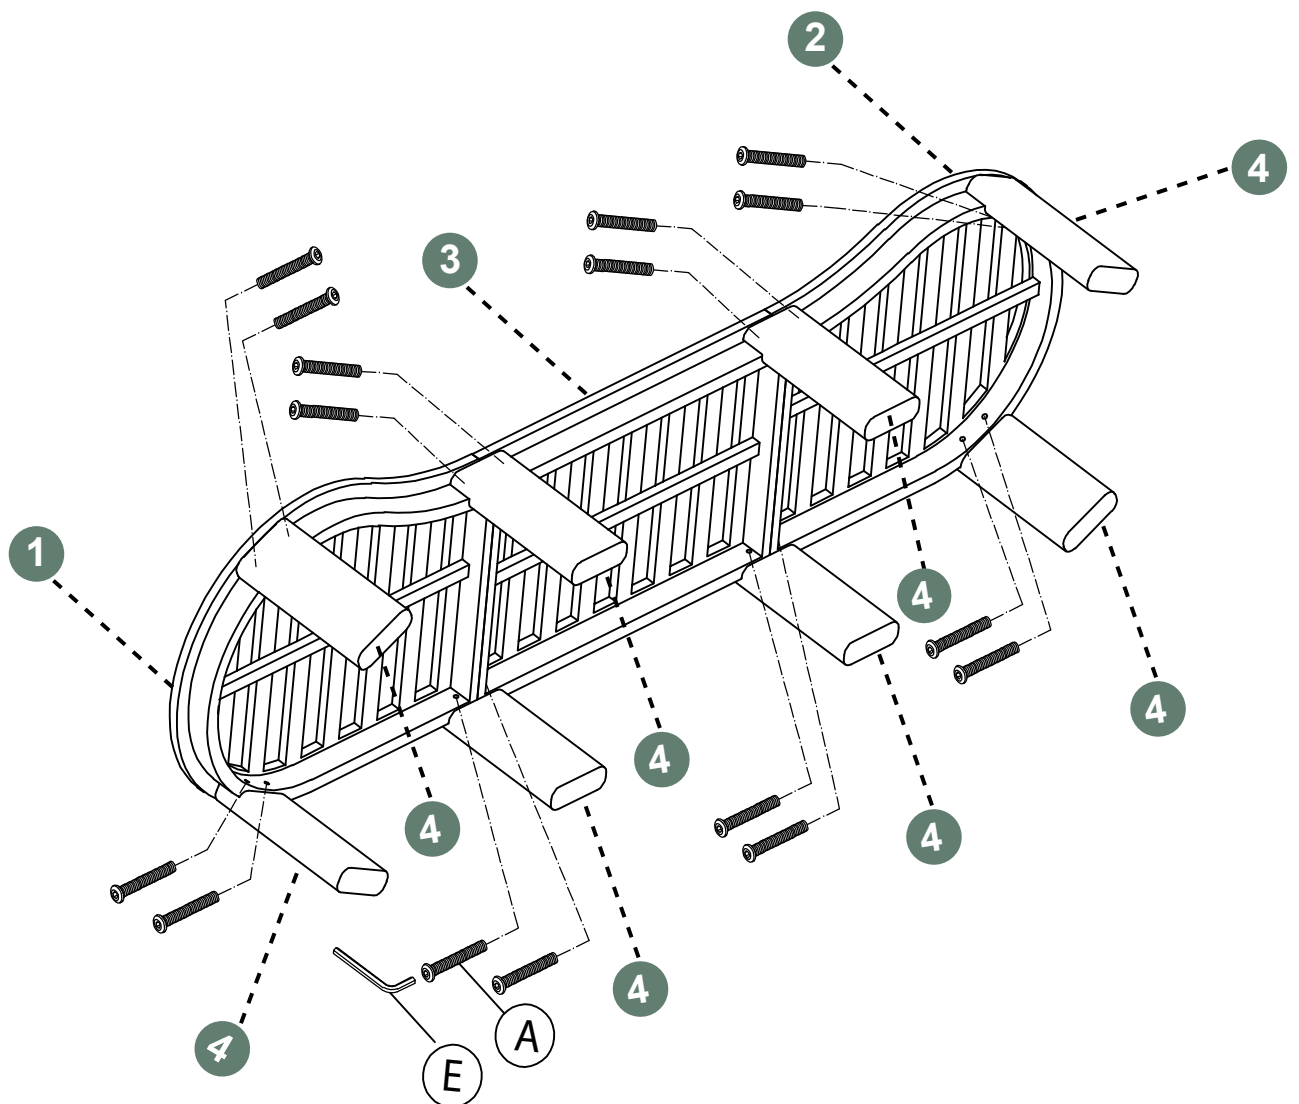


YOU WILL NEED

A  x16

E  x1

ASSEMBLY STEPS

 STEP 3


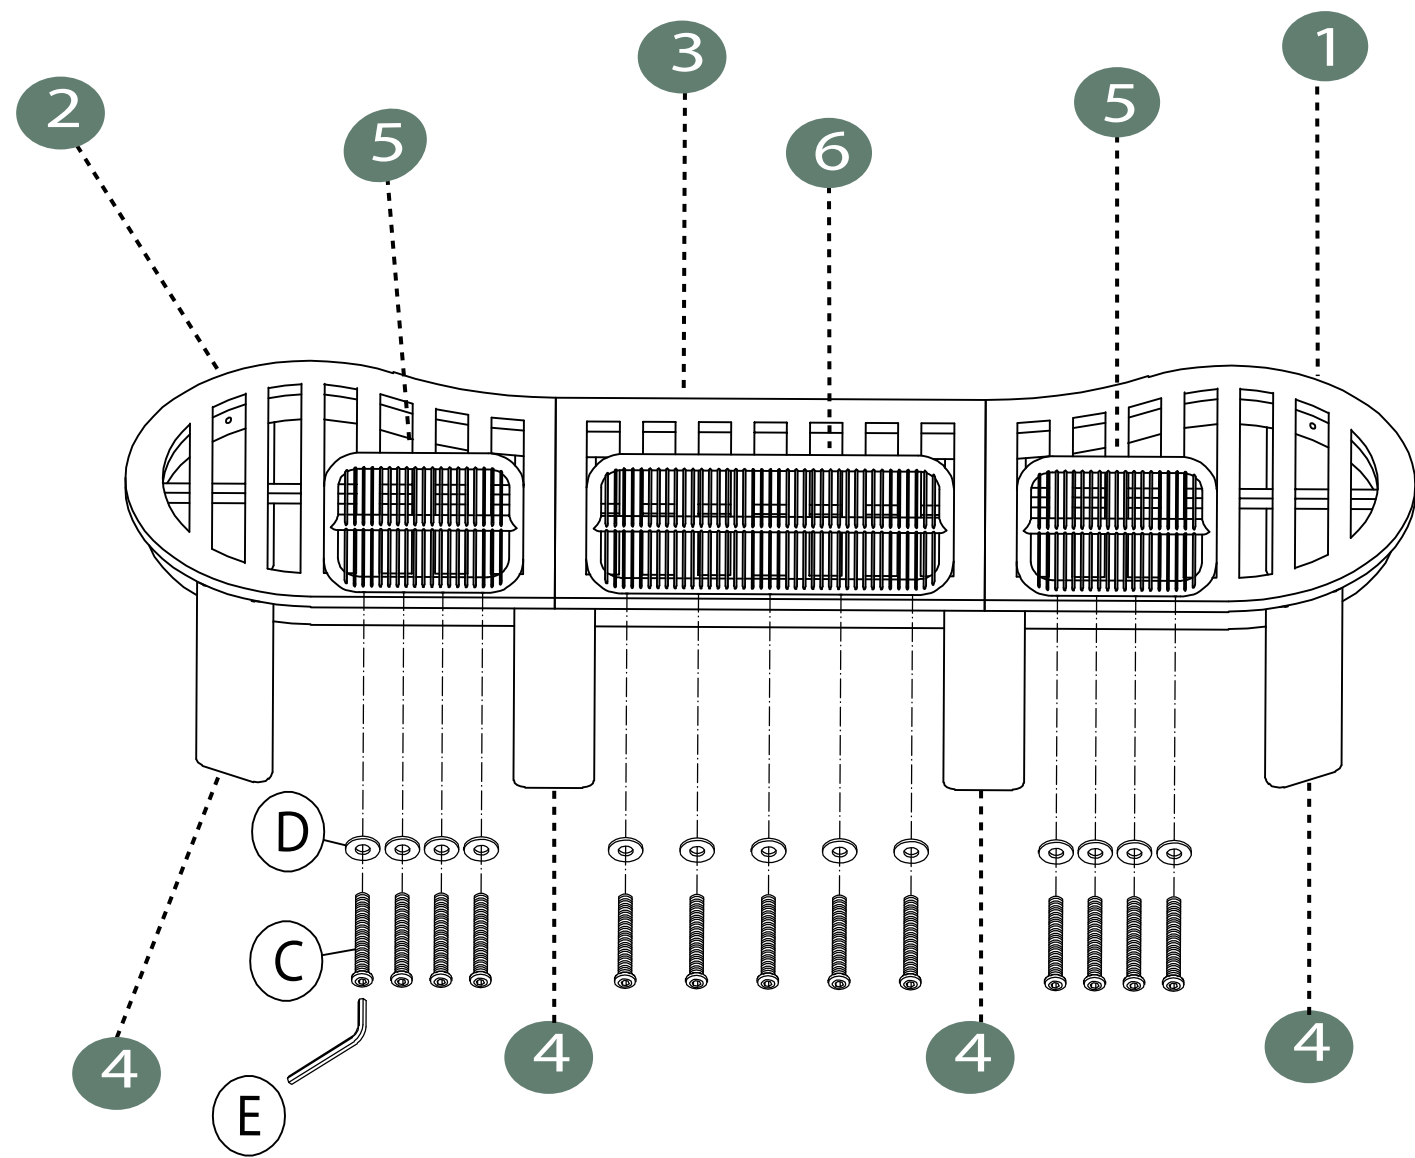


YOU WILL NEED	
C	 x13
D	 x13
E	 x1

ASSEMBLY STEPS

GREAT JOB. YOU'RE DONE!

  
To move the assembled unit, please lift up and do not drag to avoid breaking some parts and damaging the floor.

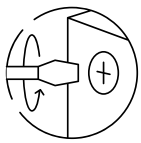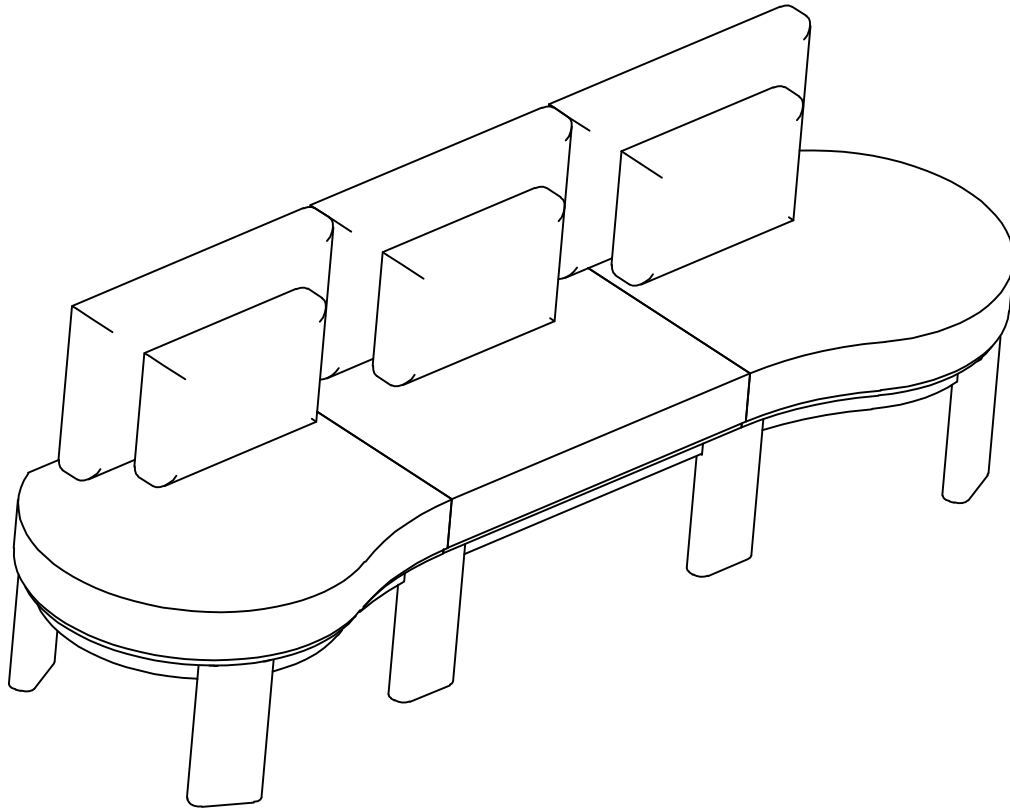

When you assemble this sofa, please make sure all screws are fastened tightly. After one or two months, please recheck and make sure all screws are still tight.



 Before using this sofa, please check if the support legs are in an upright position.

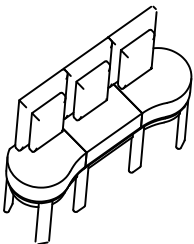

Archer 3 seater can hold weight up to 300kg. We don't suggest overloading it beyond its weight capacity.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Clean Gently

Use a mild wood cleaner or a mixture of water and mild dish soap to clean spills. Wipe the surface gently with a damp cloth, then dry it thoroughly.

Temperature and Humidity

For longevity, avoid prolonged direct sunlight or rain. Avoid direct contact with wet surfaces to prevent warping and cracking. Store indoor in extreme weather.

Extra Care For Timber

It is recommended to varnish it every 6 to 12 months, or as needed, depending on exposure to weather conditions.

Avoid Excessive Weight

Don't overload the sofa beyond its weight capacity.

***Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too!
Enjoy your furniture!***

For any question, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Outdoors