 


DARIO

LUXO|Outdoors

Dario 8 Seater Outdoor Dining Set

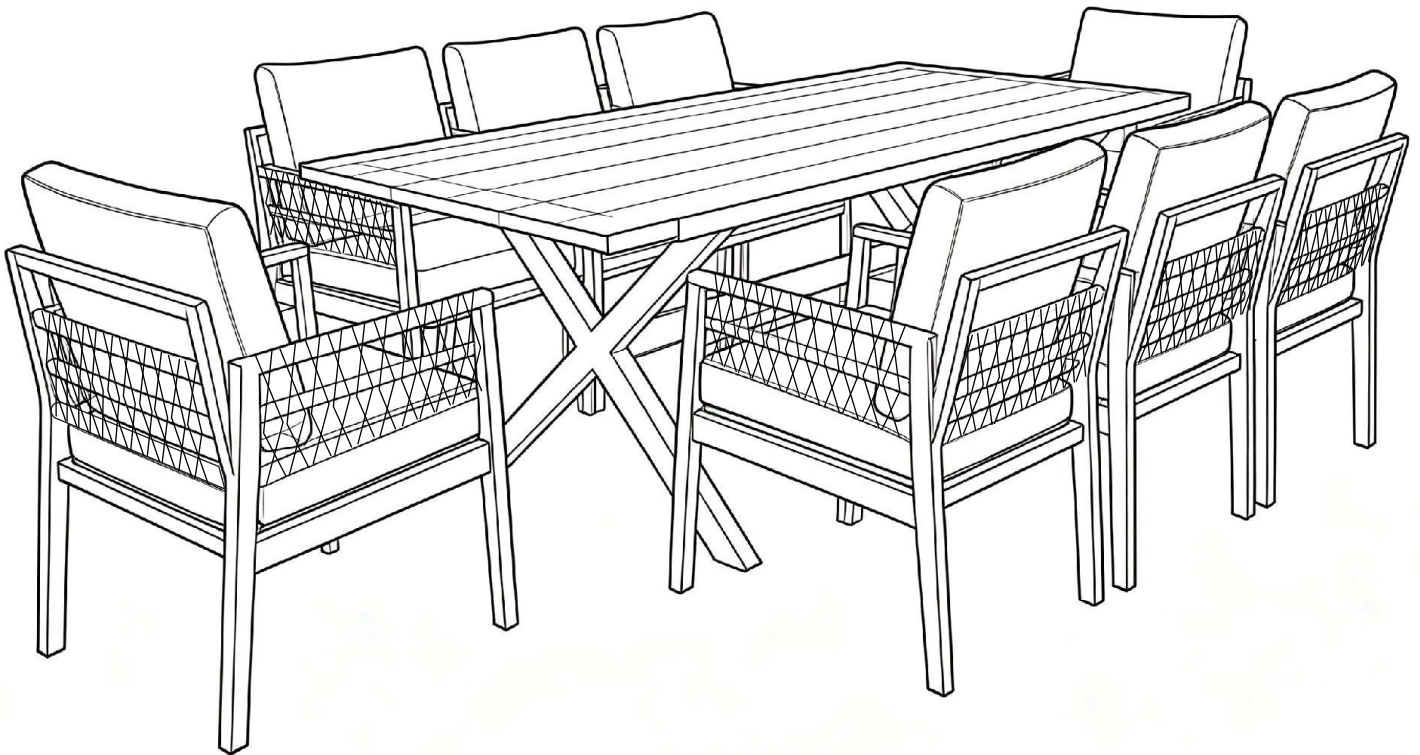

Assembly requires at least 2 persons

 
USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT INVALIDATES ANY CLAIM AS IT MAY DAMAGE THE PRODUCT MAKING IT UNSAFE TO USE.



THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend **5 minutes** in reading these tips before assembling the unit. Strictly follow the instructions step by step.

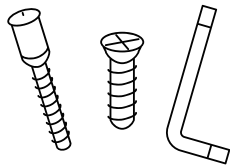


Tool Check

 Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

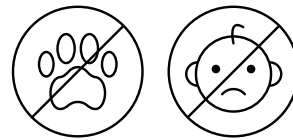


Safety Check

 Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

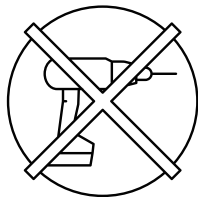

Do Not Use Power Tool

 Do not use any power tool for assembly as it may damage the unit and make it unsafe to use. Use of any power tool will invalidate any claim you may have.

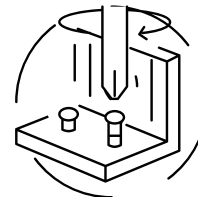

Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

HARDWARE LIST

 
Please check if you have all the fittings and tools listed below.

A




M6x20mm BOLT
16 PCS

B



M6x30mm BOLT
16 PCS

 C



M6x35mm BOLT
32 PCS

D

 


FLAT WASHER
64 PCS


E




ALLEN KEY
1 PC

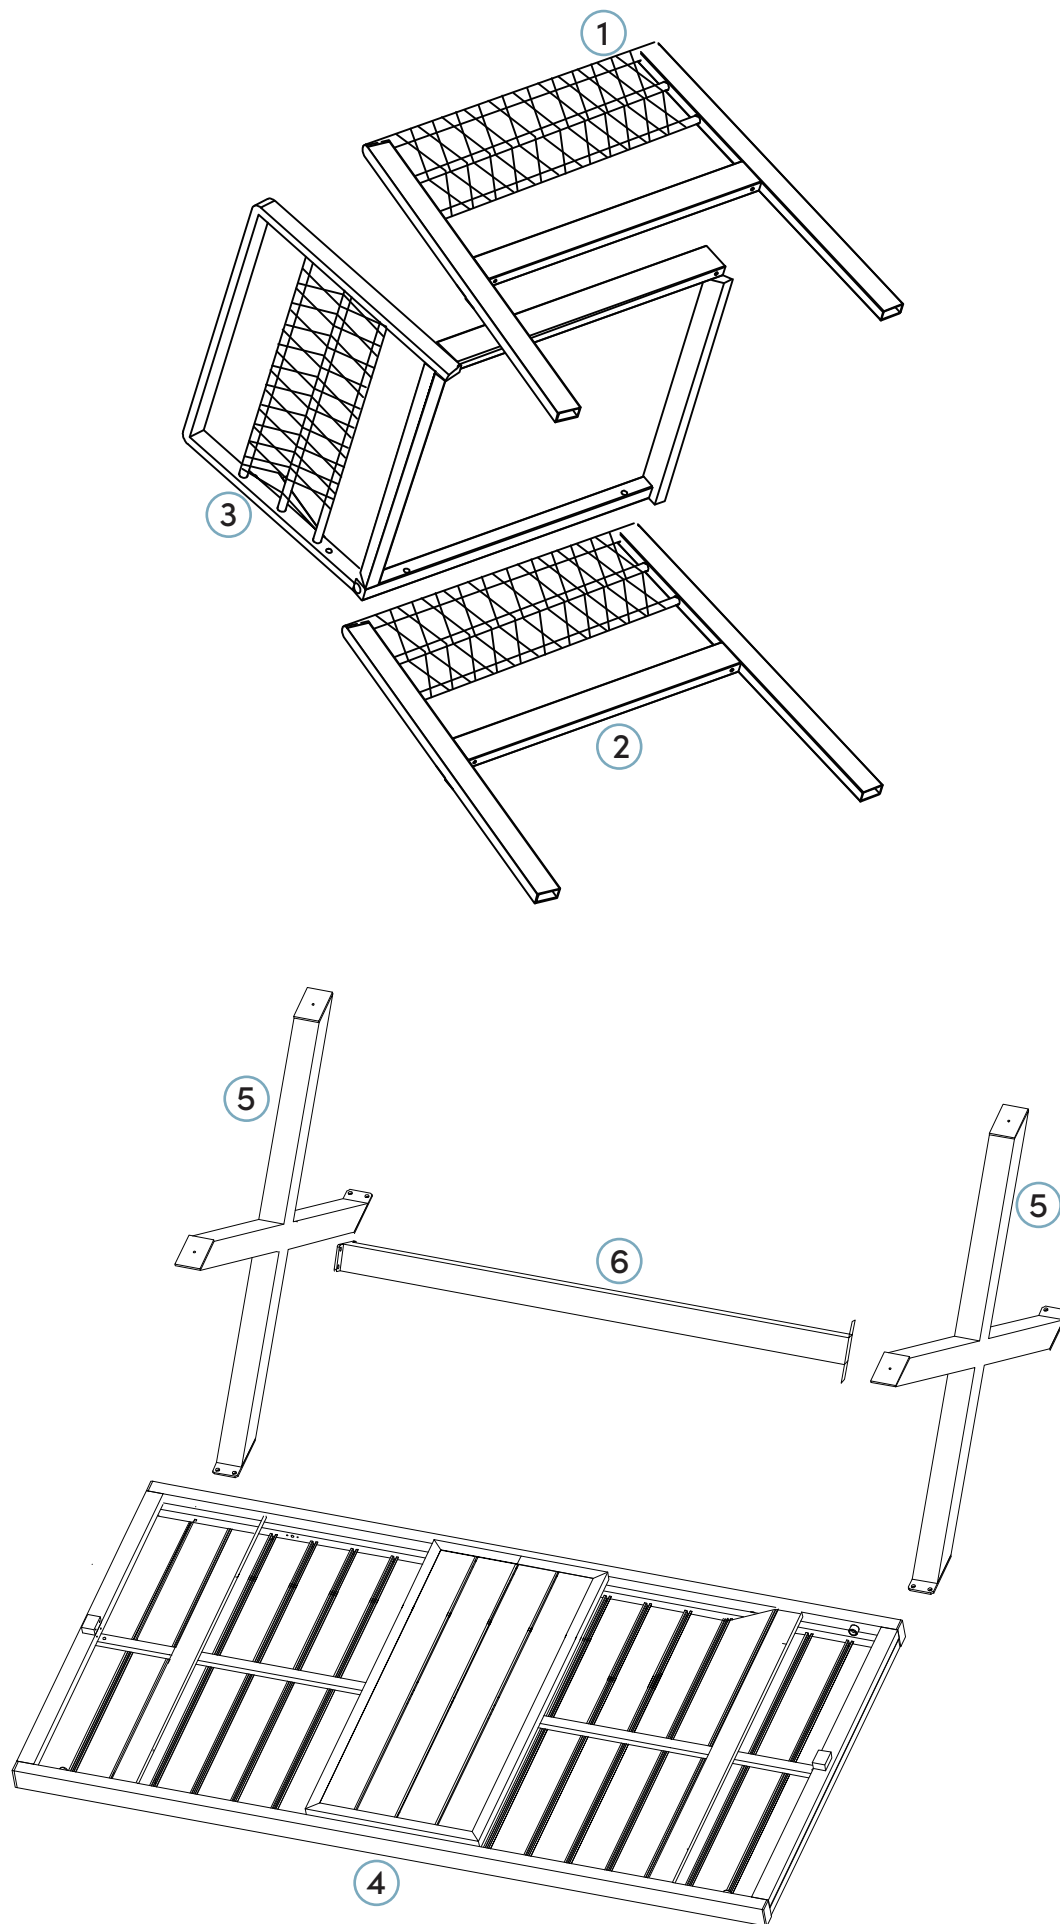


PARTS LIST

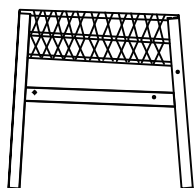 


1 x8

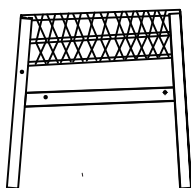 


2 x8

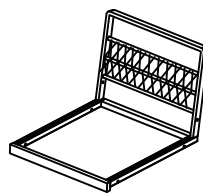 

3 x8

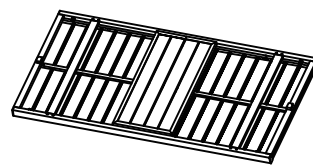 


4 x1

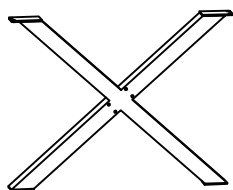 


5 x2



 6 x1




7 x8


 


8 x8

 
STEP 1

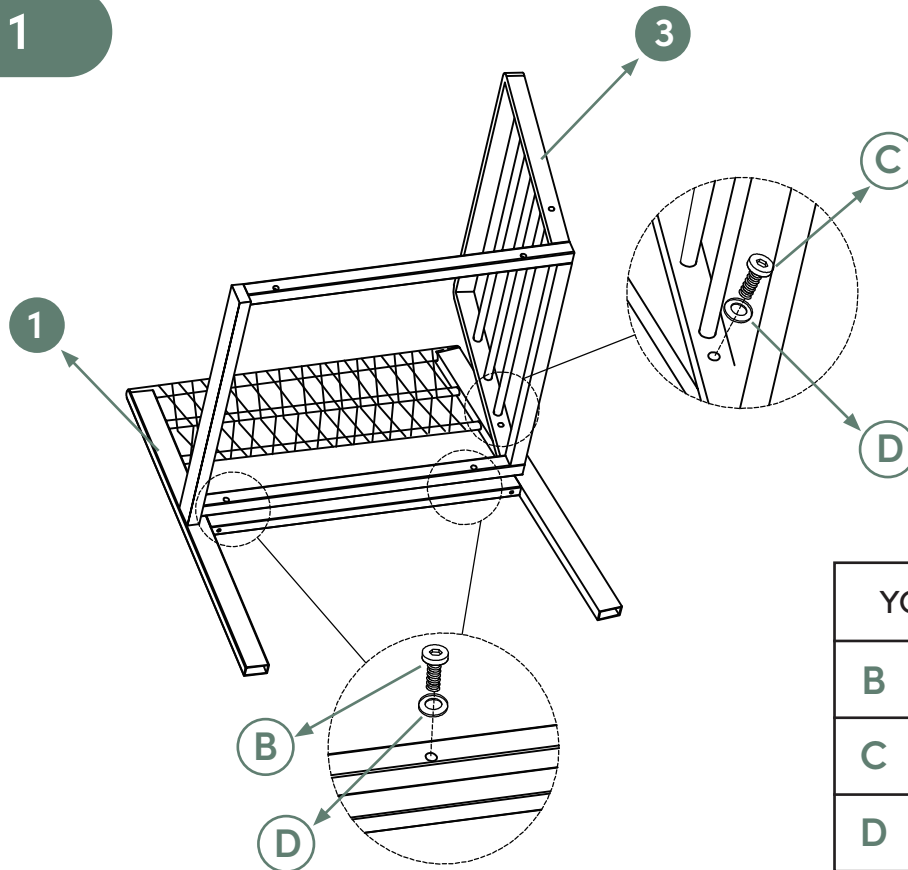



YOU WILL NEED

  B	 x4
C	 x8
D	 x4

 
STEP 2

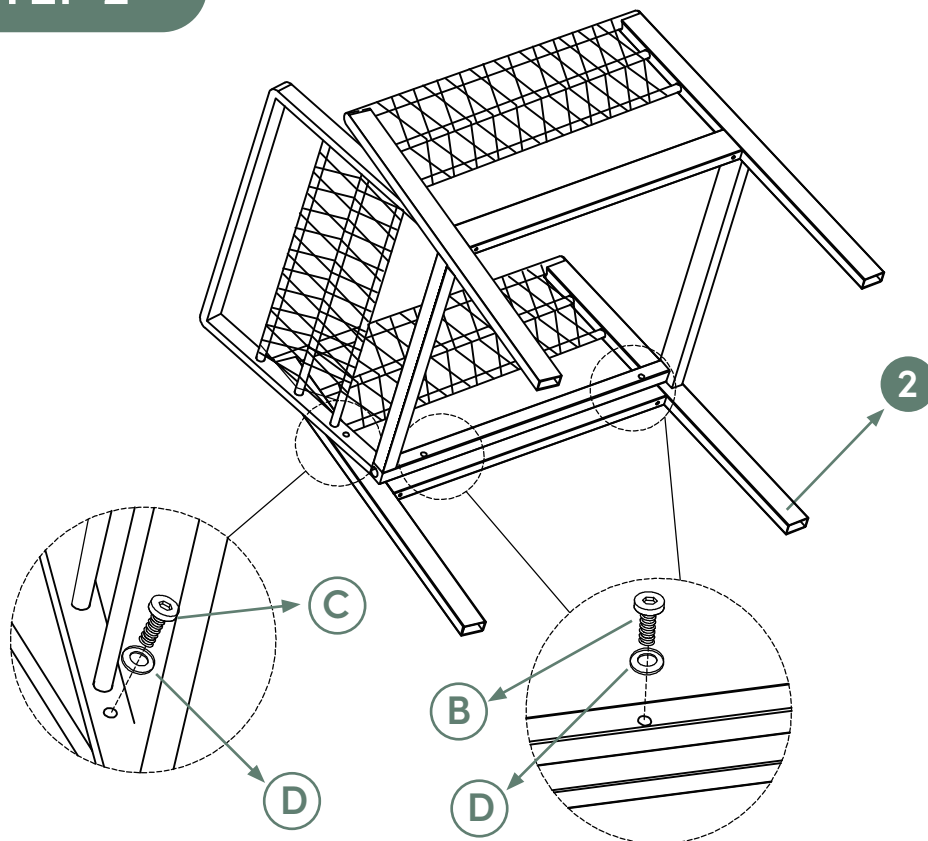

YOU WILL NEED

  
B	 x4
C	 x8
D	 x4

 STEP 3

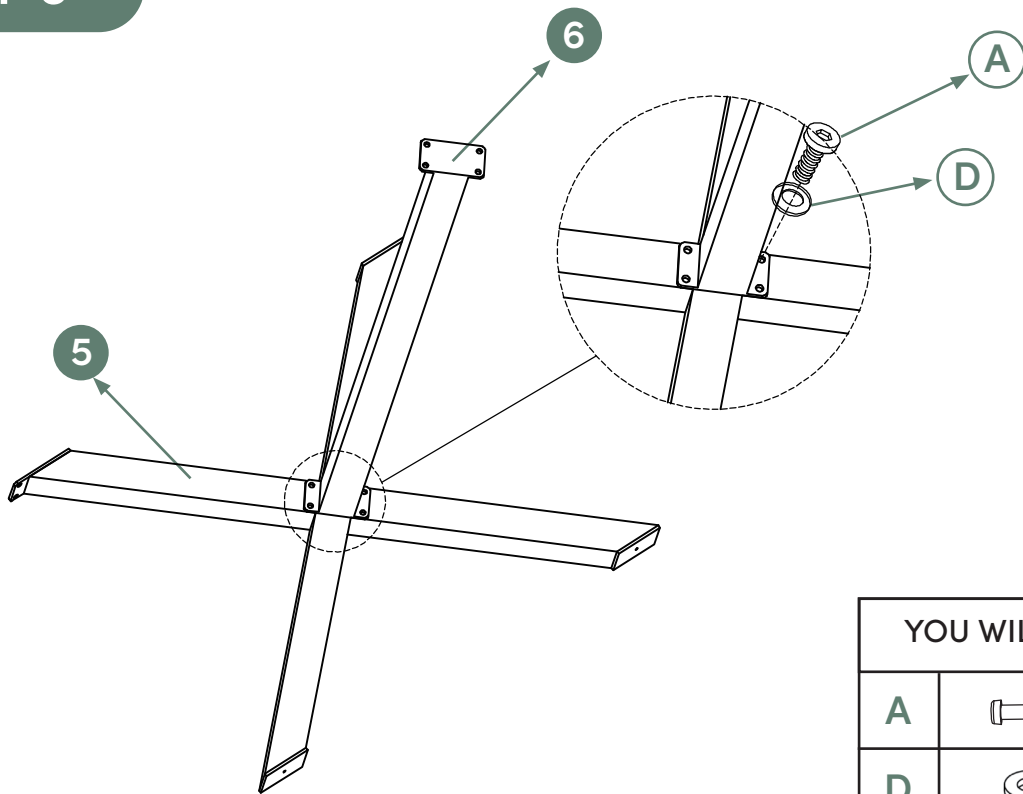

YOU WILL NEED		
A		x12
D		x12

 
STEP 4

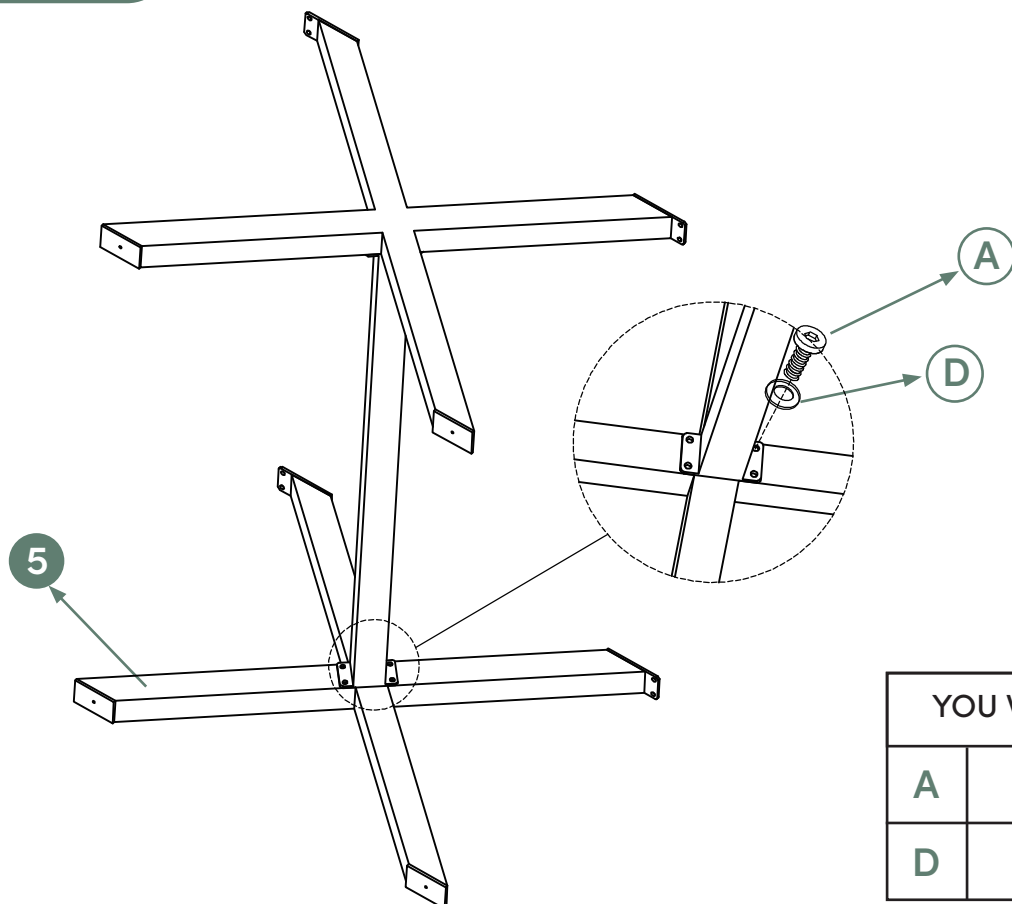


YOU WILL NEED		
A		x12
D		x12

STEP 5

 
The bottom button and red button serve as lock and unlock controls respectively. Once you adjust the desktop to your desired extended or retracted position, press the bottom button inward to lock the desktop in place. Before you need to readjust its state, press the red button first to enable the stretching and retracting movement.

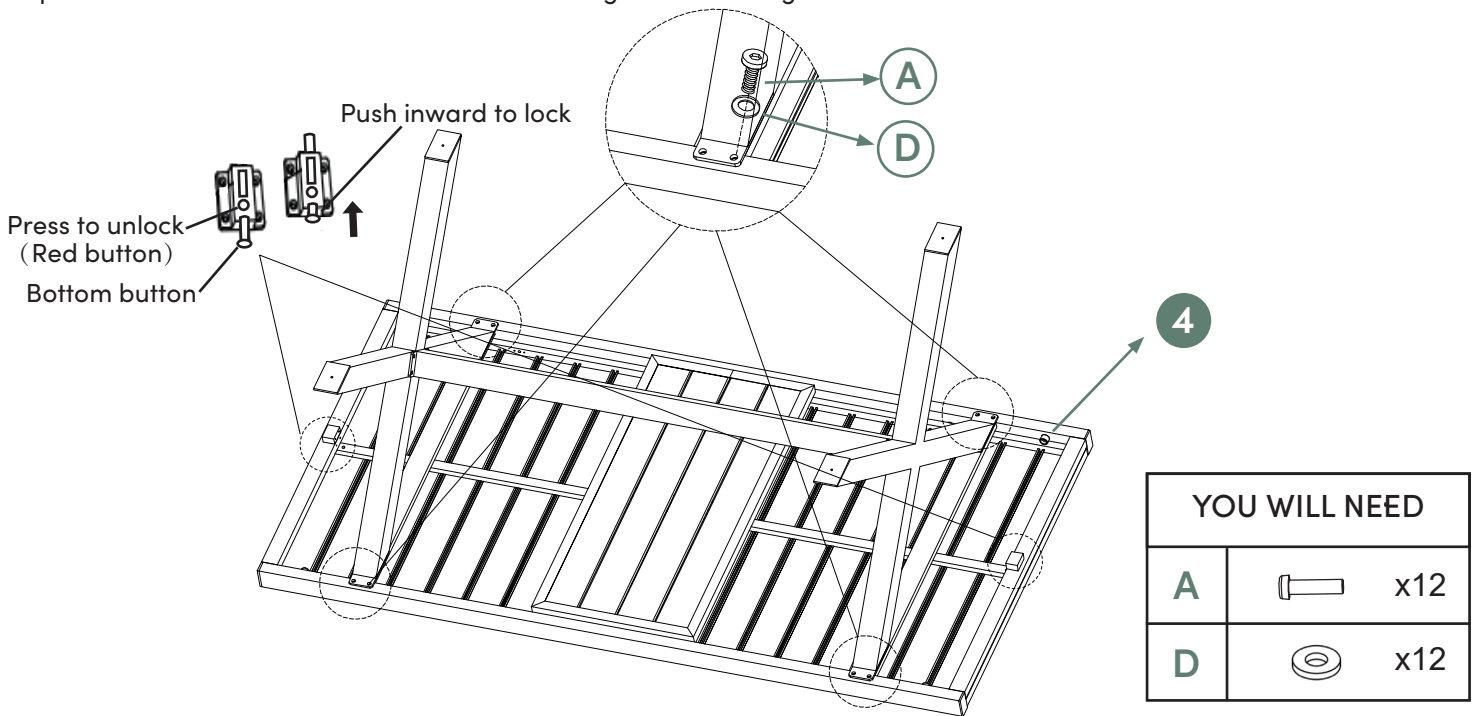

 
STEP 6

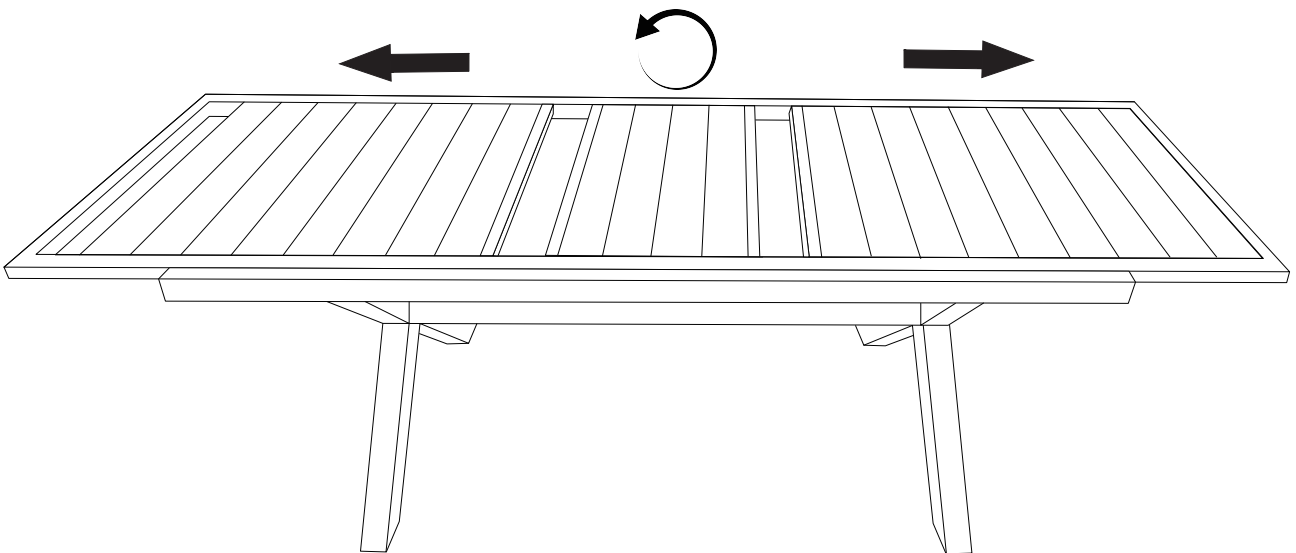

 STEP 7


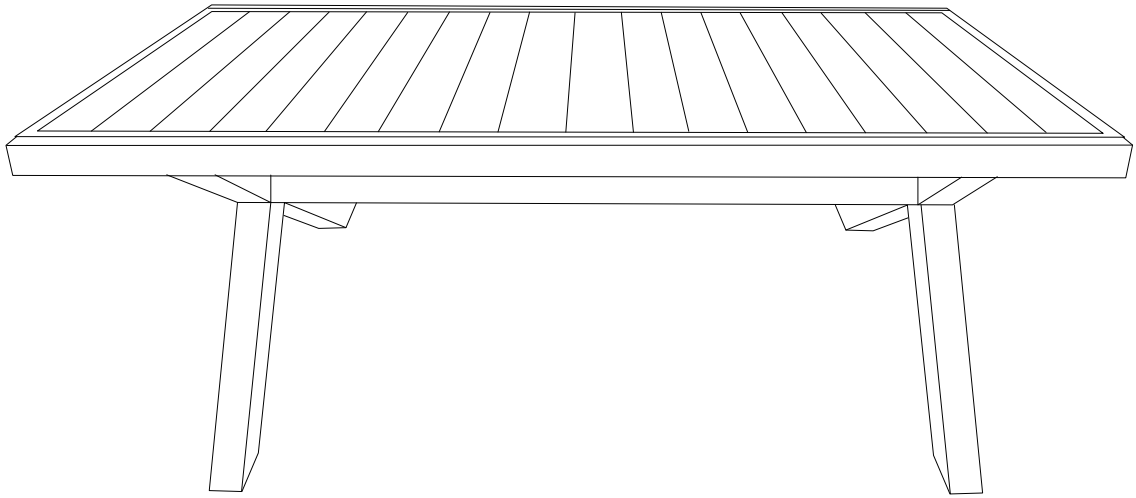


 STEP 8

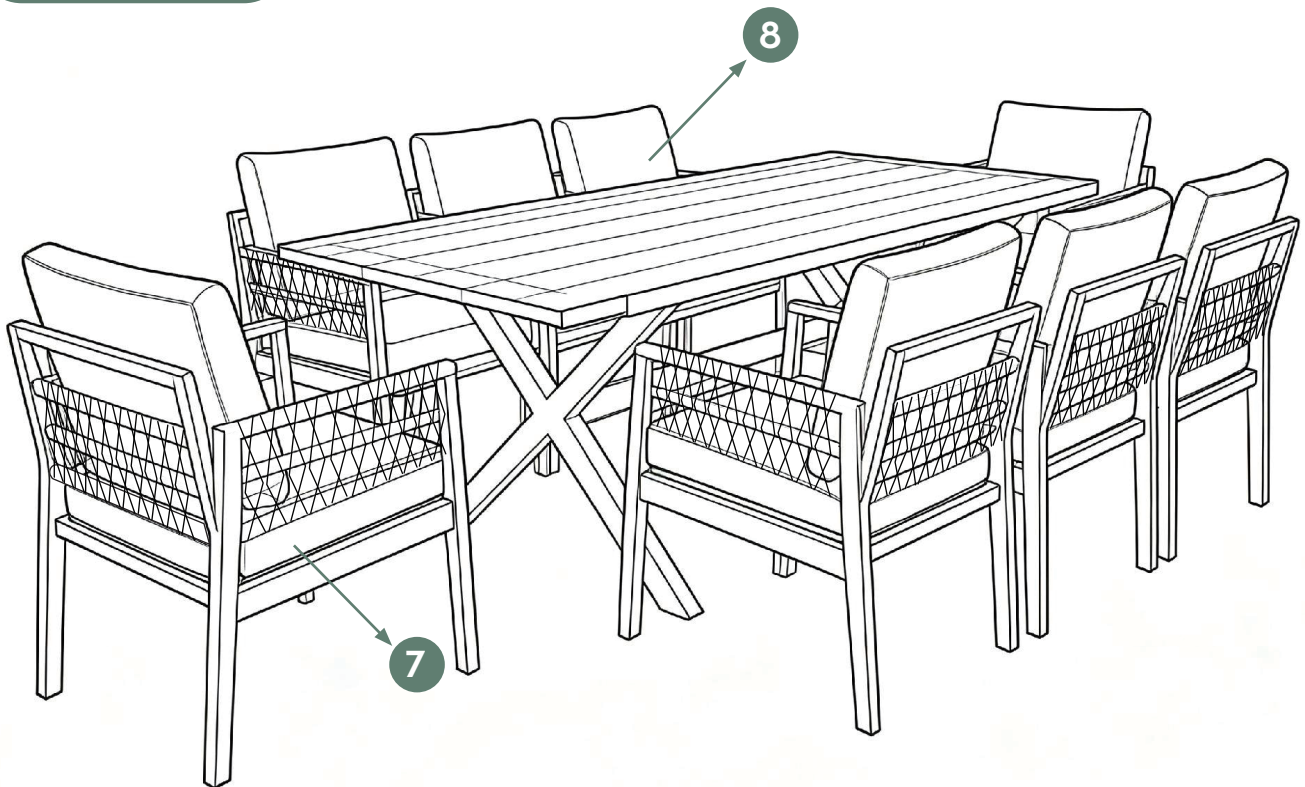

GREAT JOB. YOU'RE DONE!

  To move the assembled unit, please lift it up and do not drag to avoid breaking some parts and damaging the floor.

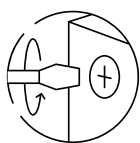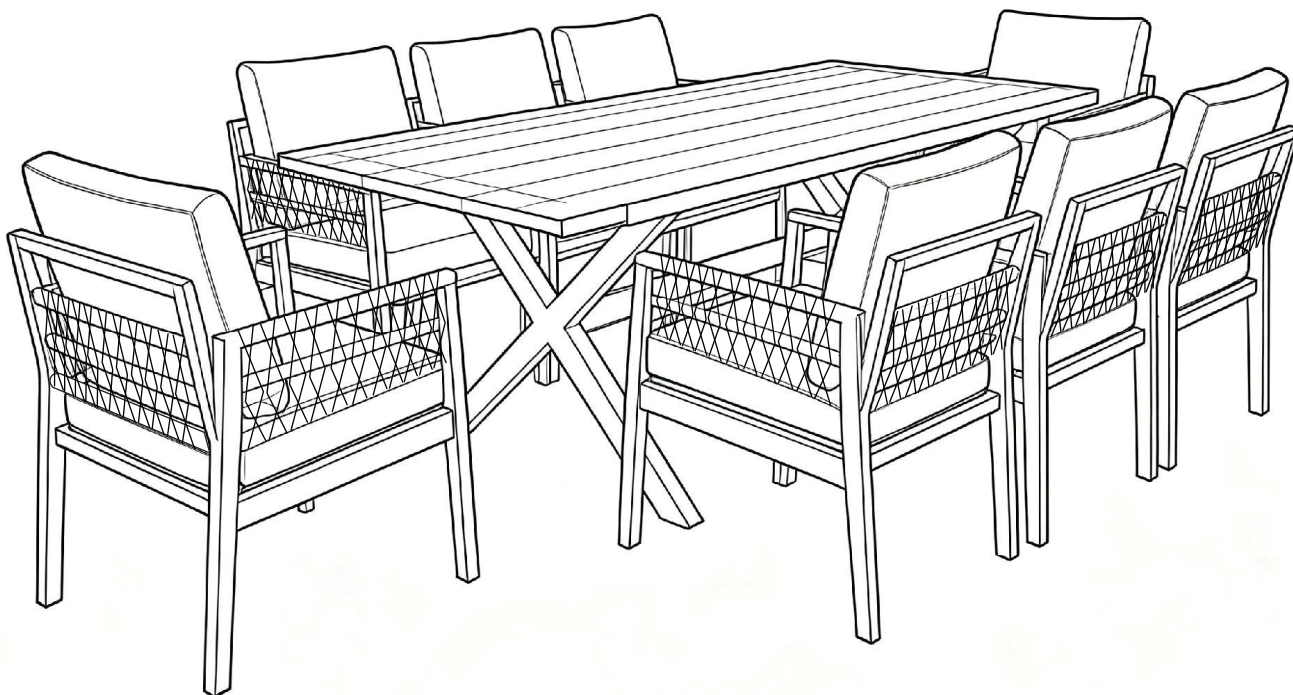

When you assemble this dining set, please make sure all screws are fastened tightly. After one or two months, please recheck and make sure all screws are still tight.



Before using this outdoor dining set, please check if the support legs under them are in an upright position. Ensure that they are always in an upright position.



Our single chair can hold weight of up to 160kg, and our dining table can hold weight of up to 50kg.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Aluminum Furniture

Clean aluminum frames with a soft cloth and mild soapy water. Avoid abrasive cleaners or brushes to prevent surface scratches. During extreme weather, cover or store furniture indoors.

Temperature and Humidity

For product longevity, avoid prolonged exposure to direct sunlight.

Cushions

Regularly brush off dirt and debris with a soft-bristle brush. Spot clean stains promptly with a mild detergent and water solution. Cushion covers have zippers and are machine washable. Ensure cushions are fully air-dried to prevent mold & mildew growth before using or storing.

Avoid Excessive Weight

Don't overload surfaces or seats beyond their weight capacity.

***Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too!
Enjoy your furniture!***

For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Outdoors