


## Curved Bedside Table With Ball Feet

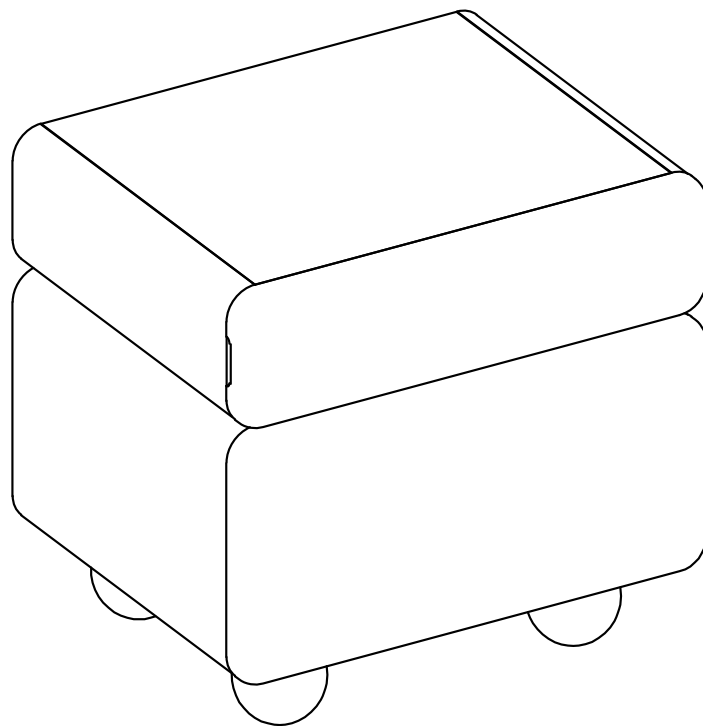


We recommend the use of a power drill on a low-speed setting for quick assembly.



# THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend **5 minutes** in reading these tips before assembling the unit. Strictly follow the instructions step by step.

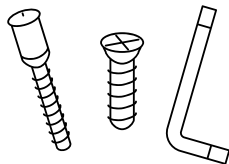


## Tool Check

Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

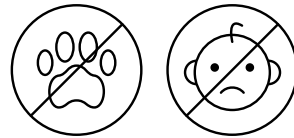


## Safety Check

Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

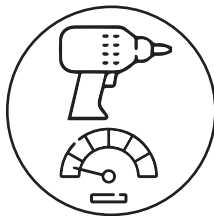

## Use of Power Tool

We recommend the use of a power drill on a low-speed setting for quick assembly.

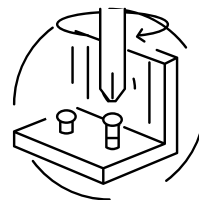

## Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

# HARDWARE LIST

---

Please check if you have all the fittings and tools listed below.

(A)




CAM SCREW 40mm  
**16 PCS**

(B)




CAM LOCK 15mm  
**16 PCS**

(C)

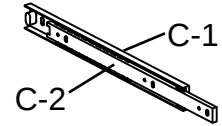


DRAWER RUNNER  
**2 PCS**

(D)




WOODEN DOWELS 8\*40mm  
**8 PCS**

(E)




SCREW 3.5\*14mm  
**20 PCS**

(F)



SCREW 3.5\*35mm  
**4 PCS**

(G)




SCREW 8\*25mm  
**16 PCS**

(H)




WASHER M8  
**32 PCS**

(I)



ALLEN KEY  
**1 PC**

(J)




CONCEALED HINGE  
**2 PCS**

(K)




SCREW 6\*13mm  
**16 PCS**

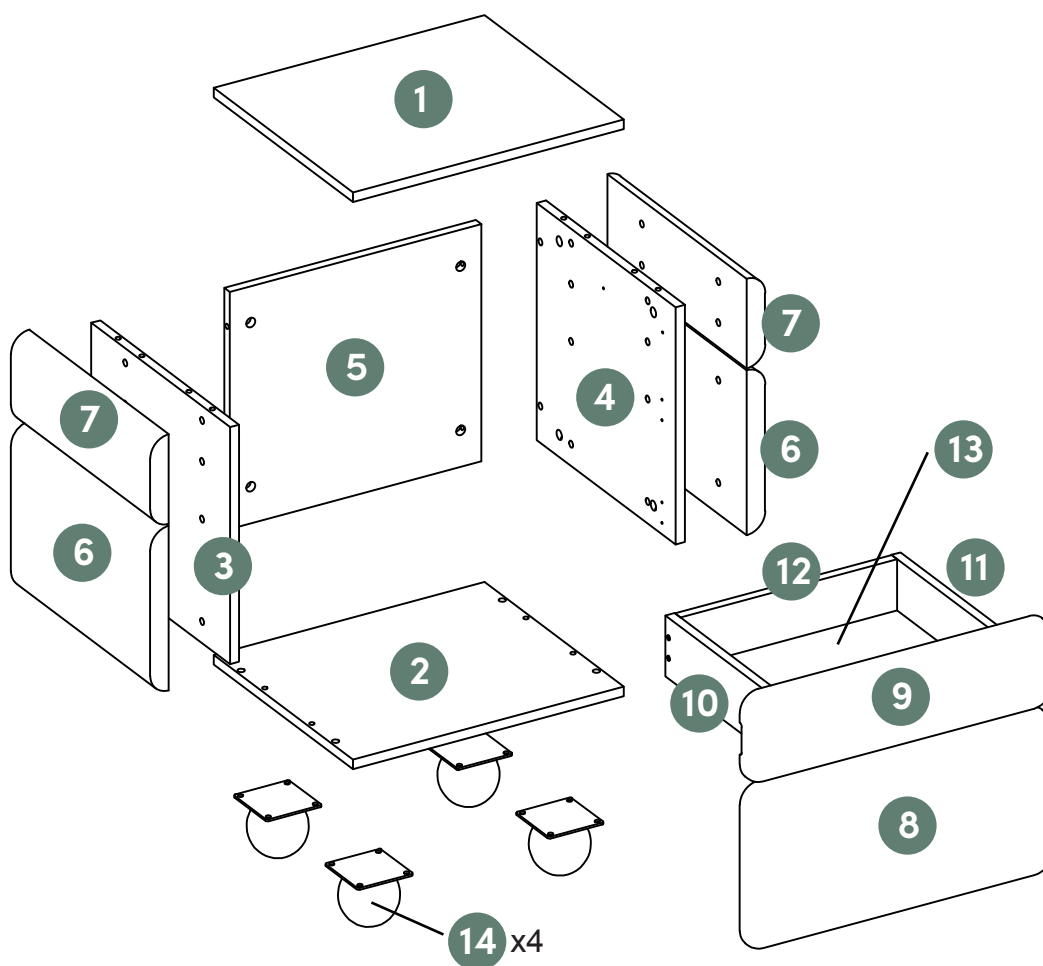


## PARTS LIST


---



**1** x1  
440x378x15mm



**2** x1  
440x378x15mm




**3** x1  
377x370x15mm




**4** x1  
377x370x15mm

# PARTS LIST


---

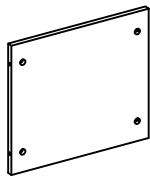


**5** x1  
409x370x15mm




**6** x2  
378x257x30mm



**7** x2  
378x140x30mm

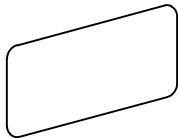

**8** x1  
500x257x22mm



**9** x1  
500x140x22mm




**10** x1  
299x95x15mm



**11** x1  
299x95x15mm



**12** x1  
352x95x15mm




**13** x1  
362x294x5mm



**14** x4  
φ100mm


## STEP 1

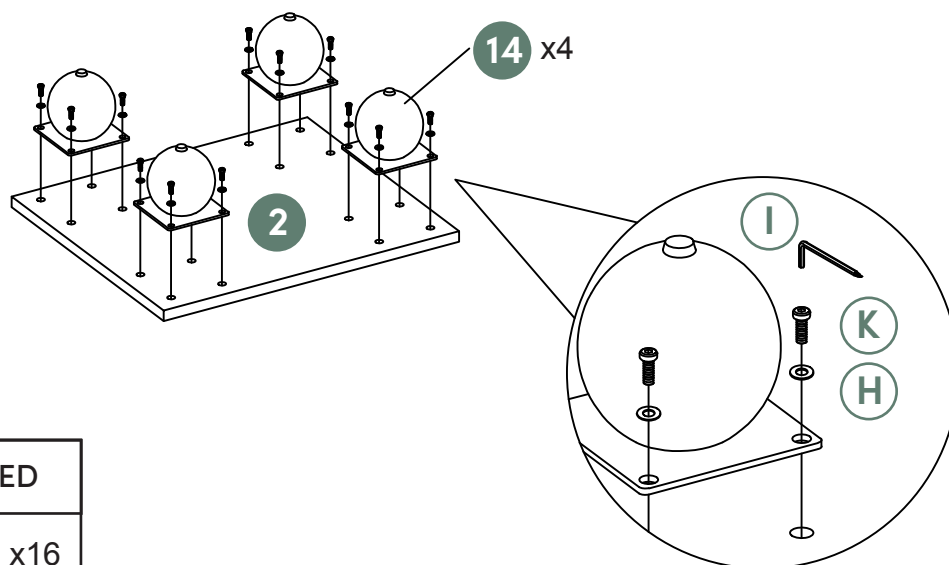

### YOU WILL NEED

|   |  |     |
|---|--|-----|
| H |  | x16 |
| K |  | x16 |
| I |  | x1  |

## STEP 2

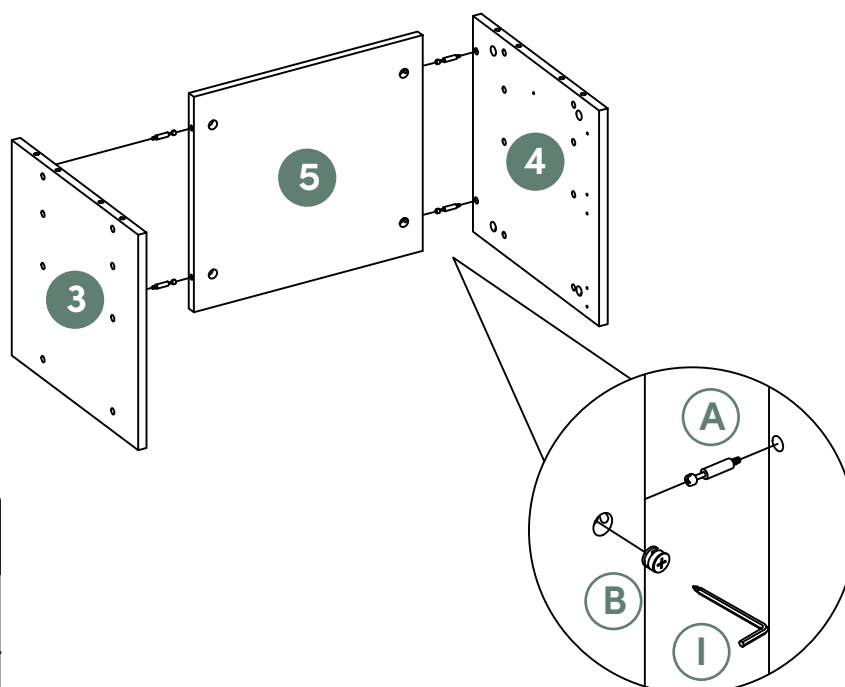



### YOU WILL NEED

|   |  |    |
|---|--|----|
| A |  | x4 |
| B |  | x4 |
| I |  | x1 |


## ASSEMBLY STEPS


## STEP 3

| YOU WILL NEED |                                                                                   |    |
|---------------|-----------------------------------------------------------------------------------|----|
| A             |  | x4 |
| B             |  | x4 |
| D             |  | x4 |
| I             |  | x1 |

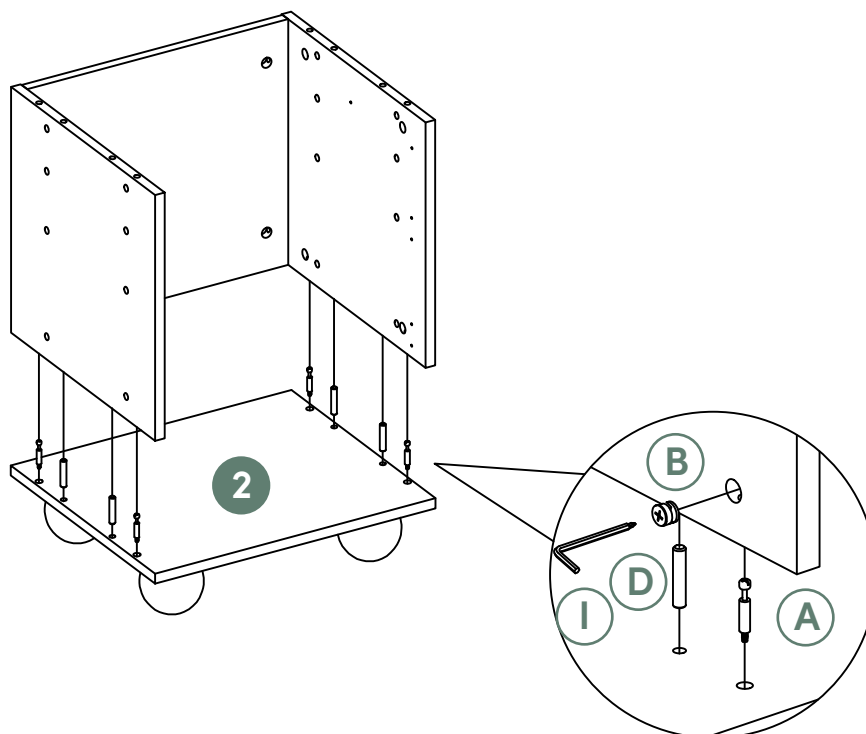

## STEP 4


| YOU WILL NEED |                                                                                     |    |
|---------------|-------------------------------------------------------------------------------------|----|
| A             |  | x4 |
| B             |  | x4 |
| D             |  | x4 |
| I             |  | x1 |

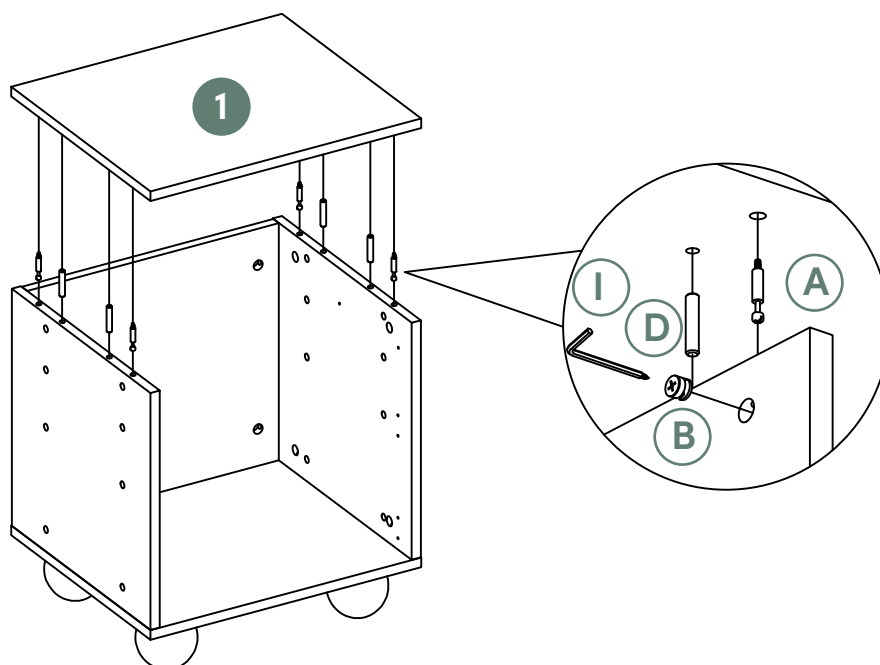


## ASSEMBLY STEPS

## STEP 5


Pull out the inner rail (drawer rail) from the outer rail (the slider casing) that is attached to the cabinet.

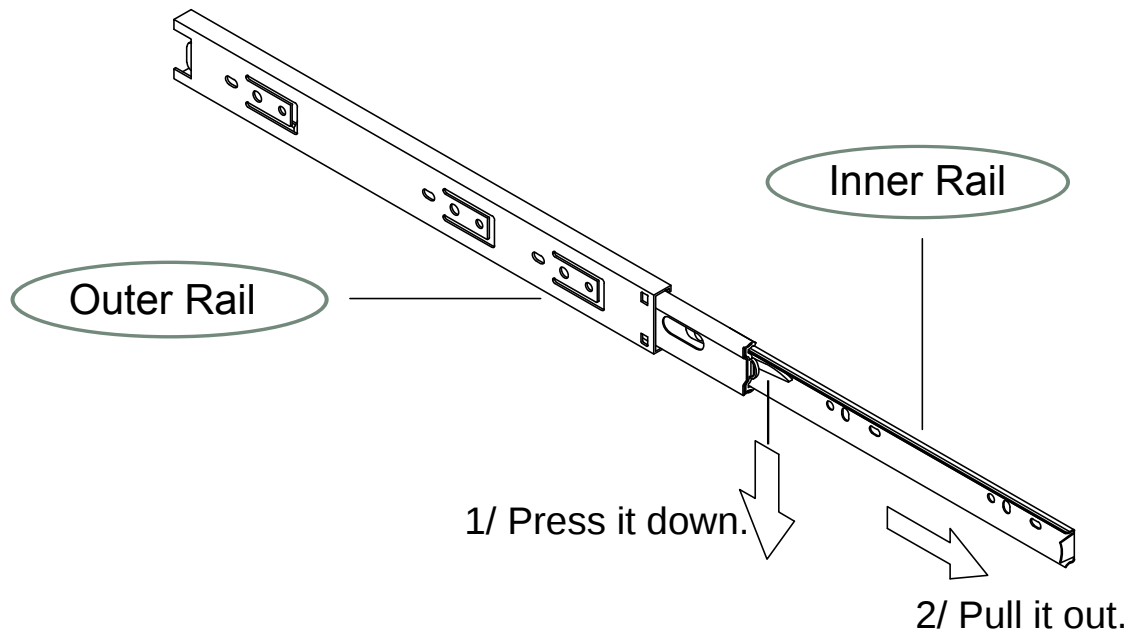

## STEP 6

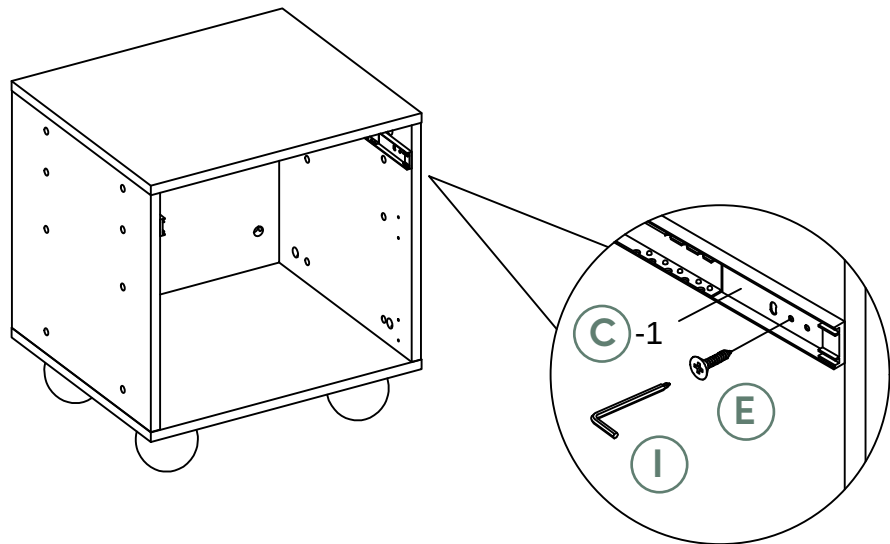


### YOU WILL NEED


|   |                                                                                                |
|---|------------------------------------------------------------------------------------------------|
| C | C-1  C-2 x2 |
| E |  x4         |
| I |  x1         |

## ASSEMBLY STEPS


## STEP 7

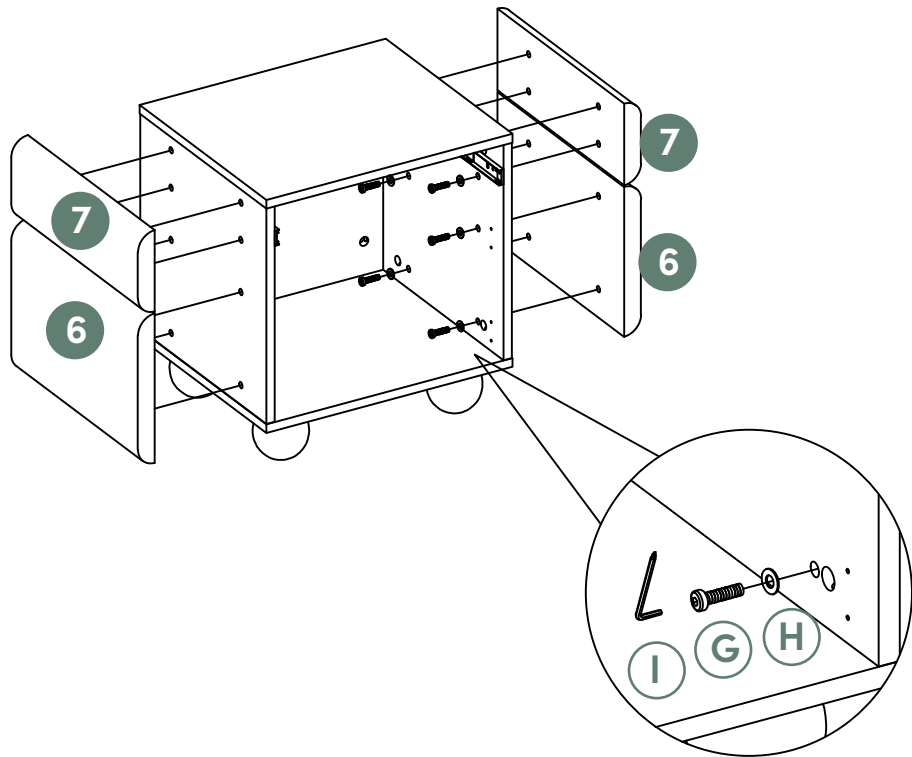



### YOU WILL NEED

|   |                                                                                   |     |
|---|-----------------------------------------------------------------------------------|-----|
| H |  | x16 |
| G |  | x16 |
| I |  | x1  |

## STEP 8

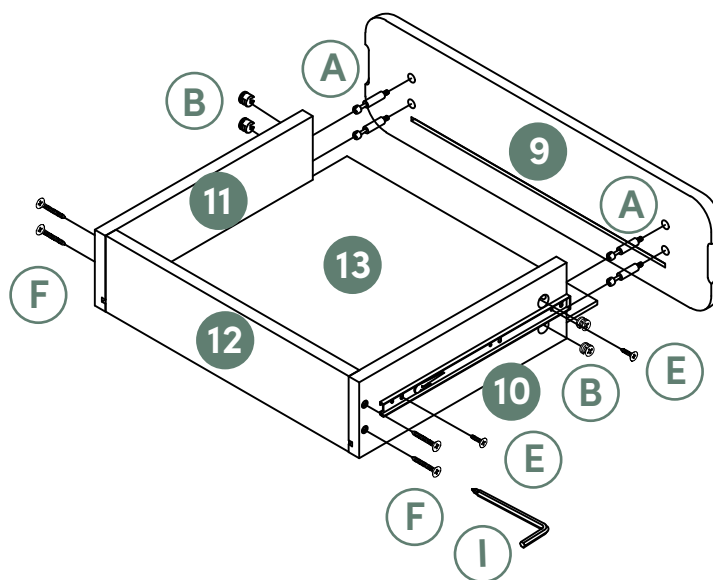


### YOU WILL NEED


|   |                                                                                                                                                                                    |    |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|
| A |                                                                                                 | x4 |
| B |                                                                                                 | x4 |
| C |  C-1<br> C-2 | x2 |
| E |                                                                                                 | x4 |
| F |                                                                                                 | x4 |
| I |                                                                                                 | x1 |

## ASSEMBLY STEPS

STEP 9

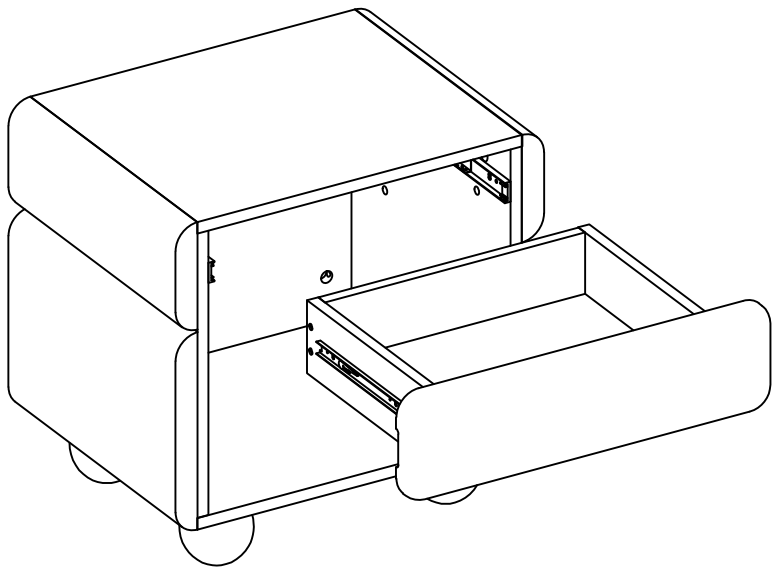

STEP 10

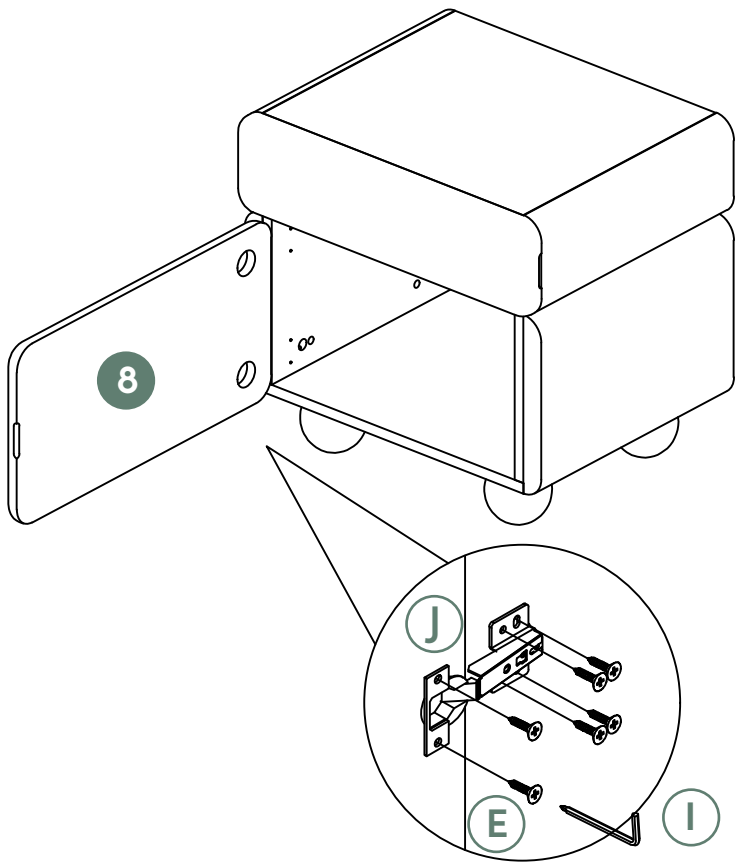


YOU WILL NEED


|   |                                                                                     |     |
|---|-------------------------------------------------------------------------------------|-----|
| J |  | x2  |
| E |  | x12 |
| I |  | x1  |

ASSEMBLY STEPS


## STEP 11

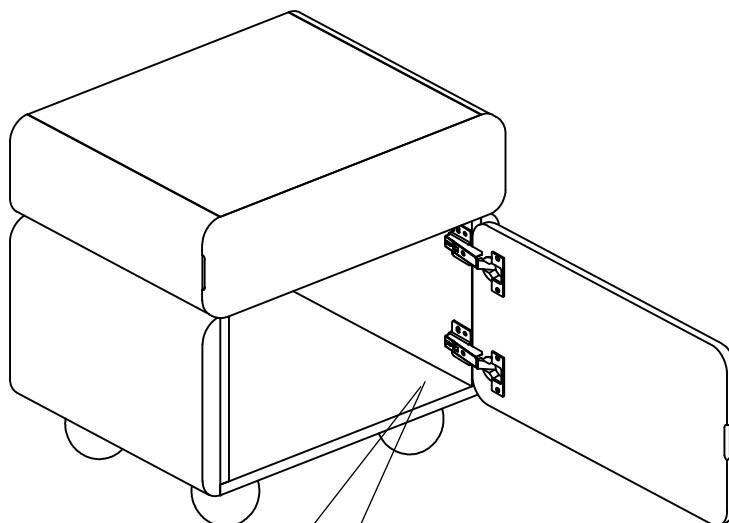

Turn the horizontal adjustment screw clockwise to move the door closer to the cabinet frame and counterclockwise to move it away. This corrects side-to-side alignment.

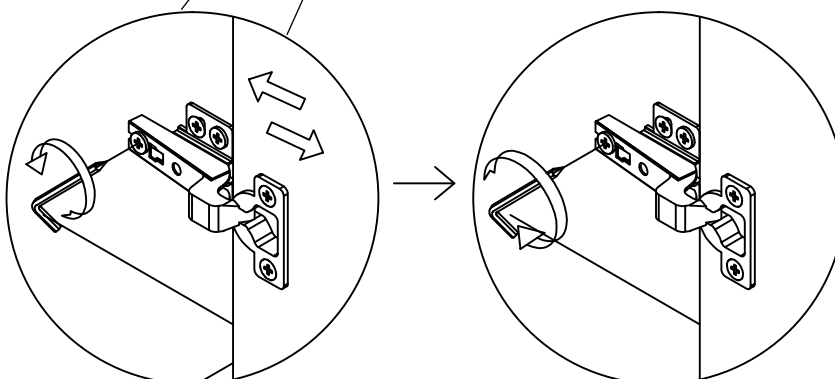



Loosen the vertical adjustment screw slightly, move the door up or down to align it with the other doors, and then retighten the screw.

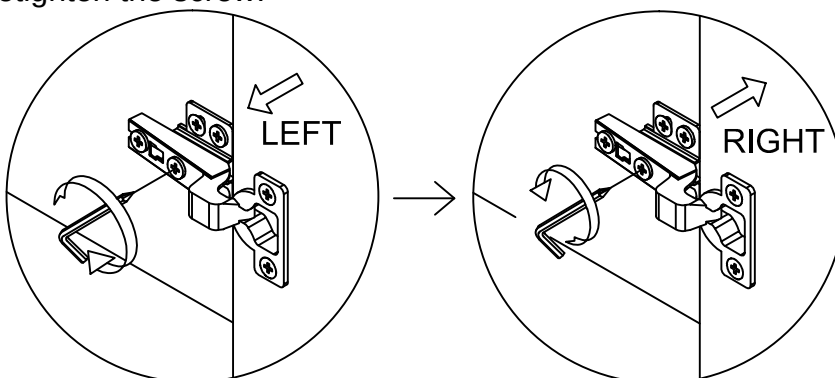


Close the door to check the alignment. Repeat the adjustments as necessary until the door is properly aligned.

## GREAT JOB. YOU'RE DONE!

To move the assembled unit, please lift it up and do not drag to avoid breaking some parts and damaging the floor.

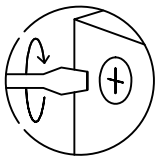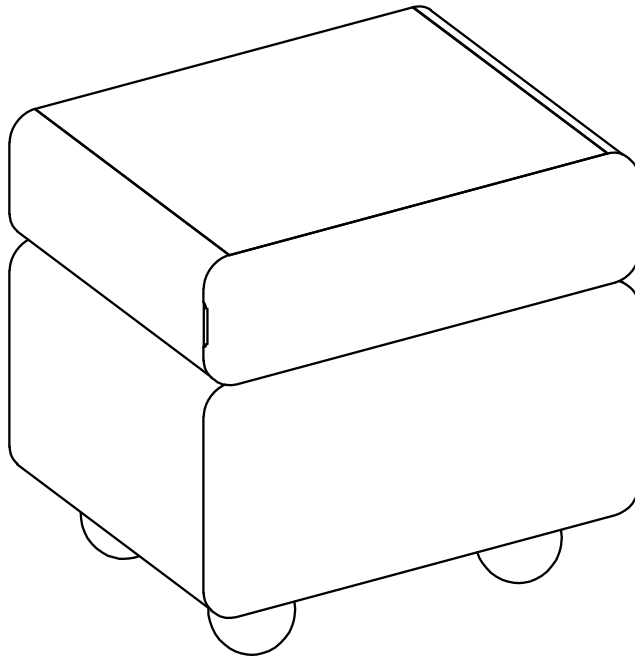

When assembling this Bedside Table, please ensure that all screws are tightened. After one or two months, please recheck and ensure that all screws are still tight.

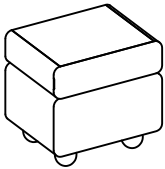

Our Bedside Table can hold weight of up to 20 kg. We don't suggest overloading it beyond its weight capacity.

# CARE INSTRUCTION

Follow these basic steps to protect your furniture.

## Clean Gently

Use a soft, damp cloth and mild soap solution to wipe down surfaces regularly.

## Temperature and Humidity

Keep away from heat sources like stoves and heaters. Avoid direct sunlight and prolonged exposure to high humidity/water. Maintain a consistent room temperature and humidity level.

## Use Furniture Pads

Place furniture pads or felt protectors under the furniture to prevent scratches on floors.

## Avoid Excessive Weight

Don't overload the Bedside Table beyond its weight capacity.

***Again, we thank you for your purchase.  
You've made our day, and we hope you have a great one too!  
Enjoy your furniture!***

For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

# LUXO|Furniture